

## UBay UBay-Ele-RKU

# UBay Universal Remote Control for Element Roku TVs

Model: UBay-Ele-RKU

## 1. INTRODUCTION

This instruction manual provides essential information for the proper use and maintenance of your UBay Universal Remote Control, designed specifically for Element Roku built-in televisions. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

## 2. PACKAGE CONTENTS

- 1 x UBay Universal Remote Control
- *Note: AAA batteries are not included and must be purchased separately.*

## 3. SETUP

The UBay Universal Remote Control is designed for immediate use with compatible Element Roku TVs, requiring no complex programming or pairing. Follow these simple steps to begin:

1. **Install Batteries:** Open the battery compartment on the back of the remote control. Insert two (2) new AAA alkaline batteries, ensuring correct polarity (+/-). Close the battery compartment securely.
2. **Ready for Use:** Once batteries are installed, the remote is ready to operate your Element Roku TV. Point the remote directly at your television.



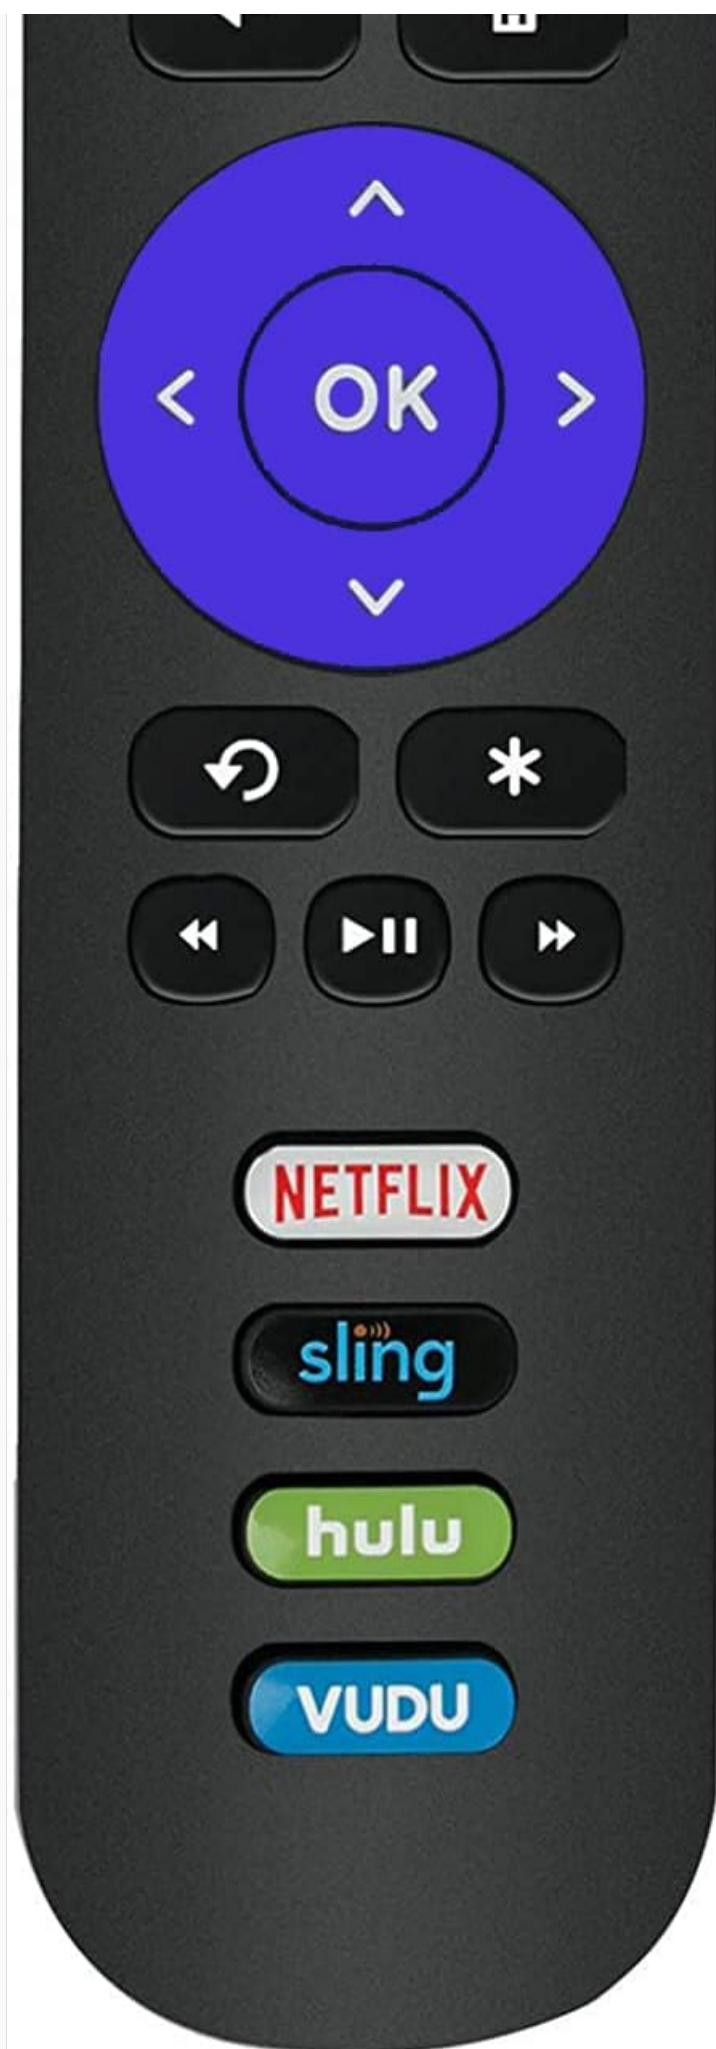


Figure 3.1: Front view of the UBay Universal Remote Control, highlighting the power, navigation, playback, and dedicated streaming service shortcut buttons.

### Compatibility Information:

- This remote is **compatible with all Element TVs that have Roku built-in**
- This remote is **NOT compatible with Roku Stick or Roku Players** that are connected to a TV. It does not feature a pairing button for such devices.

## Not for Roku Stick



## Not for Roku Player Box





Figure 3.2: Visual representation of devices that are not compatible with this remote control, including Roku Sticks and Roku Player Boxes.

## 4. OPERATING INSTRUCTIONS

---

The UBay Universal Remote Control provides intuitive access to your Element Roku TV's functions. Below is a guide to its primary buttons:

- **Power Button ( ):** Turns your TV on or off.
- **Home Button (⌂):** Returns to the Roku home screen.
- **Back Button ( ):** Navigates back to the previous screen or menu.
- **Navigation Pad (Blue Cross with OK):** Use the directional arrows (Up, Down, Left, Right) to navigate menus and select items. Press the **OK** button to confirm a selection.
- **Playback Controls ( ):** Includes Play/Pause, Fast Forward, and Rewind buttons for media control.
- **Volume Control ( ):** Located on the side of the remote, these buttons adjust the TV's volume up or down.
- **Mute Button ( ):** Located on the side of the remote, this button mutes or unmutes the TV's audio.
- **Dedicated Shortcut Buttons:** Quick access buttons for popular streaming channels: **Netflix**, **Sling**, **Hulu**, and **VUDU**.



Figure 4.1: Side view of the UBay Universal Remote Control, illustrating the placement of the volume and mute buttons.

## 5. MAINTENANCE

---

To ensure the longevity and proper functioning of your remote control, please observe the following maintenance guidelines:

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always use new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, aerosols, or harsh chemicals, as these may damage the remote's surface or internal components.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

## 6. TROUBLESHOOTING

If you encounter issues with your UBay Universal Remote Control, please refer to the following common solutions:

- **Remote Not Responding:**
  - Ensure fresh AAA batteries are correctly installed.
  - Verify there are no obstructions between the remote and your Element Roku TV.
  - Confirm the remote is pointed directly at the TV's infrared receiver.
- **Incorrect Functionality:**
  - Double-check that your TV is an Element brand with Roku built-in. This remote is not compatible with external Roku devices (Sticks, Players).
  - If buttons are sticky, gently clean around them with a dry cloth.

## 7. SPECIFICATIONS

| Feature                         | Detail                                                  |
|---------------------------------|---------------------------------------------------------|
| Brand                           | UBay                                                    |
| Model Number                    | UBay-Ele-RKU                                            |
| Product Dimensions              | 6 x 1.5 x 0.6 inches                                    |
| Item Weight                     | 1.76 ounces                                             |
| Power Source                    | 2 x AAA Alkaline Batteries (not included)               |
| Special Feature                 | Universal (for specified Element Roku TVs)              |
| Color                           | Purple (as per product specifications, remote is black) |
| Max Number of Supported Devices | 1                                                       |
| Compatible Devices              | Television (Element Roku built-in TVs)                  |

## 8. WARRANTY AND SUPPORT

For information regarding product warranty or customer support, please refer to the documentation provided at the time of purchase or contact the retailer. Specific warranty details and support contact information are not available in this manual.

