

GODOX 210F

Godox 210F Reversible Leg Light Stand User Manual

Model: 210F

1. INTRODUCTION

1.1 Product Overview

The Godox 210F Reversible Leg Light Stand is a compact and robust support solution designed for various photographic lighting setups. Its reversible leg design allows for a small folded size, making it highly portable for both studio and on-location use. This stand extends to a maximum height of 7 feet (213 cm) and can support equipment weighing up to 4.4 pounds (2 kg).

1.2 Key Features

- Adjustable height from 51 cm (20 inches) to 213 cm (7 feet).
- Standard 1/4-inch screw for compatibility with various lights and studio strobes.
- Constructed from lightweight aluminum with a sleek black finish.
- Maximum load capacity of 2 kg (4.4 lbs).
- Compact folded size for portability, weighing approximately 1.1 kg (2.43 lbs).

1.3 Package Contents

- 1 x Godox 210F Reversible Leg Light Stand

2. SAFETY INFORMATION

- Always ensure the stand is placed on a stable, level surface.
- Do not exceed the maximum load capacity of 2 kg (4.4 lbs).
- Distribute weight evenly when mounting equipment.
- Secure all locking knobs tightly before use.
- Be cautious when extending or collapsing the stand to avoid pinching fingers.
- Keep away from children and pets.
- Avoid using in strong winds or unstable conditions without proper weighting.

3. COMPONENTS

Familiarize yourself with the main parts of your Godox 210F Light Stand.



Image: The Godox 210F light stand shown with its legs fully spread and the center column partially extended, illustrating its ready-to-use configuration.

1. 1/4-inch Mounting Screw: Standard screw for attaching lighting fixtures.

- 2. **Locking Knobs:** Securely fasten stand sections at desired heights.
- 3. **Center Column:** Extendable sections of the stand.
- 4. **Leg Brace:** Connects legs to the center column for stability.
- 5. **Reversible Legs:** Fold upwards for compact storage.
- 6. **Rubber Feet:** Provide grip and protect surfaces.

4. SETUP INSTRUCTIONS

4.1 Unfolding the Light Stand

- 1. Place the folded stand on a flat surface.
- 2. Gently pull the legs outwards until they are fully extended and locked into position.



Image: The Godox 210F light stand with its three legs fully spread out, forming a stable base for operation.

3. Ensure the leg braces are fully spread to provide maximum stability.

4.2 Adjusting Height

1. Loosen the locking knob on the lowest section of the center column.
2. Carefully extend the section to the desired height.
3. Tighten the locking knob firmly to secure the section.

4. Repeat for upper sections as needed.



Image: The Godox 210F light stand extended to a medium height, showing the adjustable center column sections and locking knobs.

4.3 Mounting Equipment

1. Ensure all stand sections are securely locked.
2. Attach your lighting fixture or accessory to the 1/4-inch mounting screw at the top of the stand.
3. Rotate the equipment clockwise until it is firmly seated.
4. Double-check the stability of the entire setup before use.

5. OPERATION GUIDELINES

The Godox 210F is designed for straightforward use.

5.1 Positioning the Stand

- Place the stand in a location where its legs will not be a tripping hazard.
- For optimal stability, ensure the legs are fully spread.
- Consider using sandbags or weights on the legs for added stability, especially with heavier equipment or in outdoor conditions.

5.2 Adjusting Equipment Angle

If your lighting equipment has an adjustable head, use its mechanisms to direct the light as needed. The stand itself provides vertical height adjustment.

6. MAINTENANCE

- **Cleaning:** Wipe the stand with a soft, dry cloth after each use to remove dust and dirt. For stubborn marks, use a slightly damp cloth and mild soap, then dry thoroughly.
- **Lubrication:** Periodically check the locking mechanisms and moving parts. If they become stiff, apply a small amount of silicone-based lubricant. Avoid oil-based lubricants as they can attract dust.
- **Storage:** Collapse the stand completely and store it in a dry, clean environment, preferably in a carrying bag to protect it from scratches and dust.
- **Inspection:** Regularly inspect the stand for any signs of damage, such as bent legs, loose screws, or worn rubber feet. Do not use a damaged stand.



Image: The Godox 210F light stand shown in its compact, folded position, ready for storage or transport.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand is unstable	Legs not fully spread Uneven surface Overloaded No counterweight	Ensure legs are fully extended and locked. Move to a level surface or use shims. Reduce equipment weight; do not exceed 2kg. Use sandbags or weights on legs.
Sections won't extend/retract smoothly	Locking knobs too tight/loose Dirt/debris in column	Adjust locking knobs. Clean and lubricate sections.
Equipment wobbles on top	Equipment not securely mounted Stand sections not locked	Ensure equipment is tightly screwed onto the 1/4-inch stud. Tighten all locking knobs.

8. SPECIFICATIONS

Feature	Detail
Model	Godox 210F
Material	Aluminum Alloy
Maximum Height	213 cm (7 feet)
Minimum Height	51 cm (20 inches)
Folded Length	Approximately 50 cm (19.69 inches)
Load Capacity	2 kg (4.4 lbs)
Mounting Stud	1/4-inch
Item Weight	1.1 kg (2.43 lbs)
Product Dimensions (Folded)	19.69 x 2.36 x 1.97 inches
Manufacturer	Godox
Date First Available	July 25, 2020

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Godox website or contact your authorized dealer. Keep your purchase receipt as proof of purchase.

