



[Manuals.plus](#) /

- › [Aroma Season](#) /
- › Aroma Season Heated Gloves HG-520 User Manual

Aroma Season HG-520

Aroma Season Heated Gloves HG-520 User Manual

Model: HG-520

INTRODUCTION

Thank you for choosing Aroma Season Heated Gloves. These gloves are designed to provide warmth and comfort in cold conditions, featuring rechargeable batteries and multiple heat settings. Please read this manual thoroughly before using your gloves to ensure proper operation and maintenance.



Image: A man wearing the gray Aroma Season Heated Gloves, bringing his hands to his face, demonstrating their use in cold weather. The gloves feature a subtle heating indicator button on the back of each hand.

PACKAGE CONTENTS

- 1 Pair of Aroma Season Heated Gloves
- 2 Rechargeable Lithium Polymer Batteries (3.7V 6000mAh each)
- 1 USB Charging Cable
- 1 User Manual

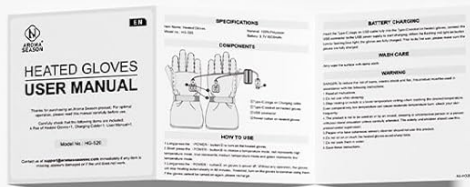


Image: An overview of the Aroma Season Heated Gloves product box, a pair of gloves, a USB charging cable, and the user manual, illustrating all items included in the package.

SETUP AND CHARGING

Before first use, fully charge the batteries. It is recommended to charge both batteries simultaneously.

1. Locate the battery pockets inside the cuffs of each glove.
2. Connect the charging cable to the battery port.
3. Plug the USB charging cable into a compatible USB power adapter (not included) or a computer USB port.
4. The indicator light on the battery will show charging status (e.g., red for charging, green for fully charged).
5. Once fully charged, disconnect the batteries and insert them into the battery pockets, ensuring a secure connection to the glove's internal wiring.

Note: The gloves come with a small shelf charge. For optimal performance and battery longevity, fully charge before initial use.

OPERATING INSTRUCTIONS

Powering On/Off and Adjusting Heat Levels

Each glove has a power button on the back of the hand to control heating.

1. **To Power On:** Press and hold the power button for approximately 3 seconds until the indicator light illuminates. The gloves will typically start on the highest heat setting (Red light).
2. **To Adjust Heat Level:** Short press the power button to cycle through the heat settings:
 - **Red Light:** High Heat (50°C-55°C / 122°F-131°F, approx. 6-7 hours usage)
 - **Orange Light:** Medium Heat (45°C-50°C / 113°F-122°F, approx. 8-9 hours usage)
 - **Green Light:** Low Heat (40°C-45°C / 104°F-113°F, approx. 11-12 hours usage)
3. **To Power Off:** Press and hold the power button for approximately 3 seconds until the indicator light turns off.



The image shows a man in a winter jacket and heated gloves. A visual guide overlay on the right side of the image provides the following information:

3 Temperature Levels 3 Temperaturstufen

Temperature Range (Celsius)	Temperature Range (Fahrenheit)	Usage Time
40°C-45°C	104°F-113°F	11-12 h
45°C-50°C	113°F-122°F	8-9 h
50°C-55°C	122°F-131°F	6-7 h

Each temperature level is associated with a specific color-coded button: Green for Low Heat (11-12 h), Blue for Medium Heat (8-9 h), and Red for High Heat (6-7 h). Each button features the 'N' logo and the text 'LONG PRESS TO START'.

Image: A visual guide showing the three temperature levels (Red for High, Orange for Medium, Green for Low) with corresponding temperature ranges in Celsius and Fahrenheit, and approximate usage times for each setting.

Touch Screen Functionality

The fingertips of these gloves are equipped with special conductive material, allowing you to operate touch screen devices without removing your gloves.



Image: A person wearing the heated gloves interacting with a smartphone, demonstrating the touch screen compatibility of the glove fingertips. Smaller insets show interaction with a car touch screen and a tablet.

MAINTENANCE AND CARE

Cleaning Instructions

- Always remove batteries before cleaning.
- Spot clean with a damp cloth and mild detergent.
- Do not machine wash, tumble dry, or iron the gloves, as this can damage the heating elements and waterproof coating.
- Allow gloves to air dry completely before reinserting batteries or storing.

Storage

- Store gloves and batteries in a cool, dry place when not in use.
- For long-term storage, charge batteries to about 50% capacity every 3-6 months to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Gloves not heating	<ul style="list-style-type: none">◦ Battery not charged◦ Battery not properly connected◦ Glove not powered on	<ul style="list-style-type: none">◦ Charge batteries fully.◦ Ensure battery is securely plugged into the glove's connector.◦ Press and hold the power button for 3 seconds to turn on.
Short battery life	<ul style="list-style-type: none">◦ Using high heat setting◦ Batteries not fully charged◦ Aging batteries	<ul style="list-style-type: none">◦ Lower the heat setting for extended use.◦ Ensure batteries are fully charged before each use.◦ Consider replacing batteries if they no longer hold a charge.
Touch screen not responding	<ul style="list-style-type: none">◦ Improper contact with screen◦ Screen protector interference	<ul style="list-style-type: none">◦ Ensure full contact of the conductive fingertip with the screen.◦ Some thick screen protectors may reduce sensitivity.

SPECIFICATIONS

- **Model:** HG-520
- **Battery:** 3.7V 6000mAh Lithium Polymer (2 included)
- **Heat Levels:** 3 (Low, Medium, High)
- **Material:** Hipora (Water/Wind/Snow Resistant), Double-Layer Cotton, Velvet Fabric, Faux Leather
- **Features:** Breathable, Thermal, Waterproof, Touch Screen Compatible, Adjustable Wristband, Anti-lost Buckle
- **Dimensions:** Approximately 30.48 x 15.24 x 5.08 cm (L x W x H)
- **Weight:** Approximately 581 g (pair with batteries)
- **Hand Orientation:** Ambidextrous
- **Age Range:** Adult



Image: A cross-section diagram of the glove's construction, illustrating its five layers: 1) Waterproof Fabric, 2) Double-Layer Cotton, 3) Metal Layer (heating element), 4) Velvet Fabric, and 5) Faux Leather palm.

Simple, discreet design

Schlichtes, unauffälliges Design



Image: An exploded view of the glove highlighting key design features such as the anti-lost buckle, breathable polyester fabric, adjustable wristband, warm lining, and windproof buckle at the cuff.

Sizing Information

To ensure a proper fit, please refer to the sizing chart below:

Size	S/M (inch)	L/XL (inch)
F Length (middle finger)	2.6–3.4	3.2–3.8
W Width (palm)	2.7–3.2	3.1–3.6

Size	S/M (inch)	L/XL (inch)
F Length middle finger	2.6–3.4	3.2–3.8
W width palm	2.7–3.2	3.1–3.6



Image: A visual guide for measuring hand size, showing how to measure middle finger length (F) and palm width (W), accompanied by a table with S/M and L/XL size ranges in inches.

WARRANTY AND SUPPORT

Aroma Season provides a **12-month quality warranty** for these heated gloves. If you encounter any issues or have questions regarding your product, please contact Aroma Season customer service for assistance.

Customer service representatives are available to answer inquiries within 24 hours.