

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Hotechs](#) /

> [Hotechs W-6 MP3/MP4 Player User Manual](#)

Hotechs W-6

Hotechs W-6 MP3/MP4 Player User Manual

Model: W-6

1. INTRODUCTION

Thank you for choosing the Hotechs W-6 MP3/MP4 Player. This device is designed to provide a portable and versatile media experience, allowing you to enjoy music, videos, photos, and e-books on the go. It features a 1.8-inch LCD screen, 32GB internal memory (expandable up to 128GB via Micro TF card), FM radio, voice recording, and Hi-Fi lossless sound quality. Please read this manual carefully to ensure proper use and optimal performance of your player.



Figure 1: Hotechs W-6 MP3/MP4 Player

2. PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all items are present:

- 1 x Hotechs W-6 MP3/MP4 Player
- 1 x User Manual (this document)
- 1 x USB Cable
- 1 x Earphone
- 1 x 32GB Memory SD Card

3. SETUP

3.1 Charging the Player

Before first use, fully charge the player.

1. Connect the small end of the included USB cable to the Mini USB port on the player.
2. Connect the standard USB end of the cable to a USB power adapter (not included) or a computer's

USB port.

3. The player will indicate charging status on the screen. A full charge typically takes 1-2 hours.
4. The player offers up to 10 hours of playback on a full charge.



Figure 2: USB Port for Charging and Data Transfer

3.2 Inserting a Micro TF Card (Optional)

The player comes with 32GB of internal memory. If you wish to expand storage, you can insert a Micro TF card (up to 128GB, not included). A 32GB SD card is included in the package, which can be used or replaced with a larger capacity card.

1. Locate the Micro TF card slot on the side of the player.
2. Gently insert the Micro TF card into the slot until it clicks into place.
3. To remove, push the card in slightly until it springs out.

3.3 Connecting to a Computer and Transferring Files

You can transfer music, videos, photos, and e-books from your computer to the player.

1. Connect the player to your computer using the provided USB cable.
2. The player will appear as a removable disk drive (or two drives if an SD card is inserted) on your computer (e.g., "My Computer" on Windows, "Finder" on Mac).
3. Drag and drop your desired files (MP3, AMV, JPEG/BMP, TXT) into the appropriate folders on the player's internal storage or the Micro TF card. You can create new folders to organize your content.
4. Once files are transferred, safely eject the removable disk from your computer before disconnecting the USB cable.

The player is compatible with Windows 7/8/8.1/10/XP/Vista/2000 and Mac OS 10.

4. OPERATING INSTRUCTIONS

4.1 Basic Controls

The player features a central control pad with several buttons:

- **MENU:** Accesses the main menu or returns to the previous screen.
- **Play/Pause/Confirm:** Central button for playing/pausing media and confirming selections.
- **Previous/Rewind:** Left button for navigating back or rewinding.
- **Next/Fast Forward:** Right button for navigating forward or fast forwarding.
- **VOL (Volume):** Down button for volume control.
- **Up:** Up button for navigation.

20 hrs Battery

Extra long battery life
up to 20hrs playback for music enjoyment



Figure 3: Player Control Buttons

4.2 Power On/Off

To power on, press and hold the power button (usually located on the side or top) until the screen lights up. To power off, press and hold the power button until the device shuts down.

4.3 Playing Music (MP3)

1. From the main menu, select "Music".
2. Navigate through your folders and files using the navigation buttons.
3. Press the central Play/Pause button to select and play a song.
4. Use the Left/Right buttons to skip tracks.
5. Use the VOL button to adjust the volume.

Hi-Fi Lossless Sound Quality

Born for good music, reproduce The pure sound and deliver the best music to consumers.



Figure 4: Hi-Fi Lossless Sound Quality

4.4 FM Radio

1. Ensure earphones are connected as they act as the antenna.
2. From the main menu, select "FM Radio".
3. You can use "Auto Tune" to scan and save available stations or "Manual Tune" to find stations manually.
4. Use the navigation buttons to switch between saved stations or adjust frequency.

FM RADIO

This function to the usual leisure when can listen to the radio, news, music



Figure 5: FM Radio Functionality

4.5 Voice Recorder

1. From the main menu, select "Voice Record".
2. Press the Play/Pause button to start recording.
3. Press it again to pause/stop recording.
4. Recordings are saved in MP3/WAV format.

4.6 E-Book Reader

1. From the main menu, select "E-Book".
2. Navigate to your TXT format e-book files.
3. Press the Play/Pause button to open and read.
4. Use navigation buttons to scroll through pages.

4.7 Video Playback (AMV) and Photo Viewer (JPEG/BMP)

The player supports AMV video format (240*320 resolution) and JPEG/BMP photo formats (240*320 resolution).

1. From the main menu, select "Video" or "Picture".
2. Navigate to your desired file and press the Play/Pause button to view.



Figure 6: Multi-media Playback Capabilities

- Built-in Storage
32 GB
- Expandable Memory
64 GB

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the player's screen and body. Avoid using liquid cleaners or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the player regularly, even if not in use for extended periods.
- **Storage:** Store the player in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Impacts:** Protect the player from drops and impacts, which can damage internal components or the screen.

6. TROUBLESHOOTING

Player Not Turning On

- Ensure the battery is charged. Connect the player to a power source and try again after a few minutes.
- If the player is unresponsive, try performing a soft reset by pressing and holding the power button for

10-15 seconds.

Cannot Transfer Files to Player

- Verify the USB cable is securely connected to both the player and the computer.
- Ensure the player is recognized as a removable disk drive by your computer.
- Check if the player's internal storage or the Micro TF card is full. Delete unnecessary files to free up space.
- Try connecting to a different USB port on your computer or a different computer.

No Sound from Earphones

- Ensure the earphones are fully plugged into the headphone jack.
- Check the volume level on the player.
- Test with a different pair of earphones to rule out faulty earphones.
- Ensure the audio file format is supported (MP3).

FM Radio Not Receiving Signal

- Ensure earphones are connected, as they function as the antenna.
- Try moving to an open area or adjusting your position for better reception.
- Perform an "Auto Tune" scan to find available stations.

7. SPECIFICATIONS

Feature	Specification
Model	W-6
Screen	1.8 inch TFT LCD
Internal Memory	32 GB
Expandable Memory	Up to 128GB Micro TF Card (not included)
Audio Format Support	MP3
Video Format Support	AMV (240*320 resolution)
Image Format Support	JPEG/BMP (240*320 resolution)
E-Book Format Support	TXT
Voice Recorder Format	MP3 / WAV
FM Receiving Frequency	87.5 MHz ~ 108 MHz
Battery Capacity	3.7 V / 200 mAh
Battery Life (Audio)	Up to 10 hours
Charging Time	1-2 hours
Power Supply	DC 5V Micro USB interface
Dimensions	10.6 x 5 x 0.9 cm (approx.)
Net Weight	Approx. 76 g

Feature	Specification
Compatibility	Windows 7/8/8.1/10/XP/Vista/2000, Mac OS 10

8. WARRANTY AND SUPPORT

The Hotechs W-6 MP3/MP4 Player comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures your product functions as intended under normal use. If you encounter any issues or have questions regarding your product, please contact our professional after-sales service team. We are committed to providing quick responses and satisfactory solutions. For support, please refer to the contact information provided on the product packaging or the retailer's website where you purchased the device.