

## MasterPRO BGMP-9148

# MasterPro Smokeless Grill & Air Fryer User Manual

Model: BGMP-9148

## 1. INTRODUCTION

Thank you for choosing the MasterPro Smokeless Grill & Air Fryer. This innovative kitchen appliance combines the functionality of an electric grill, air fryer, oven, roaster, and dehydrator, allowing you to prepare a wide variety of delicious meals with ease. Its advanced Cyclonic Air Technology ensures even cooking and perfect results every time. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance.

Please read this manual thoroughly before first use and keep it for future reference.

## 2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, level, heat-resistant surface.
- This appliance is BPA-free and PFOA-free.

### 3. PRODUCT OVERVIEW AND COMPONENTS

---

The MasterPro Smokeless Grill & Air Fryer is designed for versatile cooking. It features an intuitive LED touchscreen for easy operation.

#### **Included Accessories:**

- Roasting Plate (Grill Plate)
- Thermometer (Smart Temperature Probe)
- Cooking Basket
- Splash Guard



Figure 3.1: MasterPro Smokeless Grill & Air Fryer with its cooking pot and a smartphone showing a recipe app.



## 5 Funciones en un único robot

Descubre nuevos sabores y maneras de cocinar gracias a las 5 funciones que tiene nuestro robot culinario One Touch.

Figure 3.2: The appliance offers 5 functions: Grill, Air Fry, Roast, Bake, and Dehydrate.





Figure 3.3: Detailed view of the LED Touchscreen control panel.

## 4. SETUP

### 4.1 Unpacking

Carefully remove all contents from the packaging. Remove any protective film or stickers from the appliance and accessories. Retain the packaging for future storage or transport.

### 4.2 Initial Cleaning

Before first use, wash the removable cooking basket, roasting plate, and splash guard in warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth. Do not immerse the main unit or the temperature probe in water.

### 4.3 Placement

Place the appliance on a stable, level, heat-resistant surface, away from walls and other appliances to allow for proper air circulation. Ensure there is at least 15 cm (6 inches) of clear space on all sides of the unit.

### 4.4 Assembly

Insert the splash guard into the main unit. Place the cooking basket or roasting plate into the main unit, ensuring it is securely seated. The appliance is now ready for use.



Figure 4.1: Appliance set up in a kitchen environment.

## 5. OPERATING INSTRUCTIONS

### 5.1 Control Panel Overview

The appliance features an intuitive LED touchscreen. Use the touch buttons to select functions, adjust temperature, and set the timer.

### 5.2 Cooking Functions

The MasterPro Smokeless Grill & Air Fryer offers five primary cooking functions:

- **Grill:** Achieve authentic grill marks and flavors indoors without the smoke. Use the roasting plate for best results.
- **Air Fry:** Cook with little to no oil for crispy results. Ideal for fries, chicken wings, and more. Use the cooking basket.



- **Bake:** Perfect for baking cakes, pastries, and other desserts.
- **Roast:** Ideal for roasting meats, vegetables, and poultry.
- **Dehydrate:** Prepare dried fruits, vegetables, and jerky.

### 5.3 Cyclonic Air Technology

This technology circulates hot air up to 260°C around your food, ensuring even cooking and browning. This results in perfectly cooked food with a crispy exterior and tender interior.



## Tecnología Cyclonic Air

Esta tecnología calienta y circula el aire a la temperatura justa para cada momento, logrando que se cocinen los alimentos de forma uniforme y dejándolos al punto exacto de cocción.

Figure 5.1: Cyclonic Air Technology ensures even cooking.

### 5.4 Smart Temperature Probe

The included smart temperature probe allows you to monitor the internal temperature of your food for precise cooking. Insert the probe into the thickest part of the food, avoiding bones. Connect the probe to the designated port on the appliance. The display will show the current internal temperature, allowing you to cook to your desired doneness.



## Sonda térmica inteligente

Con nuestra Smokeless Grill y su sonda inteligente con temperatura regulable tendrás tus alimentos perfectamente cocinados y con un 75% menos de grasa.

Figure 5.2: Using the smart temperature probe for accurate cooking.

### 5.5 General Cooking Tips

- **Preheating:** For best results, preheat the appliance for 5-10 minutes before adding food.
- **Oil Usage:** For air frying, a small amount of oil (1-2 tablespoons) can enhance crispiness, but it is not always necessary.
- **Shaking/Flipping:** For even cooking, especially with air frying, shake the basket or flip food halfway through the cooking process.
- **Overfilling:** Do not overfill the basket or roasting plate, as this can hinder air circulation and lead to uneven cooking.

## 6. CARE AND MAINTENANCE

### 6.1 Cleaning

Always unplug the appliance and allow it to cool completely before cleaning.

- **Removable Parts:** The cooking basket, roasting plate, and splash guard are dishwasher safe for easy



cleaning.

- **Temperature Probe:** Hand wash the temperature probe with warm, soapy water. Do not immerse it in water or place it in the dishwasher.
- **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads.
- **Interior:** Clean the interior of the appliance with a damp cloth after each use. For stubborn residue, use a non-abrasive sponge and warm, soapy water.

### 6.2 Storage

Ensure the appliance is clean and dry before storing. Store it in a cool, dry place, preferably in its original packaging, away from direct sunlight and moisture.

## 7. TROUBLESHOOTING

If you encounter any issues with your MasterPro Smokeless Grill & Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker. If the issue persists, contact customer support.
Food is not cooking evenly.	Basket/plate is overfilled; food not shaken/flipped; incorrect temperature/time.	Do not overfill. Shake the basket or flip food halfway through cooking. Adjust temperature and time as needed.
Excessive smoke during grilling.	Grease buildup; high-fat food.	Ensure the splash guard is properly installed. Clean the appliance thoroughly after each use. For very fatty foods, some smoke is normal.
Temperature probe not reading correctly.	Probe not fully inserted; probe damaged.	Ensure the probe is fully inserted into the food and the port. Avoid bones. If damaged, contact customer support for a replacement.

## 8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	MasterPRO
Model Number	BGMP-9148
Color	Black
Product Dimensions	49 x 36 x 34 cm (approx. 47T x 35B x 31H cm)
Capacity	5.6 Liters

Feature	Specification
Power	1760 Watts
Voltage	1760 Volts (Please verify with product label for actual operating voltage)
Material	Compound
Automatic Shut-off	Yes
Special Feature	Programmable
Item Weight	7 Kilograms




## 9. WARRANTY AND CUSTOMER SUPPORT

MasterPro products are manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official MasterPro website. If you have any questions, require technical assistance, or need to report a problem, please contact MasterPro customer support.

Additionally, you can explore the Club MasterPro mobile app for a complete recipe book and cooking tips created by renowned chefs, enhancing your culinary experience with your new appliance.

For further assistance, please visit the [MasterPRO Store on Amazon](#).

### Related Documents - BGMP-9148

	<p><a href="#">MasterPRO Smokeless Grill BGMP-9111 User Manual and Operating Guide</a></p> <p>Comprehensive user manual for the MasterPRO Smokeless Grill BGMP-9111, covering operation, safety precautions, cleaning, storage, technical specifications, and troubleshooting.</p>
	<p><a href="#">MasterPRO Air Fryer Instruction Manual</a></p> <p>Comprehensive instruction manual for the MasterPRO Air Fryer (Model BGMP-9513-01), covering setup, operation, cleaning, safety, and warranty information.</p>
	<p><a href="#">MasterPRO Air Fryer Instruction Manual - BGMP-9456-PL</a></p> <p>Comprehensive instruction manual for the MasterPRO Air Fryer, model BGMP-9456-PL, by Bergner Europe S.L. Learn about features, operation, safety, cleaning, and troubleshooting for your kitchen appliance.</p>

<div data-bbox="124 107 303 344">The image shows a white MasterPRO Dual Air Fryer. It has a digital display at the top showing '888' and '888'. Below the display are several control buttons. The unit has two large air fryer baskets on the front.<p>INSTRUCCION MANUAL - MANUEL DE INSTRUCTIONS OPERACIÓNALE INSTRUCCIONES - MANUEL DE INSTRUCTIONS MANUEL E INSTRUCTIONS - MANUAL DE INSTRUÇÕES</p></div>	<p><a href="#">MasterPRO Dual Air Fryer Instruction Manual</a></p> <p>User manual for the MasterPRO Dual Air Fryer (Model BGMP-9178-WH) by Bergner Europe S.L. Provides detailed instructions on operation, safety, cleaning, troubleshooting, and warranty for this kitchen appliance.</p>
<div data-bbox="124 689 303 927">The image shows a black MasterPRO Dual Air Fryer. It has a digital display at the top showing '888' and '888'. Below the display are several control buttons. The unit has two large air fryer baskets on the front.<p>INSTRUCCION MANUAL - MANUEL DE INSTRUCTIONS OPERACIÓNALE INSTRUCCIONES - MANUEL DE INSTRUCTIONS MANUEL E INSTRUCTIONS - MANUAL DE INSTRUÇÕES</p></div>	<p><a href="#">MasterPRO Dual Air Fryer Instruction Manual</a></p> <p>User manual for the MasterPRO Dual Air Fryer (Model BGMP-9178-BK), providing comprehensive instructions, safety guidelines, cooking tips, troubleshooting, and warranty information for optimal use.</p>
<div data-bbox="124 1003 303 1240">The image shows a black MasterPRO Dual Air Fryer. It has a digital display at the top showing '888' and '888'. Below the display are several control buttons. The unit has two large air fryer baskets on the front.<p>INSTRUCCION MANUAL - MANUEL DE INSTRUCTIONS OPERACIÓNALE INSTRUCCIONES - MANUEL DE INSTRUCTIONS MANUEL E INSTRUCTIONS - MANUAL DE INSTRUÇÕES</p></div>	<p><a href="#">MasterPRO Dual Air Fryer: Instruction Manual &amp; User Guide</a></p> <p>Explore the MasterPRO Dual Air Fryer (BGMP-9178-BK) with this comprehensive instruction manual. Learn about safe operation, cooking tips, troubleshooting, and maintenance for healthy, efficient meal preparation.</p>