

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Tommy Hilfiger](#) /
- › [Tommy Hilfiger Women's Quartz Watch Model 1782439 Instruction Manual](#)

## Tommy Hilfiger 1782439

# Tommy Hilfiger Women's Quartz Watch Model 1782439 Instruction Manual

This manual provides essential information for the setup, operation, and maintenance of your Tommy Hilfiger Women's Quartz Watch.

## 1. PRODUCT OVERVIEW

The Tommy Hilfiger Women's Quartz Watch, Model 1782439, is an analog timepiece designed for everyday wear. It features a precise quartz movement and a durable stainless steel construction.

### 1.1 Components

- **Crown:** Used for setting the time.
- **Dial:** Displays the time with hour, minute, and second hands.
- **Mesh Bracelet:** Adjustable stainless steel band.
- **Sliding Clasp:** Secures the watch on your wrist.
- **Case Back:** Contains model and water resistance information.





Figure 1: Front view of the Tommy Hilfiger Women's Quartz Watch, Model 1782439. This image shows the watch face with the brand logo, hour markers, and hands, along with the stainless steel mesh bracelet and clasp.

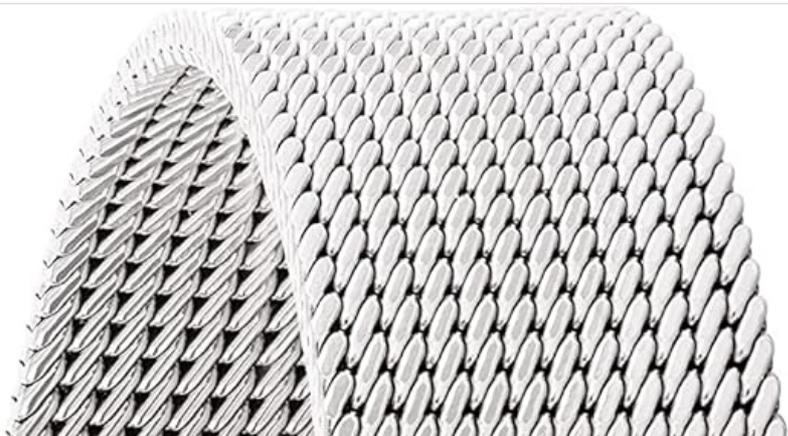




Figure 2: Back view of the watch, displaying the Tommy Hilfiger logo, "100% STAINLESS STEEL", and water resistance markings on the case back.

## 2. SETUP

## 2.1 Setting the Time

1. Pull the crown out to the first position.
2. Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into its original position to start the watch.

## 2.2 Adjusting the Mesh Bracelet

The mesh bracelet features a sliding clasp for easy adjustment to fit various wrist sizes. No special tools are typically required.

1. Locate the small lever on the clasp.
2. Gently lift the lever to unlock the clasp mechanism.
3. Slide the clasp along the mesh band to the desired position for a comfortable fit.
4. Press the lever back down firmly until it clicks into place, securing the clasp.



Figure 3: Side view of the watch, highlighting the crown for time adjustment and the sliding clasp mechanism on the mesh bracelet.

### 3. OPERATING INSTRUCTIONS

#### 3.1 Basic Timekeeping

Your watch is powered by a quartz movement, ensuring accurate timekeeping. Once the time is set, the

watch will operate continuously until the battery requires replacement.

### 3.2 Water Resistance

This watch is water resistant up to 3 ATM (30 meters). This means it is suitable for everyday use and can withstand splashes or brief immersion in water, such as hand washing or light rain. It is **not suitable** for showering, swimming, diving, or any water sports where it would be submerged for extended periods or subjected to high water pressure.

*Important:* Do not operate the crown while the watch is wet or submerged, as this can compromise the water resistance.

## 4. MAINTENANCE

---

### 4.1 Cleaning Your Watch

To maintain the appearance of your watch, wipe the case and bracelet regularly with a soft, dry cloth. For stainless steel components, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish.

### 4.2 Battery Replacement

The watch is powered by a standard watch battery. When the watch stops or the second hand begins to skip, it indicates that the battery needs to be replaced. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

### 4.3 Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight and extreme temperatures. The original watch box (Figure 4) provides excellent protection.



Figure 4: The Tommy Hilfiger watch box, suitable for safe storage.

## 5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch is not running.	Battery is depleted.	Replace the battery (recommended by a professional).
Time is incorrect.	Crown is not fully pushed in, or time was set incorrectly.	Ensure the crown is fully pushed in. Reset the time as per Section 2.1.
Bracelet is too loose/tight.	Clasp needs adjustment.	Adjust the sliding clasp as per Section 2.2.
Condensation inside the watch.	Exposure to extreme temperature changes or water ingress.	Seek professional service immediately to prevent damage. Avoid further exposure to moisture.

## 6. SPECIFICATIONS

Feature	Detail
Model Number	1782439
Movement	Quartz
Display Type	Analog
Case Material	Stainless Steel
Case Diameter	34 mm
Case Thickness	7.25 mm
Dial Window Material	Scratch Resistant Mineral Crystal
Band Material	Stainless Steel Mesh
Band Width	16 mm
Clasp Type	Sliding Clasp
Water Resistance	3 ATM (30 meters)
Power Source	Battery Powered
Weight	141 grams (shipping weight)

## 7. WARRANTY INFORMATION

Tommy Hilfiger watches typically come with a limited warranty covering manufacturing defects. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of coverage. Keep your proof of purchase for warranty claims.

## 8. CUSTOMER SUPPORT

---

For further assistance, service, or inquiries regarding your Tommy Hilfiger watch, please visit the official Tommy Hilfiger website or contact their customer service department. You can also visit the [Tommy Hilfiger Store on Amazon](#) for more product information.