

DADA-TECH DT-KE9

DADA-TECH DT-KE9 Kids Electric Toothbrush User Manual

Model: DT-KE9

1. PRODUCT OVERVIEW

The DADA-TECH DT-KE9 Kids Electric Toothbrush is designed to provide effective and engaging oral care for children aged 3 and above. It features sonic technology, multiple brushing modes, and a built-in timer to promote healthy brushing habits.

Key Features:

- **Safe Brushing:** Equipped with soft, food-grade brush heads and an anti-slip silicone handle for optimal comfort and reach.
- **Engaging Design:** Cute Shiba Inu dog design and three brushing modes make brushing enjoyable for children.
- **Brushing Habits:** Features a 2-minute automatic timer and 30-second pulse reminders to guide children through dentist-recommended brushing routines.
- **Multiple Modes:** Three built-in modes (Clean, White, Massage) with memory function, tailored for children's oral and dental needs.
- **Long Battery Life:** Durable Li-battery provides up to 30 days of use on a full charge.
- **Waterproof Design:** IPX7 waterproof rating allows for safe use in the bathtub or shower.
- **BPA-Free:** Constructed from safe, BPA-free materials.



Image: The DADA-TECH DT-KE9 Kids Electric Toothbrush, showcasing its design.

Your browser does not support the video tag.

Video: An overview of the DADA-TECH Kids Electric Toothbrush, highlighting its features and design.

2. SETUP

2.1 Charging the Toothbrush

Before first use, fully charge the toothbrush. The toothbrush is equipped with a durable Li-battery that lasts approximately 30 days on a full charge.

1. Locate the USB charging port at the bottom of the toothbrush.
2. Connect the provided USB charging cable to the toothbrush and to a compatible USB power source (e.g., power bank, 110-240V adapter, phone charger, PC USB port).
3. The charging indicator light will illuminate to show charging is in progress. Once fully charged, the light will change or turn off depending on the model.

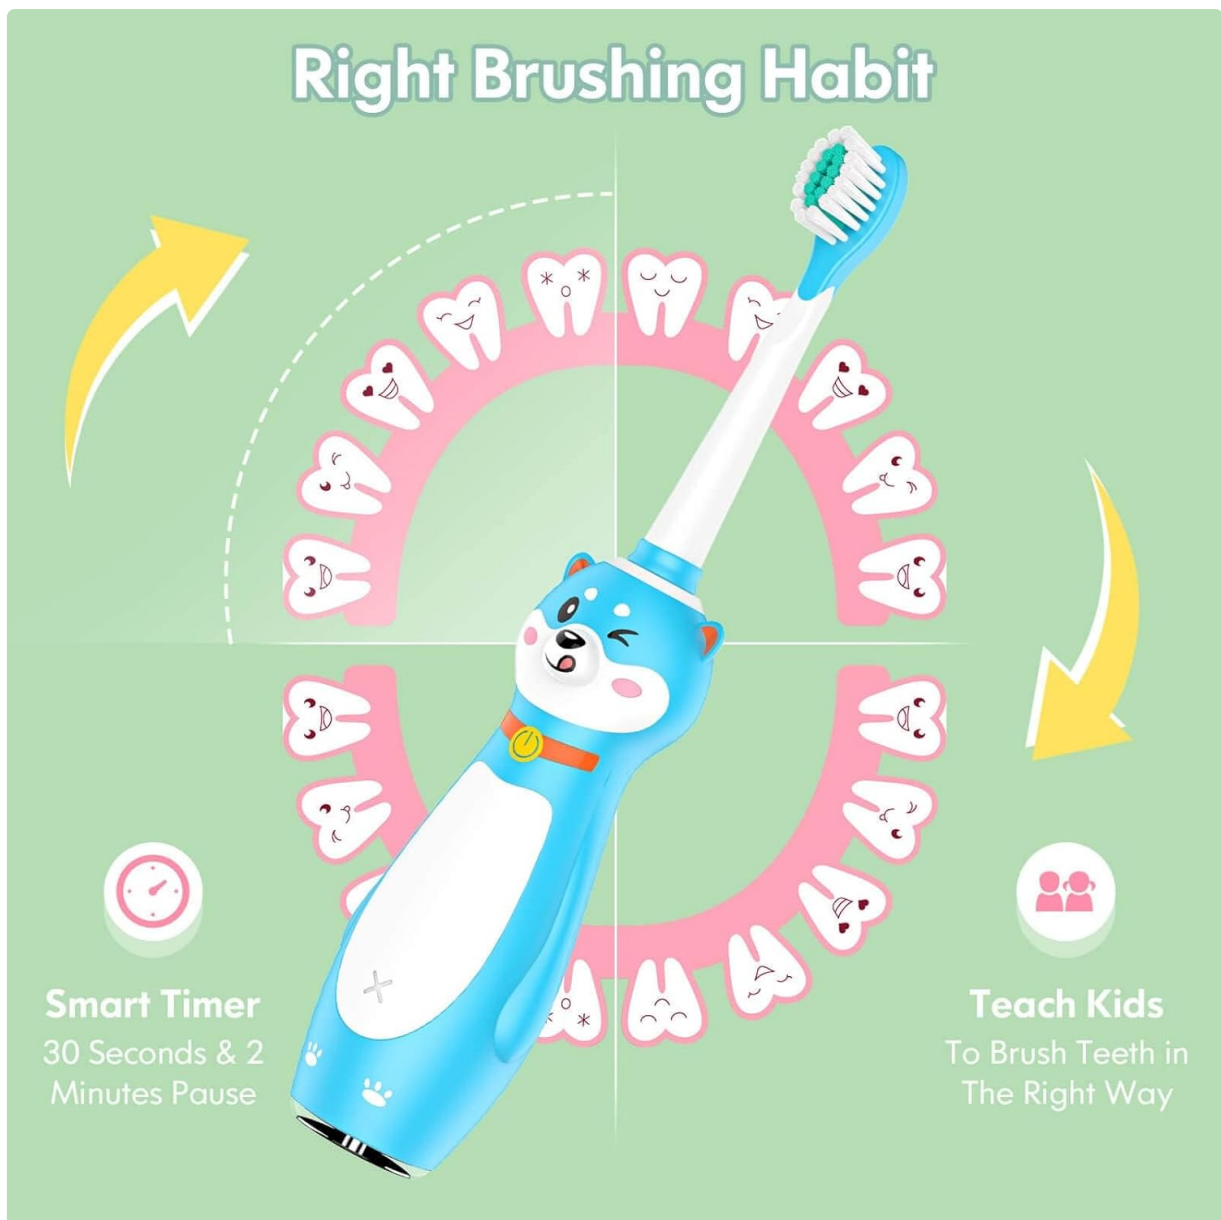


Image: The toothbrush connected to a USB power source for charging.

2.2 Attaching the Brush Head

The toothbrush comes with multiple soft brush heads. To attach a brush head:

1. Align the brush head with the shaft of the toothbrush handle.
2. Gently push the brush head down until it clicks securely into place.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off and Mode Selection

The toothbrush features three brushing modes: Clean, White, and Massage. It also has a memory function that recalls the last used mode.

1. **To Power On:** Press the power button once. The toothbrush will start in the last used mode.
2. **To Change Mode:** While the toothbrush is on, press the power button repeatedly to cycle through the modes (Clean → White → Massage). Each mode is indicated by a specific light color or pattern.
3. **To Power Off:** After cycling through all modes, press the power button one more time, or press and

hold the power button for a few seconds in any mode.



Image: Illustration of the three brushing modes and their indicators.

3.2 Brushing Technique and Timer

The toothbrush is equipped with a smart timer to ensure children brush for the dentist-recommended 2 minutes, with 30-second pulse reminders for quadrant changes.

1. Apply a pea-sized amount of toothpaste to the brush head.
2. Place the brush head against the teeth at a slight angle towards the gum line.
3. Press the power button to start brushing.
4. Gently move the brush across the teeth, covering all surfaces. The toothbrush will pause briefly every 30 seconds to signal it's time to move to a different quadrant of the mouth.
5. After 2 minutes, the toothbrush will automatically turn off, indicating the completion of the brushing cycle.



Image: Visual guide for using the smart timer and quadrant reminders.

4. MAINTENANCE

4.1 Cleaning the Toothbrush

Regular cleaning helps maintain the toothbrush's hygiene and performance.

1. After each use, rinse the brush head thoroughly under running water.
2. Wipe the handle with a damp cloth. Do not immerse the entire handle in water for extended periods, despite its IPX7 rating.
3. Allow the toothbrush to air dry before storing.

4.2 Replacing Brush Heads

It is recommended to replace brush heads every 3 months, or sooner if the bristles appear frayed or worn.

1. Grip the brush head firmly and pull it straight off the handle.
2. Align a new brush head with the shaft and push it down until it clicks into place.



Image: Illustrates the effective cleaning action of the toothbrush.

5. TROUBLESHOOTING

If you encounter any issues with your DADA-TECH DT-KE9 Kids Electric Toothbrush, please refer to the following common solutions:

- **Toothbrush not turning on:** Ensure the toothbrush is fully charged. If the battery is low, connect it to a charger.
- **Reduced vibration:** This may indicate a low battery. Recharge the toothbrush.
- **Brush head feels loose:** Ensure the brush head is securely pushed onto the handle until it clicks.
- **Charging indicator not working:** Verify that the charging cable is properly connected to both the toothbrush and the power source. Try a different USB port or adapter.

For persistent issues not resolved by these steps, please contact customer support.

6. SPECIFICATIONS

| Feature | Specification |
|---------|---------------|
|---------|---------------|

| | |
|---------------------|---|
| Model Number | DT-KE9 |
| Product Dimensions | 9.17 x 5.12 x 1.65 inches |
| Item Weight | 0.17 Kilograms (5.93 ounces) |
| Battery Type | Li-battery (1 AA battery required, included) |
| Power Source | Rechargeable Electric |
| Waterproof Rating | IPX7 |
| Brushing Modes | 3 (Clean, White, Massage) |
| Timer | 2-minute auto-timer with 30-second quadrant reminders |
| Bristle Material | Nylon |
| Handle Material | Rubber (High-Quality CPE hybrid materials) |
| Age Range | Kid (Ages 3+) |
| Included Components | Battery, Cover, Replacement Brush Head, Timer |

7. WARRANTY AND SUPPORT

The DADA-TECH DT-KE9 Kids Electric Toothbrush comes with a 2-year warranty.

Contact Support:

For any questions, concerns, or warranty claims, please contact the seller directly through your Amazon account:

1. Log in to your Amazon account.
2. Go to "Your Orders".
3. Find the order ID for your DADA-TECH Kids Electric Toothbrush.
4. Click on "Contact seller".

The DADA-TECH team is committed to providing assistance and understanding customer needs.