

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [FABULETTA](#) /

› Fabuletta FAO002 10-in-1 Air Fryer Toaster Oven Combo Instruction Manual

FABULETTA FAO002

Fabuletta FAO002 10-in-1 Air Fryer Toaster Oven Combo Instruction Manual

Model: FAO002 | Brand: FABULETTA

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Fabuletta FAO002 10-in-1 Air Fryer Toaster Oven Combo. Please read all instructions carefully before first use and retain this manual for future reference.

The Fabuletta FAO002 is a versatile countertop appliance designed to perform multiple cooking functions, including air frying, toasting, baking, broiling, dehydrating, and more. Its 1800W power and 360° rapid heat circulation technology ensure fast and even cooking results.

2. IMPORTANT SAFETY INFORMATION

WARNING: To prevent electric shock, fire, and personal injury, always follow basic safety precautions when using electrical appliances.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance housing in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in the oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or any materials not specifically designed for oven use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.
- This appliance is for household use only.

3. PRODUCT OVERVIEW AND COMPONENTS

The Fabuletta FAO002 is designed for efficiency and versatility. It features a digital control panel and multiple cooking racks to accommodate various food items.



3.1 Key Features

- **10 Preset Functions:** Preheat, Air Fry, Pizza, Air Roast, Toast, Bagel, Bake, Broil, Dehydrate, Reheat.
- **360° Rapid Heat Circulation Air Fry Technology:** Reduces oil usage by up to 85% compared to traditional deep frying.
- **Fast & Even Cooking:** 1800W power and 4 heating elements for up to 50% faster cooking.
- **Large Capacity:** 17 Quarts (30L) interior, fits up to 9 slices of bread or a 12-inch pizza.
- **Space Saver Design:** Can be flipped up and away for compact storage against the kitchen backsplash.
- **7 Toast Shade Settings:** Adjustable browning levels from light to dark.
- **High-Temp-Resistant Technology:** Two-layer tempered glass door and cool-touch handle for safety.

3.2 Included Accessories

The following accessories are included with your air fryer toaster oven:

- Air Fryer Toaster Oven Combo (1 unit)
- User Manual
- Food Tray
- Air Fry Basket
- Wire Rack
- Crumb Tray

4 Accessories, Meet All Cooking Needs



Figure 3.2: Included accessories for the Fabuletta FAO002.

4. SETUP

Before first use, ensure all packaging materials are removed from the appliance. Place the oven on a stable, heat-resistant surface with adequate clearance from walls and other appliances. Plug the appliance into a grounded electrical outlet.

4.1 Initial Cleaning

Wash all removable parts (food tray, air fry basket, wire rack, crumb tray) in warm, soapy water. Wipe the interior and exterior of the oven with a damp cloth. Dry thoroughly before use.

4.2 First Use Burn-Off

It is recommended to run the oven empty for approximately 15 minutes at 400°F (200°C) to burn off any manufacturing residues. A slight odor or smoke may be present during this process; this is normal. Ensure the

area is well-ventilated.

5. OPERATING INSTRUCTIONS

The Fabuletta FAO002 features an intuitive digital control panel for easy operation.



Figure 5.1: Digital Control Panel with 10 Preset Functions.

5.1 Power On/Off

- Press the **Power** button to turn the appliance on or off.

5.2 Selecting a Preset Function

- Once powered on, select one of the 10 preset functions (e.g., Air Fry, Toast, Pizza) by touching the corresponding icon on the control panel.
- The default temperature and time for the selected function will be displayed.

5.3 Adjusting Temperature and Time

- Use the < and > arrows next to the temperature display to adjust the cooking temperature.
- Use the < and > arrows next to the time display to adjust the cooking time.

5.4 Start/Pause

- After selecting a function and adjusting settings, press the **Start/Pause** button to begin cooking.
- Press **Start/Pause** again to temporarily pause cooking. Press it once more to resume.

5.5 Interior Light

- Press the **Light** icon to turn the interior oven light on or off, allowing you to monitor cooking progress without opening the door.

5.6 Dual Cook Function

The innovative Dual Cook function allows you to combine two cooking programs to run in sequence, ensuring optimal results for complex recipes.



Figure 5.2: Innovative Dual Cook Function.

- To activate, select your first cooking function and set its parameters.
- Press the **Dual Cook** button.
- Select your second cooking function and set its parameters.
- Press **Start/Pause** to begin the combined cooking cycle.



Figure 5.3: Example of Dual Cook: Air Roast followed by Broil for enhanced flavor.

Large Capacity

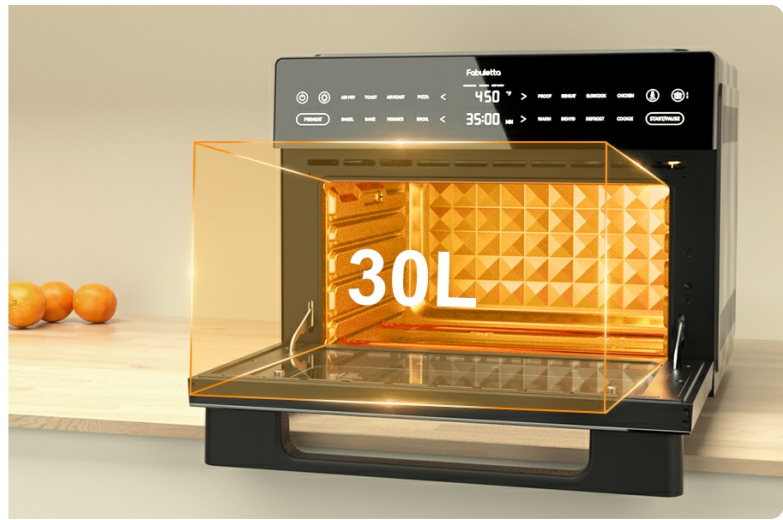


Figure 5.4: Example of Dual Cook: Bake followed by Warm to keep food ready.

6. DETAILED COOKING FUNCTIONS

The Fabuletta FAO002 offers a variety of cooking modes to suit your needs.

6.1 Air Fry

This function uses rapid hot air circulation to cook food with minimal oil, achieving a crispy texture similar to deep frying.

Healthier Air Fry Function

85% reduced fat,
Enjoy same taste fried food with less fat.



Deep Frying



Fabuletta Air Fryer Toaster Oven

Figure 6.1: Healthier Air Fry Function with 85% reduced fat.

6.2 Toast & Bagel

Perfect for bread and bagels. Select from 7 shade settings to achieve your desired level of browning.



Figure 6.2: 7 Toast Shade Settings for customized browning.

6.3 Dehydrate

This function allows for low-temperature, long-duration cooking to remove moisture from food, ideal for making fruit chips or jerky.

Your browser does not support the video tag.

Video 6.1: Instructions for dehydrating bananas using the Fabuletta Air Fryer Toaster Oven.

6.4 Bake & Cookie

Use for baking cakes, muffins, cookies, and other pastries. The oven's convection fan ensures even heat distribution.

Your browser does not support the video tag.

Video 6.2: Recipe for Air Fryer Cinnamon Stix using the Fabuletta Air Fryer Toaster Oven.

6.5 Pizza

Optimized settings for cooking pizzas to perfection. The large capacity can accommodate up to a 12-inch pizza.

Your browser does not support the video tag.

Video 6.3: Recipe for making pizza using the Fabuletta Air Fryer Toaster Oven.

6.6 Air Roast & Broil

Ideal for roasting meats and vegetables, or broiling for a browned finish.



Keep warm until your family is ready for dinner

Figure 6.3: Efficient cooking on two levels for different foods or larger quantities.

7. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your appliance.

7.1 Cleaning the Interior

- Always unplug the oven and allow it to cool completely before cleaning.
- Wipe the interior walls with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads.

- For stubborn stains, a non-abrasive liquid cleanser can be used.

7.2 Cleaning Accessories

- The food tray, air fry basket, wire rack, and crumb tray can be washed in warm, soapy water.
- For baked-on food, soak the accessories in hot, soapy water for a few minutes before cleaning.
- Ensure all accessories are thoroughly dried before storing or reusing.

7.3 Cleaning the Exterior

- Wipe the exterior surface with a damp cloth. Do not use abrasive cleaners.
- The control panel can be wiped gently with a soft, damp cloth.

8. TROUBLESHOOTING

If you encounter any issues with your appliance, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Food is not cooking evenly.	Overcrowding the basket; incorrect rack position; uneven food placement.	Do not overcrowd the basket. Use recommended rack positions. Arrange food in a single layer for best results. Flip food halfway through cooking.
White smoke coming from the oven.	Excess oil/grease on heating elements or accessories; food with high fat content.	Clean the oven interior and accessories thoroughly. Reduce the amount of oil used. For high-fat foods, use the drip tray.
Food is not crispy.	Too much moisture in food; overcrowding; insufficient cooking time/temperature.	Pat food dry before cooking. Do not overcrowd the basket. Increase cooking time or temperature as needed.

9. SPECIFICATIONS

Feature	Specification
Brand	FABULETTA
Model Name	FAO002

Feature	Specification
Power	1800W
Capacity	17 Quarts (30L)
Product Dimensions	14.56"D x 9.05"W x 20.27"H
Item Weight	27.9 pounds
Control Type	Knob Control (Digital Touch Panel)
Door Material Type	Tempered Glass
Special Features	Programmable, Stain Resistant, Temperature Control, Timer

10. WARRANTY AND SUPPORT

FABULETTA provides a 24-month warranty for this product. For any product inquiries, technical support, or warranty claims, please contact FABULETTA customer service. Contact information can typically be found on the product packaging or the official FABULETTA website.