

TILSWALL M3

Tilswall Cordless Electric Spin Scrubber User Manual

Model: M3 | Brand: TILSWALL

INTRODUCTION

Thank you for choosing the Tilswall Cordless Electric Spin Scrubber. This powerful and versatile cleaning tool is designed to make your cleaning tasks easier and more efficient, tackling tough grime in various areas of your home. Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the main body of the scrubber (handle and motor unit) in water. Only the brush heads are designed to be waterproof.
- Keep the charging port dry at all times.
- Do not attempt to disassemble, repair, or modify the unit yourself. Contact customer support for assistance.
- Use only the provided charging cable and adapter.
- Turn off the scrubber before changing brush heads or performing any maintenance.
- Store the scrubber in a cool, dry place when not in use.
- Fully charge the battery every 6 months to prevent over-discharging if storing for extended periods.
- Keep out of reach of children.

PRODUCT COMPONENTS

The Tilswall Cordless Electric Spin Scrubber comes with the following components:

- 1 x Electric Power Spin Scrubber (Main Unit with Detachable Handle)
- 4 x Brush Heads (Wide Flat Brush, Round Brush, Small Flat Brush, Pointy Brush)
- 1 x Hook for storage
- 1 x 9V/2A Fast Charger (Included Charging Cable)



Image: Overview of the Tilswall Cordless Electric Spin Scrubber and its included accessories, including the main unit, various brush heads, charging cable, and a wall hook.

SETUP AND ASSEMBLY

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble Handle:** The scrubber features a detachable extension pole. To assemble, align the extension pole with the main

scrubber unit and push firmly until it clicks into place. To detach, press the release button and pull apart.

3. **Attach Brush Head:** Select the desired brush head. Align the brush head with the rotating shaft on the scrubber unit and push it on firmly until it locks. Ensure it is securely attached before use.

Extendable Handle & Adjustable Head



40.9 in

26 in

28° 57° 84°

Tilswall

Activity time: March 20, 2025-May 5, 2025

High-end Quality Brand

Image: The Tilswall Electric Spin Scrubber shown with its extendable handle and adjustable brush head angles (28°, 57°, 84°), demonstrating its versatility for reaching different areas.

CHARGING THE SCRUBBER

The scrubber is powered by a rechargeable battery. Before first use, fully charge the unit.

1. Locate the charging port on the main unit.
2. Connect the provided charging cable to the scrubber and plug the adapter into a standard electrical outlet.
3. The indicator lights on the handle will show the charging status. A full charge typically takes about 1 hour.
4. Once fully charged, disconnect the charger. The scrubber provides up to 180 minutes of runtime on a full charge.

Surprise !
1 Hour to be Fully-Charged

Charge for **5** mins = Working for **15** mins

Tilswall Activity time: March 20, 2025-May 5, 2025
High-end Quality Brand

Image: An illustration showing the internal battery of the Tilswall Scrubber being charged, highlighting its fast charging capability (1 hour for full charge, 5 minutes charge for 15 minutes runtime).

Follow these steps for effective cleaning:

1. **Prepare Surface:** For best results, pre-treat heavily soiled areas with a suitable cleaning agent before scrubbing.
2. **Power On:** Press the power button on the handle to turn on the scrubber.
3. **Select Speed:** The scrubber offers two-speed options (250 RPM and 300 RPM). Press the speed selection button to toggle between the modes. Use the higher speed for tougher stains.
4. **Apply Pressure:** Apply light to moderate pressure while scrubbing. The powerful motor is designed to do the work, reducing strain on your arms and wrists.
5. **Clean:** Move the rotating brush head over the surface to be cleaned. The adjustable brush head angles (28°/57°/84°) and extendable handle allow you to reach various areas comfortably.
6. **Power Off:** Once cleaning is complete, press the power button to turn off the scrubber.

Brush Head Usage Guide:

- **Wide Flat Brush:** Ideal for large flat surfaces like tiles, glass, and floors.
- **Round Brush:** Best for curved surfaces such as bathtubs, sinks, and toilets.
- **Small Flat Brush:** Suitable for kitchen surfaces, stovetops, and barbecue grills.
- **Pointy Brush:** Designed for cleaning corners, gaps, and grout lines.



Round Brush

increases the efficiency

Pointy Brush

for bathtub, sink, etc



Wide Brush

for tile, glass, swimming pool, etc

Small Brush

for kitchen, barbecue grill, etc



PRIME

All Fro Your Convenience

Image: Visual guide to the four included brush heads (Round, Pointy, Wide, Small) and their recommended applications for various cleaning tasks.

Your browser does not support the video tag.

Video: Demonstrates the Tilswall M3 Electric Spin Scrubber in action, effectively cleaning a bathroom tub and tiles. The video highlights the ease of use and cleaning power of the device.

MAINTENANCE AND CARE

- **Cleaning the Brush Heads:** After each use, remove the brush head and rinse it thoroughly under running water to remove any dirt or cleaning solution residue. Allow to air dry completely before storing.
- **Cleaning the Main Unit:** Wipe the main unit and handle with a damp cloth. Do not use abrasive cleaners or immerse the unit in water. Ensure the charging port is dry before charging.
- **Storage:** Store the scrubber and its accessories in a clean, dry place. Use the provided hook to hang the scrubber for convenient storage and to allow for proper drying.
- **Battery Care:** If the scrubber will not be used for an extended period, fully charge it every 6 months to maintain battery health and prevent deep discharge.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scrubber does not turn on.	Battery is low or depleted.	Charge the scrubber fully using the provided charger.
Brush head stops spinning or slows down significantly.	Excessive pressure applied; battery low; brush head jammed.	Reduce pressure; charge the battery; check for obstructions around the brush head.
Scrubber not charging.	Charger not properly connected; faulty charger/cable; charging port wet.	Ensure secure connection; try a different outlet; ensure charging port is dry; contact support if issues persist.
Brush head detaches during use.	Brush head not securely attached.	Ensure the brush head is pushed firmly onto the shaft until it locks into place.

SPECIFICATIONS

- **Model:** M3
- **Brand:** TILSWALL
- **Power:** 7.4V/74W motor
- **Speed Modes:** 2 (250 RPM / 300 RPM)
- **Battery:** 4000mAh (1 A batteries included)
- **Charging Time:** Approximately 1 hour for full charge
- **Runtime:** Up to 180 minutes
- **Handle Material:** Plastic
- **Product Dimensions:** 17.64"L x 6.42"W x 6.38"H
- **Item Weight:** 2.2 pounds (1000 Grams)
- **Special Features:** Portable, D-Shape Handle, Adjustable Cleaning Brush Head (28°/57°/84°), Detachable Extension Pole (26/40.9 inches)
- **Included Components:** Electric Power Spin Scrubber, 4 Brush Heads, Hook, 9V/2A Fast Charger (with Charging Cable)

WARRANTY AND SUPPORT

Tilswall offers a 1-year money-back guarantee, a 1-year warranty, and lifetime worry-free user support for this product. If you encounter any issues or have questions regarding your Tilswall Cordless Electric Spin Scrubber, please contact Tilswall customer service for assistance. Do not attempt to repair the product yourself.

For further support, please refer to the official Tilswall website or contact their customer service channels provided with your purchase.

© 2024 TILSWALL. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question