

[Manuals.plus](#) /

› [SMAEL](#) /

› SMAEL SL-1921 Men's Multifunction Digital Quartz Waterproof Watch User Manual

SMAEL SL-1921

SMAEL SL-1921 Men's Multifunction Digital Quartz Waterproof Watch User Manual

Model: SL-1921 | Brand: SMAEL

INTRODUCTION

Thank you for choosing the SMAEL SL-1921 Multifunction Digital Quartz Waterproof Watch. This manual provides essential information for the proper use, setup, and maintenance of your watch. Please read it carefully to ensure optimal performance and longevity of your timepiece.



Image: The SMAEL SL-1921 watch, featuring a blue strap and a silver-tone case with red accents, displayed on a wrist.

WATCH COMPONENTS

Familiarize yourself with the main components and buttons of your SMAEL SL-1921 watch.



Image: A detailed view of the watch face, labeled "STEREO DIAL MULTI FUNCTION DIAL", showing the analog hands, digital displays, and surrounding buttons (Light, Mode, Start, Reset).

- **LIGHT Button:** Activates the LED backlight.
- **MODE Button:** Cycles through different modes (Time, Alarm, Stopwatch).
- **START Button:** Used for starting/stopping functions in Stopwatch mode, and adjusting settings.
- **RESET Button:** Used for resetting functions in Stopwatch mode, and adjusting settings.
- **Analog Dial:** Displays time with traditional hour and minute hands.
- **Digital Display:** Shows time, date, day of the week, and other digital functions.

SETUP AND INITIAL CONFIGURATION

Setting Analog Time

1. Pull out the crown (the small knob on the right side of the watch case) to the first click position.
2. Turn the crown to adjust the hour and minute hands to the correct time.
3. Push the crown back in to its normal position to start the analog timekeeping.

Setting Digital Time and Date

1. Press the **MODE** button repeatedly until the digital time display starts flashing (usually the seconds).
2. Press the **RESET** button to select the item you wish to adjust (seconds, hour, minute, month, date, day of week, 12/24 hour format).
3. Press the **START** button to increase the selected value. Hold **START** to rapidly advance the value.
4. Once all settings are correct, press the **MODE** button to exit the setting mode.

OPERATING INSTRUCTIONS

Using the LED Backlight

To illuminate the digital display in low-light conditions, press the **LIGHT** button. The backlight will activate for a few seconds.



Image: The watch face with its digital display clearly visible due to the activated LED backlight in a dark environment.

Alarm Function

1. Press the **MODE** button until you reach the Alarm mode (indicated by "AL" or a bell icon).
2. Press the **RESET** button to select the hour or minute setting.
3. Press the **START** button to adjust the hour or minute.
4. Press the **MODE** button to confirm and exit.
5. To turn the alarm ON/OFF, press the **START** button while in Alarm mode. An alarm icon will appear/disappear.

Stopwatch Function

1. Press the **MODE** button until you reach the Stopwatch mode (indicated by "ST" or "STOP").
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to clear the stopwatch to zero.
5. To resume timing after pausing, press **START**.

12/24 Hour Format

In the digital time setting mode, you can toggle between 12-hour and 24-hour formats by pressing the **RESET** button until the "H" or "P" indicator flashes, then use the **START** button to change it.

MAINTENANCE AND CARE

- **Water Resistance:** This watch is water-resistant up to 50 meters. It is suitable for daily use, splashes, and brief immersion in water. **Do not press any buttons underwater.** Avoid exposure to hot water or steam, as this can compromise the water resistance seals.
- **Cleaning:** Wipe the watch case and strap with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by drying.
- **Battery:** The watch is powered by a battery. When the display dims or functions become erratic, it may be time for a battery replacement. This should be done by a qualified watch technician to maintain water resistance.
- **Storage:** Store your watch in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Chemicals:** Do not expose the watch to solvents, detergents, perfumes, or other chemical sprays, as they can damage the case, strap, or seals.



Image: A close-up of the watch dial, showing the clear glass lens, with text "GLASS LENSES SEE TIME MORE CLEARLY".

TROUBLESHOOTING

Problem	Possible Cause	Solution
Analog hands not moving.	Crown is pulled out; battery low/dead.	Push the crown back in. If still not working, replace battery.
Digital display is blank or dim.	Battery low/dead.	Replace the battery.
Digital time is incorrect.	Time not set correctly.	Refer to "Setting Digital Time and Date" section.
Water inside the watch.	Buttons pressed underwater; seals compromised.	Immediately take to a qualified watch technician for inspection and repair. Avoid further water exposure.

SPECIFICATIONS

- Model Number:** SL-1921
- Display Type:** Analog - Digital
- Movement:** Quartz
- Special Features:** Dual time display, Alarm, Stopwatch, LED Backlight, Shock Resistant, Date and Week Display, 12/24 Hour Format
- Power Source:** Battery Powered
- Strap Material:** Polyurethane
- Clasp Type:** Buckle
- Water Resistance Depth:** 50 Meters (164 Feet)
- Case Diameter:** 5 Centimeters
- Case Material:** Rubber
- Dial Window Material Type:** Glass

Included Components: Watch, User Manual (this document)

WARRANTY AND SUPPORT

Your SMAEL SL-1921 watch is designed for durability and performance. For any questions or concerns regarding your watch, please contact the seller or SMAEL customer support.

- **Return Policy:** Please refer to the retailer's return policy for details on returns and exchanges.
- **Customer Service:** If you encounter any issues or have questions, please do not hesitate to contact the seller for assistance. They are committed to customer satisfaction.

© 2023 SMAEL. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question