

[manuals.plus](#) /› [YAOHUIMI](#) /› [User Manual: Replacement Remote Control for Everstar Portable Air Conditioner](#)**YAOHUIMI A420210928-(R51)-91**

User Manual: Replacement Remote Control for Everstar Portable Air Conditioners

Brand: YAOHUIMI

INTRODUCTION

This manual provides instructions for the YAOHUIMI Replacement Remote Control, designed for use with Everstar MPK-10CR and MPK-10CR-1 Portable Air Conditioners. This remote control is an updated version that may look different from your original remote but is fully compatible with the specified AC models. It features a green backlight for easy night operation and can display temperatures in both Fahrenheit and Celsius.

Important Note: This is not a universal remote control. Please verify your air conditioner model (Everstar MPK-10CR or MPK-10CR-1) before use to ensure compatibility.

SETUP

Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the cover back into place until it clicks securely.





Image: Front view of the YAOHUIMI Replacement Remote Control.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions for optimal use.

Key Functions

- **ON/OFF Button:** Press to turn the air conditioner on or off.
- **MODE Button:** Cycles through operating modes: AUTO, COOL, DRY, HEAT.
- **TEMP ▲ / ▼ Buttons:** Adjusts the desired temperature up or down. The display shows temperature in Fahrenheit or Celsius.
- **FAN SPEED Button:** Adjusts fan speed: HIGH, MED (Medium), LOW.
- **SWING Button:** Activates or deactivates the automatic louver swing function.
- **AIR DIRECTION Button:** Adjusts the vertical airflow direction.
- **SLEEP Button:** Activates sleep mode for quiet operation and energy saving during sleep.
- **TIMER ON Button:** Sets a timer for the air conditioner to turn on.
- **TIMER OFF Button:** Sets a timer for the air conditioner to turn off.
- **RESET Button:** Resets the remote control settings.
- **LOCK Button:** Locks the remote control buttons to prevent accidental changes.
- **LED DISPLAY Button:** Toggles the LED display on the air conditioner unit.
- **TURBO Button:** Activates maximum cooling or heating for rapid temperature change.

Display Features

- **Fahrenheit and Celsius Display:** The remote control can display the temperature in both Fahrenheit (°F) and Celsius (°C). The unit automatically switches based on the air conditioner's setting or can be toggled if the AC unit supports it.
- **Green Backlight:** The display features a green backlight, making it easy to read and operate the remote control in low-light conditions or at night.



GREEN BACKLIGHT

Image: Close-up view of the remote control's display, highlighting the green backlight feature.

Display in both Fahrenheit and Celsius

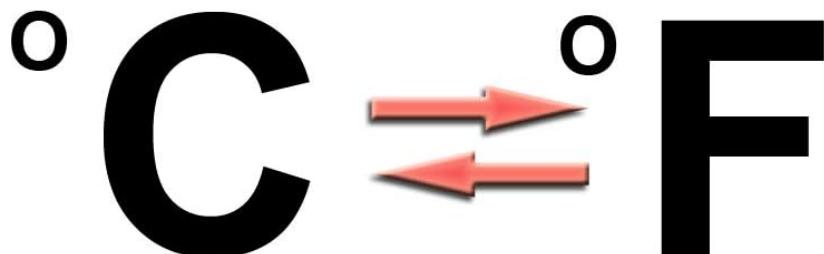
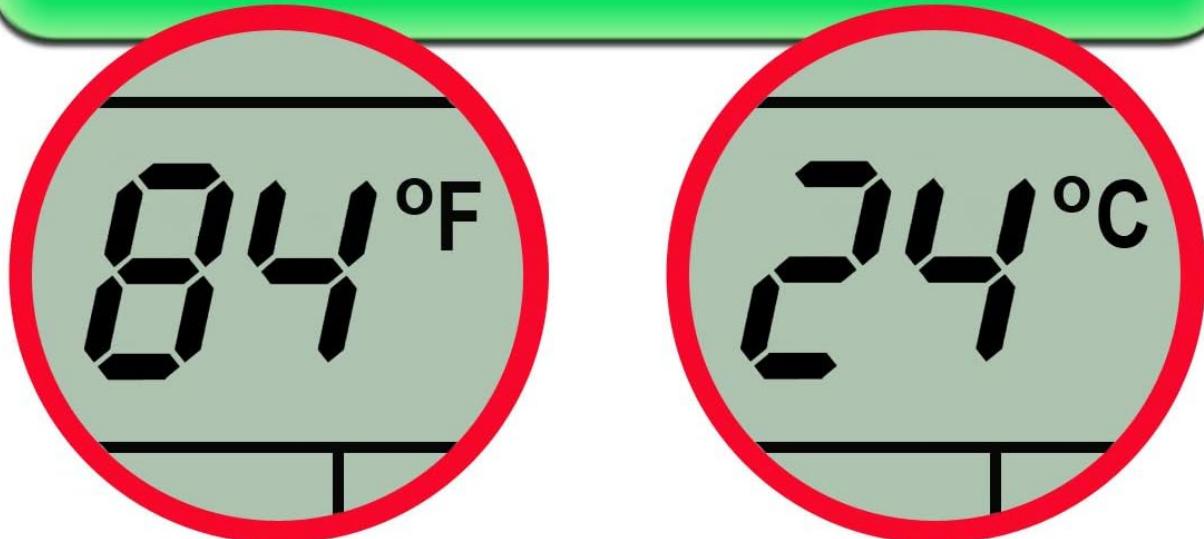


Image: Illustration showing the remote control's capability to display temperature in both Fahrenheit and Celsius.

MAINTENANCE

Cleaning

- Wipe the remote control with a soft, dry cloth.
- Do not use liquid cleaners, sprays, or abrasive materials, as they may damage the remote's surface or internal components.

Battery Replacement

- Replace batteries when the remote control's range decreases or the display becomes dim.
- Always replace both batteries at the same time with new ones of the same type (AAA).
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not responding.	Dead or incorrectly installed batteries.	Replace batteries, ensuring correct polarity.

Problem	Possible Cause	Solution
Remote control range is poor.	Weak batteries; Obstruction between remote and AC unit.	Replace batteries; Ensure clear line of sight to AC unit's receiver.
AC unit does not respond to specific functions.	Remote control not compatible with AC unit; AC unit function not supported.	Verify AC model (Everstar MPK-10CR/MPK-10CR-1); Some older AC units may not support all advanced functions of this updated remote.
Display is dim or blank.	Low battery power.	Replace batteries.

SPECIFICATIONS

Model Number	A420210928-(R51)-91
Brand	YAOHUIMI
Compatible Devices	Everstar MPK-10CR, Everstar MPK-10CR-1 Portable Air Conditioners
Power Source	2 x AAA Batteries (not included)
Display Features	Fahrenheit and Celsius display, Green Backlight
Manufacturer	HUIMIKEJI

WARRANTY AND SUPPORT

For any issues or questions regarding your YAOHUIMI Replacement Remote Control, please contact the seller or manufacturer directly. Please refer to your purchase documentation for specific warranty details and customer support contact information.

As per product information, the seller offers a return policy with a duration of 30 days (refund/replacement). Please check your order details for the most accurate and up-to-date information.