

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bayer Chic 2000](#) /
- › [Bayer Chic 2000 Lola Doll's Jogging Buggy Model 612-76 Instruction Manual](#)

## Bayer Chic 2000 612-76

# Bayer Chic 2000 Lola Doll's Jogging Buggy Model 612-76 Instruction Manual

Your guide to assembly, operation, and care.

## INTRODUCTION

Thank you for choosing the Bayer Chic 2000 Lola Doll's Jogging Buggy. This manual provides important information for the safe and proper assembly, operation, and maintenance of your doll's buggy. Please read these instructions carefully before use and retain them for future reference.

### **Safety Information:**

**WARNING:** Not suitable for children under 3 years due to small parts which may present a choking hazard.

This product is designed for dolls up to 50 cm in size.

## WHAT'S IN THE BOX

Upon opening the package, please ensure all components are present and undamaged. The package should contain:

- One (1) Bayer Chic 2000 Lola Doll's Jogging Buggy (main frame with seat, canopy, and wheels)

If any parts are missing or damaged, please contact customer support.

## SETUP AND ASSEMBLY

The Bayer Chic 2000 Lola Doll's Jogging Buggy is designed for easy assembly. Follow these steps:

1. **Unfolding the Buggy:** Carefully remove the buggy from its packaging. Locate the folding mechanism (usually a latch or button on the frame) and release it to unfold the buggy until it locks into its open position. Ensure all parts are securely clicked into place.
2. **Attaching Wheels (if separate):** If the wheels are not pre-attached, push each wheel onto its axle until it clicks securely. Verify that all wheels rotate freely.
3. **Adjusting the Push Handle:** The push handle is height-adjustable. Locate the adjustment buttons or levers on the sides of the handle. Press them and slide the handle to the desired height (between approximately 33 cm and 62 cm). Release the buttons/levers to lock the handle in position.
4. **Adjusting the Canopy:** The canopy can be adjusted to provide shade. Simply pull it forward or push it back to the desired position.



Image 1: Front view of the assembled doll's jogging buggy. This image shows the main structure, seat, canopy, and front wheel.



*Image 2: Rear view of the doll's jogging buggy, highlighting the storage net beneath the seat.*

## **OPERATING INSTRUCTIONS**

This section details how to use your doll's jogging buggy effectively and safely.

- **Placing the Doll:** Position your doll (up to 50 cm) securely in the seat.
- **Using the Safety Belt:** Fasten the safety belt around your doll to prevent it from falling out during movement. Ensure the belt is snug but not overly tight.
- **Adjusting the Canopy:** The canopy provides flexible protection from sun and wind. Adjust its position as needed for your doll.
- **Using the Luggage Net:** The large luggage net located under the seat offers ample storage space for doll accessories or other small toys.
- **Maneuvering:** The 3-wheel design allows for easy maneuvering. Push the buggy forward using the height-adjustable handle.

# SPIELSPASS MIT STIL UND FUNKTION



- 
**Verstellbares Verdeck:**  
Flexibler Schutz vor Sonne und Wind
- 
**Großes Gepäcknetz:**  
Viel Stauraum für Spielzeug
- 
**Sicherheitsgurte:**  
Sicherer Halt für Puppen bis 50 cm
- 
**Höhenverstellbarer Schiebegriff:**  
Ergonomisch & anpassbar für Kinder ab 3 Jahren
- 
**Leicht & robust:**  
Kinderleichtes Handling und Stabilität für stundenlangen Spielspaß
- 
**Zusammenklappbar:**  
Platzsparend & mobil

Image 3: Overview of key features, including the adjustable canopy for sun/wind protection, large luggage net for storage, safety belts for

*dolls up to 50 cm, height-adjustable push handle (33-62 cm), lightweight and robust construction, and foldable design for space-saving storage.*

## MAINTENANCE AND CARE

---

Proper care will extend the life of your doll's buggy.

- **Cleaning:** Wipe down the frame with a damp cloth and mild soap. The fabric parts can be spot cleaned. Do not machine wash.
- **Storage:** When not in use, the buggy can be folded for compact storage. Store in a dry place away from direct sunlight to prevent fading and material degradation.
- **Inspection:** Periodically check all screws, bolts, and locking mechanisms to ensure they are secure. Tighten any loose fasteners.

# UNSERE PRODUKTE

bis ins letzte Detail durchdacht



- Höhenverstellbarer Schiebegriff (33-62 cm)
- Schutz vor Sonne und Regen dank verstellbarem Verdeck
- Realistische Optik wie ein echter Kinderwagen
- Sicherheitsgurte für Puppen verhindern das Herausfallen
- Platzsparend verstaubar dank kompaktem Klappmechanismus

## ANDERE

- Fester Griff ohne Anpassungsmöglichkeit
- Starres, nicht anpassbares Verdeck
- Wirkt spielzeughaft
- Keine sichere Befestigung der Puppe
- Sperrig und platzraubend

Image 4: This chart illustrates the design advantages of the Bayer Chic 2000 doll's buggy, emphasizing its height-adjustable handle (33-62 cm), adjustable canopy for sun and rain protection, realistic appearance, safety belts to secure dolls, and compact folding mechanism for space-saving storage.

## TROUBLESHOOTING

If you encounter any issues with your doll's buggy, please refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Buggy does not unfold or fold smoothly.	Locking mechanism is stuck or not fully disengaged/engaged.	Ensure the folding mechanism is fully released or engaged. Apply gentle, even pressure. Do not force.
Wheels are stiff or do not turn freely.	Debris in the wheel axle or loose attachment.	Check for any obstructions and remove them. Ensure wheels are securely attached to the axles.
Handle height adjustment is difficult.	Adjustment buttons/levers are not fully pressed or mechanism is dirty.	Press the adjustment buttons/levers completely. Clean any visible dirt from the mechanism.

If the problem persists, please contact customer support.

## SPECIFICATIONS

Feature	Detail
Model Number	612-76
Product Dimensions (L x W x H)	70 x 33 x 62 cm (27.56 x 12.99 x 24.41 inches)
Item Weight	1.7 kg (3.74 pounds)
Recommended Age	36 months - 6 years
Doll Size Compatibility	Up to 50 cm
Push Handle Height	Adjustable from 33 cm to 62 cm
Features	Adjustable canopy, safety belt, luggage net, foldable design

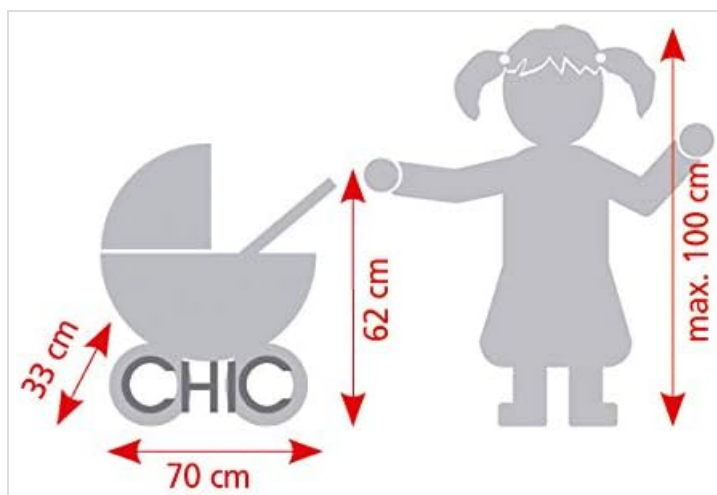


Image 5: Dimensional diagram illustrating the buggy's length (70 cm), width (33 cm), and maximum handle height (62 cm). It also shows a child silhouette for scale, indicating suitability for children up to 100 cm in height.

# VIELSEITIG EINSETZBAR:



ZUHAUSE



IM FREIEN



Für Puppen  
bis 50 cm



Image 6: This diagram provides key dimensions: 70 cm length, 33 cm width, and 57 cm height to the handle. It also specifies that the buggy is suitable for dolls up to 50 cm.

## WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase or visit the official Bayer Chic 2000 website. Please have your model number (612-76) and purchase date available when contacting support.

