

YAOHUIMI RG06A6/BGE

YAOHUIMI Replacement Remote Control RG06A6/BGE User Manual

For Midea, Danby, and Comfee Room Air Conditioners

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your YAOHUIMI RG06A6/BGE replacement remote control. This remote is designed to be compatible with specific Midea, Danby, and Comfee room air conditioner models that originally used the RG06A6/BGE remote.

Important Note: This is a dedicated replacement remote control and is not a universal remote. Please verify your air conditioner model or original remote control model (RG06A6/BGE) for compatibility before use. This remote may appear different from your original unit but is designed to function correctly with compatible AC units.

2. PRODUCT OVERVIEW AND FEATURES

The RG06A6/BGE replacement remote control offers convenient operation of your air conditioner with several key features:

- **Dual Temperature Display:** Displays temperature in both Fahrenheit (°F) and Celsius (°C).
- **Green Backlight:** Features a green backlight for improved visibility and ease of operation in low-light conditions.
- **Dedicated Function Buttons:** Provides direct access to various air conditioner functions.



UPGRADE!

Display in Fahrenheit



Display in Celsius



°C ⇌ °F



GREEN BACKLIGHT



Image: The remote control showcasing its key features, including the ability to display temperature in both Fahrenheit and Celsius, and the green backlight for enhanced visibility.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Remove batteries if the remote control will not be used for an extended period to prevent leakage.

4. OPERATING INSTRUCTIONS

Point the remote control directly at the air conditioner's receiver when operating. Ensure there are no obstructions between the remote and the AC unit.



Image: A clear view of the RG06A6/BGE remote control, displaying its layout and all function buttons.

4.1 Basic Functions

- **ON/OFF Button:** Press to turn the air conditioner on or off.
- **MODE Button:** Press repeatedly to cycle through available operating modes: AUTO, COOL, DRY, HEAT.
- **TEMP ▲ / ▼ Buttons:** Use these buttons to increase or decrease the desired temperature setting.
- **FAN SPEED Button:** Press to adjust the fan speed. Options typically include HIGH, MED (Medium), and LOW.

4.2 Advanced Functions

- **SWING Button:** Activates or deactivates the automatic vertical louver swing function, distributing air evenly.
- **SLEEP Button:** Engages the sleep mode, which adjusts temperature and fan speed for comfortable sleep and energy saving.
- **TIMER ON Button:** Sets a timer for the air conditioner to turn on automatically.
- **TIMER OFF Button:** Sets a timer for the air conditioner to turn off automatically.
- **RESET Button:** Used to reset certain settings or functions. Consult your AC unit's manual for specific reset procedures.
- **LOCK Button:** Locks the remote control buttons to prevent accidental changes. Press again to unlock.
- **LED DISPLAY Button:** Toggles the LED display on the air conditioner unit on or off.
- **TURBO Button:** Activates maximum cooling or heating capacity for rapid temperature adjustment.
- **AIR DIRECTION Button:** Adjusts the horizontal airflow direction.



Image: A user holding the remote control, illustrating the natural grip and button accessibility during operation.

5. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's range decreases or the display becomes dim. Always replace both batteries simultaneously with new ones of the same type.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

- **Remote not responding:** Check if the batteries are correctly inserted and have sufficient charge. Replace batteries if necessary. Ensure there are no obstructions between the remote and the air conditioner.
- **Limited range:** Replace batteries. Ensure the remote is pointed directly at the air conditioner's receiver.
- **Display issues:** If the remote's display is dim or flickering, replace the batteries.





7. SPECIFICATIONS

Feature	Description
Model Number	RG06A6/BGE (Internal SKU: A420210928-(R51)-413)
Brand	YAOHUIMI
Compatibility	Midea, Danby, Comfee Room Air Conditioners (models originally using RG06A6/BGE)
Controller Type	Button Control
Maximum Range	10 Meters
Special Feature	Fahrenheit/Celsius Display, Green Backlight
Power Source	2 x AAA Batteries (not included)

8. WARRANTY AND SUPPORT

For warranty information or technical support regarding your YAOHUIMI RG06A6/BGE replacement remote control, please refer to the documentation provided with your purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.

Related Documents - RG06A6/BGE

	<p>Air Conditioner Remote Control Owner's Manual - R09B/BGE</p> <p>Comprehensive user manual for the R09B/BGE air conditioner remote control, detailing its features, operation modes (Cooling, Fan, Dry, Auto), timer settings, clock adjustment, battery replacement, and troubleshooting tips.</p>
	<p>Instrukcja Obsługi Klimatyzatorów Midea Typu Split - Serie Fairwind i Premier</p> <p>Kompleksowa instrukcja obsługi dla klimatyzatorów Midea serii Fairwind i Premier, obejmująca obsługę, konserwację, rozwiązywanie problemów oraz użytkowanie pilota zdalnego sterowania.</p>
	<p>Keystone R09B/BGE Air Conditioner Remote Controller Owner's Manual</p> <p>Comprehensive owner's manual for the Keystone R09B/BGE air conditioner remote controller. Learn about features, operations, timer settings, specifications, and handling instructions.</p>
	<p>Air Conditioner Remote Controller Manual and Features - R09B/BGE</p> <p>Comprehensive guide to the R09B/BGE air conditioner remote controller, detailing its features, modes, timer functions, indicators, and operational instructions for optimal use.</p>



Theben Remote Control Compatibility List

Hersteller	Modell	Typ	Farbe	Material	Abmessungen (mm)	Gewicht (g)	Temperaturbereich (°C)	Relativfeuchtigkeit (%)	Druckbereich (hPa)	Druckhöhe (m)	Druckgeschwindigkeit (m/s)	Druckdauer (s)	Druckfrequenz (Hz)	Druckamplitude (V)	Druckbreite (mm)	Drucktiefe (mm)	Druckdicke (mm)	Druckstärke (mm)	Druckbreite (mm)	Drucktiefe (mm)	Druckdicke (mm)	Druckstärke (mm)
...

[Theben Remote Control Compatibility List](#)

A comprehensive compatibility list of remote controls for various manufacturers, compatible with Theben AC IR1 KNX and LUXORliving AC IR1 systems. This list details manufacturers and their corresponding remote control model numbers.



[Pitsos Air Conditioner Remote Control User Manual](#)

This manual provides instructions on how to use the Pitsos remote control for air conditioners, covering button functions, operation modes, and timer settings.