

YAOHUIMI A420210928-(R51)-83

YAOHUIMI Replacement Remote Control User Manual

For Midea Everstar A/C Models MPM-08CR-BB4 and MPM-07CR-BB4

INTRODUCTION

This manual provides comprehensive instructions for the YAOHUIMI replacement remote control, designed for use with Midea Everstar A/C Air Conditioner models MPM-08CR-BB4 and MPM-07CR-BB4. This remote offers an updated design and functionality, including a green backlight and the ability to display temperature in both Fahrenheit and Celsius.

Important Note:

- This is a dedicated replacement remote control, not a universal remote.
- Ensure your air conditioner model is MPM-08CR-BB4 or MPM-07CR-BB4 for compatibility.
- The appearance of this remote may differ from your original unit, but it is fully compatible with the specified models.





Image: The YAOHUI MI replacement remote control, featuring a clear display and various function buttons.

SETUP

Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

Caution:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the remote control will not be used for an extended period.

OPERATING INSTRUCTIONS

Point the remote control directly at the air conditioner's receiver when operating.

Remote Control Layout and Functions



UPGRADE!

Display in Fahrenheit



Display in Celsius



°C ⇌ °F



GREEN BACKLIGHT



Image: Overview of the remote control highlighting key features like Fahrenheit/Celsius display and green backlight.

ON/OFF Button: Press to turn the air conditioner on or off.

MODE Button: Cycles through operating modes:

- **AUTO:** Automatically selects cooling or heating based on room temperature.
- **COOL:** Provides cooling.
- **DRY:** Dehumidifies the room.
- **HEAT:** Provides heating (if supported by your A/C unit).

TEMP ▲ / ▼ Buttons: Adjust the desired temperature setting.

FAN SPEED Button: Cycles through fan speeds: HIGH, MED (Medium), LOW.

SWING Button: Activates or deactivates the automatic louver swing function.

SLEEP Button: Activates the sleep mode for comfortable nighttime operation.

TIMER ON / TIMER OFF Buttons: Set a timer for the air conditioner to turn on or off automatically.

RESET LOCK Button: Used for specific functions or to reset settings (refer to your A/C unit's manual for details).

LED DISPLAY Button: Toggles the LED display on the air conditioner unit.

TURBO Button: Activates maximum cooling or heating for rapid temperature adjustment.

AIR DIRECTION Button: Adjusts the direction of the airflow.

Display Features

Display in both Fahrenheit and Celsius

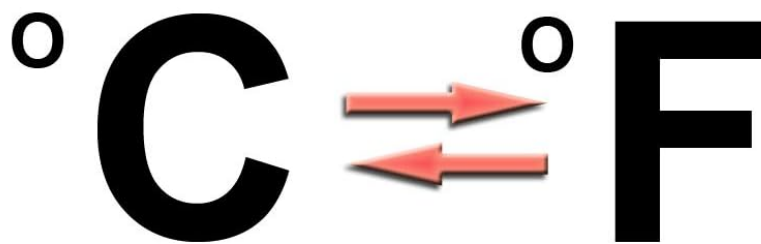
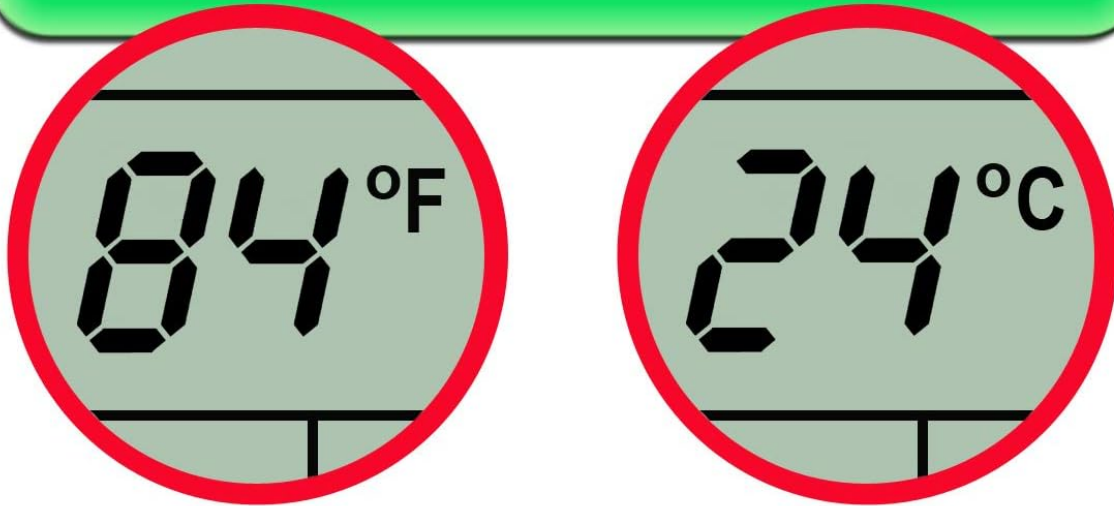


Image: The remote control's display showing temperature in both Fahrenheit and Celsius.

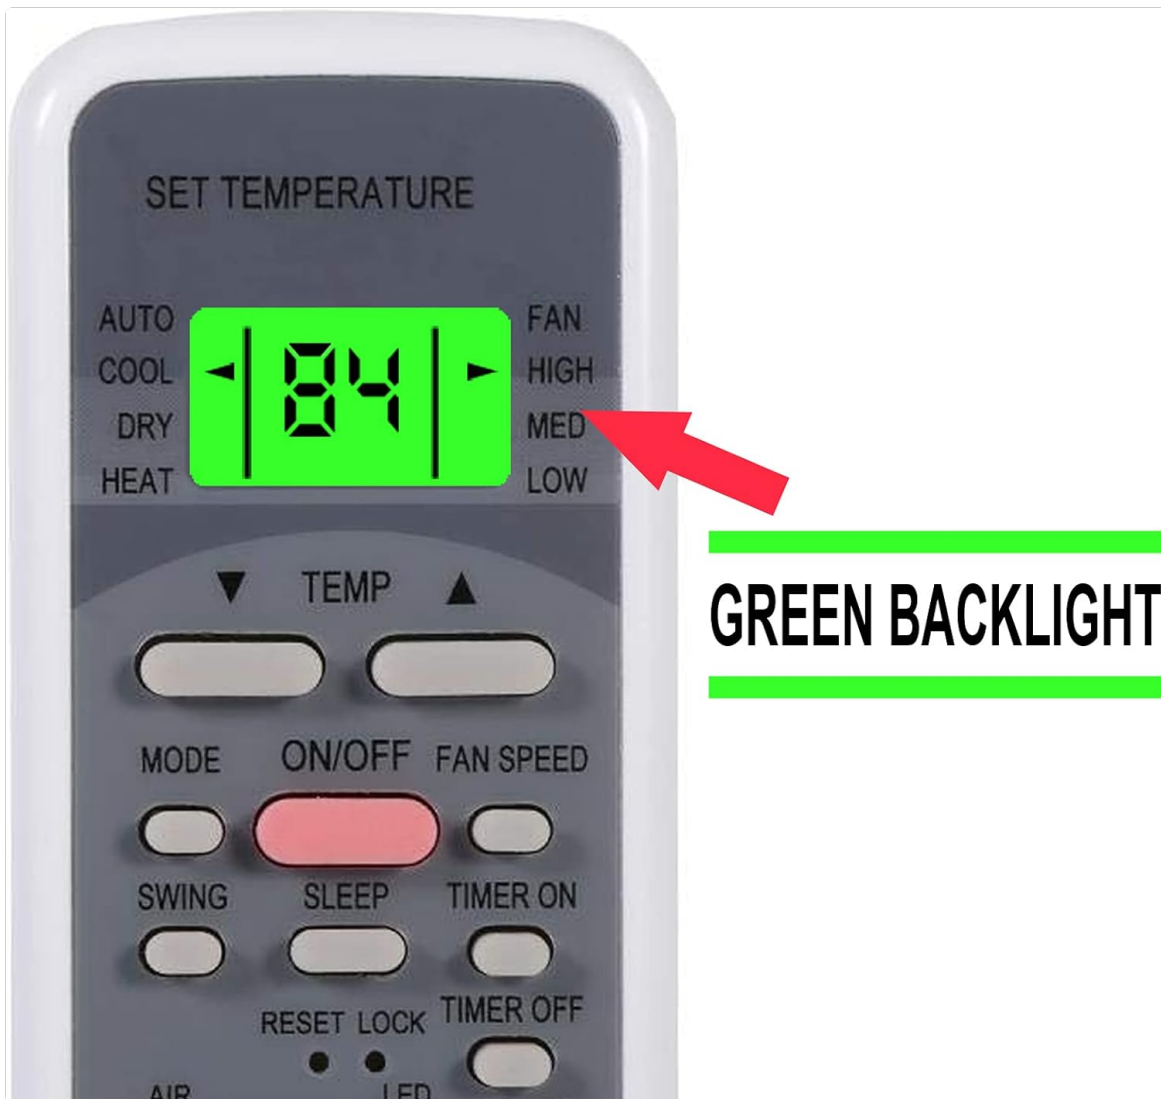


Image: A close-up of the remote control's display, illustrating the green backlight for improved visibility.

- **Fahrenheit and Celsius Display:** The remote control can display the temperature in both Fahrenheit (°F) and Celsius (°C). The unit automatically switches or can be toggled by a specific button combination (refer to your A/C unit's manual if a dedicated button is not present on the remote).
- **Green Backlight:** The display features a green backlight, making it easy and convenient to operate the remote control in low-light conditions or at night.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's range decreases or the display becomes dim. Always replace both batteries simultaneously.
- **Storage:** If not using the remote for an extended period, remove the batteries to prevent leakage and damage.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the air conditioner's receiver.
 - Confirm you are within the effective operating range of the air conditioner.
- **Display is dim or blank:**
 - Replace the batteries.
- **Air conditioner not performing as expected:**
 - Verify the correct mode (COOL, HEAT, DRY, AUTO) is selected.
 - Check the temperature setting.
 - Ensure the air conditioner unit itself is functioning correctly.

SPECIFICATIONS

Brand	YAOHUIMI
Model Number	A420210928-(R51)-83
Compatible Devices	Midea Everstar A/C Air Conditioner (MPM-08CR-BB4, MPM-07CR-BB4)
Controller Type	Button Control
Special Features	Fahrenheit and Celsius Display, Green Backlight
Power Source	2 x AAA Batteries (not included)

WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the seller or the original purchase documentation. For technical support or further assistance, please contact the seller directly through your purchase platform.