

Kisonli G6

Kisonli G6 Wireless Alarm Clock Bluetooth Speaker User Manual

Brand: Kisonli | Model: G6



INTRODUCTION

Thank you for choosing the Kisonli G6 Wireless Alarm Clock Bluetooth Speaker. This device combines a high-quality Bluetooth speaker with an alarm clock and mirror display, offering versatile audio playback and timekeeping functions. It features Bluetooth 5.0 for stable connections, supports multiple input sources like USB, SD card, and AUX, and includes a built-in microphone for hands-free calls. With its compact and modern design, the Kisonli G6 is an ideal companion for your bedroom or office.

PRODUCT OVERVIEW



Figure 1: Front view of the Kisonli G6 speaker, showing the digital time display and the Kisonli logo. The mirrored surface reflects the surroundings.



Figure 2: Side view of the Kisonli G6, highlighting the power switch, USB-C charging port, AUX input, and USB host port for media playback.



Figure 3: Top view of the Kisonli G6, showing the control buttons for playback, volume, and mode selection.



Figure 4: Rear view of the Kisonli G6, displaying the speaker grille for audio output.

SETUP

1. **Charging the Device:** Before first use, fully charge the Kisonli G6. Connect the provided USB charging cable to the USB DC port on the side of the speaker and the other end to a USB power adapter (not included). The charging indicator will show the charging status.
2. **Power On/Off:** Locate the ON/OFF switch on the side of the device. Slide it to the "ON" position to power on the speaker. Slide it to "OFF" to power off.
3. **Initial Time Setting:** Upon first power-on or after a long period of inactivity, you may need to set the time. Refer to the "Operating" section for detailed instructions on setting the clock and alarm.
4. **Bluetooth Pairing:**
 - Ensure the speaker is powered on and in Bluetooth mode (indicated by "BT" on the display).
 - On your mobile device, enable Bluetooth and search for available devices.
 - Select "Kisonli G6" from the list to pair. A voice prompt will confirm successful connection.

OPERATING INSTRUCTIONS

Mode Selection

Press the "M" (Mode) button on the top panel to cycle through available modes: Bluetooth, USB, TF Card (SD card), and AUX.

Clock and Alarm Setting

1. Setting the Time:

- In clock display mode, press and hold the "SET" button (usually indicated by a clock icon or 'SET').
- The hour digits will start blinking. Use the "+" and "-" buttons to adjust the hour.
- Press "SET" again to move to minute adjustment. Use "+" and "-" to adjust minutes.
- Press "SET" one more time to confirm and exit time setting.

2. Setting the Alarm:

- In clock display mode, short press the "ALARM" button (usually indicated by an alarm icon).
- The alarm hour digits will blink. Use "+" and "-" to set the alarm hour.
- Press "ALARM" again to set the alarm minutes. Use "+" and "-" to adjust.
- Press "ALARM" one more time to confirm. You may be prompted to select an alarm sound or enable/disable the alarm.
- To turn off a sounding alarm, press any button. To disable the alarm function, refer to the specific alarm icon on the display and toggle it off using the "ALARM" button or "SET" button.

Audio Playback

- **Bluetooth Mode:** After successful pairing, play audio from your connected device. Use the speaker's play/pause, next/previous track buttons, or your device's controls.
- **USB/TF Card Mode:** Insert a USB flash drive or TF (micro SD) card into the respective port. The speaker will automatically switch to the correct mode and begin playing MP3 audio files. Use the play/pause, next/previous track buttons to control playback.
- **AUX Mode:** Connect an external audio device (e.g., MP3 player, computer) to the AUX port using a 3.5mm audio cable. Switch the speaker to AUX mode. Audio will play from the connected device.
- **Volume Control:** Use the volume up (+) and volume down (-) buttons on the top panel to adjust the speaker's volume.

Hands-Free Calling

When connected via Bluetooth to a smartphone, the built-in microphone allows for hands-free calls. When a call comes in, the speaker will ring. Press the "Play/Pause" button to answer or end a call. Press and hold to reject a call.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the speaker. Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the finish.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use, to maintain battery health.

- **Water Resistance:** This device is not water-resistant. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Battery is low or depleted.	Charge the device using the USB-C cable. Ensure the power switch is in the "ON" position.
No sound from the speaker.	Volume is too low; incorrect mode selected; device not properly connected.	Increase the volume. Press the "M" button to select the correct input mode (Bluetooth, USB, TF, AUX). Re-pair Bluetooth or re-connect cables.
Bluetooth pairing fails.	Speaker is not in pairing mode; device is too far; interference.	Ensure the speaker is in Bluetooth mode and discoverable. Move your device closer to the speaker. Avoid strong electromagnetic interference. Try restarting both devices.
Alarm does not sound.	Alarm is not set or is disabled; volume is too low.	Verify the alarm time and ensure the alarm function is enabled. Increase the volume.
Time display is incorrect.	Time was not set correctly or battery was fully depleted.	Follow the "Setting the Time" instructions in the Operating section to reset the clock.

SPECIFICATIONS

Feature	Detail
Brand	Kisonli
Model Number	G6
Color	Black
Display Type	Digital
Special Features	Bluetooth, Wireless, Mirror Alarm Function, Hands-free Calling
Connectivity	Bluetooth 5.0, USB, TF Card (SD Card), AUX
Power Source	Battery Powered
Battery Type	1 Lithium Ion (Included)
Battery Capacity	2000 mAh (Built-in)
Product Dimensions (L x W x H)	40 x 3.81 x 40 cm
Product Weight	100 grams
Room Type	Bedroom

WARRANTY AND SUPPORT

Specific warranty information for the Kisonli G6 is not provided in the product details. Please refer to the warranty card included with your purchase or contact Kisonli customer support for details regarding warranty coverage and technical assistance. You can typically find contact information on the manufacturer's official website or on the product packaging.

For further assistance, please visit the [product page on Amazon.eg](#) or contact your retailer.

