

## Moulinex DD656D27

# Moulinex Quickchef Lite Hand Blender DD656D27 User Manual

Model: DD656D27

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using your Moulinex Quickchef Lite Hand Blender. Keep this manual for future reference.

- **Electrical Safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Do not immerse the motor unit in water or any other liquid. Always unplug the appliance after use and before cleaning.
- **Blade Safety:** The blades are very sharp. Handle them with extreme care, especially when assembling, disassembling, or cleaning.
- **Children:** This appliance should not be used by children. Keep the appliance and its cord out of reach of children.
- **Supervision:** Close supervision is necessary when any appliance is used near children.
- **Damage:** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact authorized service for examination, repair, or electrical or mechanical adjustment.
- **Attachments:** The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- **Hot Liquids:** Exercise extreme caution when blending hot liquids, as hot steam can cause burns.
- **Overfilling:** Do not overfill the blending beaker or chopper bowl.
- **Moving Parts:** Avoid contact with moving parts.

## 2. PRODUCT OVERVIEW

---

The Moulinex Quickchef Lite Hand Blender DD656D27 is a versatile kitchen tool designed for efficient blending, chopping, and whisking. It features a powerful 1000W motor and exclusive Powelix blade technology for optimal performance.



Figure 2.1: Moulinex Quickchef Lite Hand Blender with all included attachments.

### Components:

- **A. Motor Unit:** The main body containing the 1000W motor and speed control dial.
- **B. Blending Foot:** Stainless steel shaft with Powelix blades for blending.
- **C. 800ml Measuring Beaker:** For blending liquids and measuring ingredients.
- **D. 500ml Chopper Bowl with Blade:** For chopping various ingredients.
- **E. Whisk Attachment:** For whisking and beating ingredients.





Figure 2.2: The main motor unit of the hand blender.



Figure 2.3: The 800ml measuring beaker.



Figure 2.4: The hand blender assembled with the chopper attachment.

### 3. SETUP AND ASSEMBLY

#### 3.1 Assembling the Blending Foot

1. Align the blending foot (B) with the motor unit (A).
2. Twist the blending foot clockwise until it locks securely into place.

### 3.2 Assembling the Chopper Attachment

1. Carefully place the chopper blade onto the central pin inside the chopper bowl (D).
2. Add your ingredients to the chopper bowl.
3. Place the chopper lid onto the bowl, ensuring it is properly seated.
4. Attach the motor unit (A) to the chopper lid, twisting until it locks.

### 3.3 Assembling the Whisk Attachment

1. Insert the whisk (E) into the whisk adapter.
2. Attach the whisk adapter to the motor unit (A), twisting until it locks.

## 4. OPERATING INSTRUCTIONS

---

The Moulinex Quickchef Lite Hand Blender features 20 adjustable speeds and a Turbo function for optimal control and performance.

Your browser does not support the video tag.

Video 4.1: Demonstration of the Moulinex Quickchef Lite Hand Blender's Powelix technology and blending capabilities.

### 4.1 General Blending (Blending Foot)

1. Assemble the blending foot (B) to the motor unit (A).
2. Place the ingredients into the 800ml measuring beaker (C) or another suitable container.
3. Immerse the blending foot into the ingredients.
4. Plug in the appliance.
5. Adjust the speed using the dial on top of the motor unit. You can change speeds during operation without stopping.
6. Press the power button to start blending. For maximum power, press the 'Turbo' button.
7. Blend until desired consistency is achieved.
8. Release the power button and unplug the appliance.



Figure 4.1: Ergonomic design for comfortable and secure handling.

## 4.2 Using the Chopper Attachment

1. Assemble the chopper attachment as described in Section 3.2.
2. Plug in the appliance.
3. Press the power button to start chopping. Use short pulses for coarse chopping or continuous operation for finer results.
4. Release the power button and unplug the appliance.



Figure 4.2: The 500ml chopper bowl efficiently processes various ingredients.

## 4.3 Using the Whisk Attachment

1. Assemble the whisk attachment as described in Section 3.3.
2. Place ingredients into a suitable bowl.
3. Plug in the appliance.
4. Press the power button to start whisking. Adjust speed as needed.
5. Release the power button and unplug the appliance.



Figure 4.3: The whisk attachment is ideal for whipping cream or beating eggs.

#### **4.4 Powelix Blade Technology**

The Moulinex Quickchef Lite Hand Blender is equipped with exclusive Powelix blade technology. This innovative design combines optimized cutting angle, extremely sharpened blades, and advanced geometry to deliver up to 30% faster performance and incredibly smooth results, even with the toughest ingredients.



Figure 4.4: Close-up of the Powelix blades, engineered for superior blending.

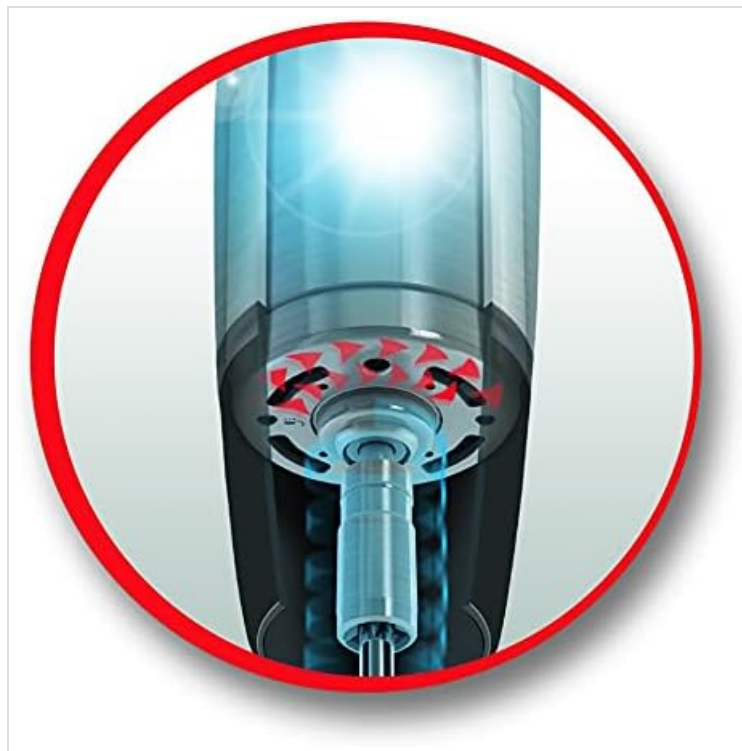


Figure 4.5: Internal view of the Powelix blade technology.

## 5. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your hand blender.

- **Always unplug** the appliance before cleaning.
- **Motor Unit (A):** Wipe the motor unit with a damp cloth. Do not immerse it in water or any other liquid.
- **Blending Foot (B), Beaker (C), Chopper Bowl (D), Chopper Blade, Whisk (E), and Whisk Adapter:** These parts are dishwasher safe. Alternatively, they can be washed by hand in warm soapy water. Rinse thoroughly and dry.

- **Handle Blades with Care:** Be extremely careful when cleaning the chopper blade and blending foot blades as they are very sharp.
- **Storage:** Store the hand blender and its attachments in a dry place.

## 6. TROUBLESHOOTING

If you encounter any issues with your hand blender, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in correctly. Power outlet not working.	Check power plug connection. Test outlet with another appliance.
Poor blending/chopping results.	Too many ingredients. Ingredients too large/hard. Incorrect speed setting.	Reduce quantity of ingredients. Cut ingredients into smaller pieces. Increase speed or use Turbo function.
Appliance stops during operation.	Overheating protection activated.	Unplug and let the appliance cool down for at least 15 minutes before resuming use.
Attachments not locking securely.	Incorrect alignment.	Ensure attachments are aligned correctly and twisted until they click into place.

If the problem persists after trying these solutions, please contact customer support.

## 7. SPECIFICATIONS

- **Brand:** Moulinex
- **Model:** DD656D27
- **Color:** Silver
- **Power:** 1000 Watts
- **Voltage:** 230 Volts
- **Number of Speeds:** 20 (Adjustable dial)
- **Control Type:** Knob
- **Blending Foot Material:** Stainless Steel
- **Blade Material:** Stainless Steel (Powelix Technology)
- **Beaker Capacity:** 800 ml
- **Chopper Bowl Capacity:** 500 ml
- **Included Components:** Hand blender motor unit, blending foot, 800ml beaker, 500ml chopper with blade, whisk attachment.
- **Product Dimensions (DxWxH):** 25.2 x 14.6 x 25.8 cm
- **Item Weight:** 1.72 kg
- **Special Feature:** Portable
- **Dishwasher Safe Parts:** Yes (excluding motor unit)

## 8. WARRANTY AND SUPPORT

Your Moulinex Quickchef Lite Hand Blender DD656D27 comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use. It does not cover damage resulting from misuse, negligence, accident, alteration, or unauthorized repair.

For warranty claims, technical support, or service inquiries, please refer to the contact information provided with your purchase documentation or visit the official Moulinex website.

Moulinex is committed to product reparability for 10 years. This commitment ensures that spare parts are available for a long period, supporting sustainability and extending the life of your appliance.