

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HYUNDAI](#) /

› [HYUNDAI HYtab Pro 8WB1 8-inch Android Tablet User Manual](#)

## HYUNDAI HT8WB

# HYUNDAI HYtab Pro 8WB1 8-inch Android Tablet User Manual

MODEL: HT8WB

[Introduction](#)   [Product Overview](#)   [Getting Started](#)   [Basic](#)  
[Operation](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. Introduction

Welcome to the user manual for your HYUNDAI HYtab Pro 8WB1 Android Tablet. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your device. Please read this manual thoroughly to ensure optimal performance and longevity of your tablet.

## 2. Product Overview

The HYUNDAI HYtab Pro 8WB1 is an 8-inch Android tablet designed for versatile use, featuring a Full HD IPS screen, a quad-core processor, 3GB RAM, and 32GB of internal storage. It operates on Android 11 and supports AX WiFi 6 and Bluetooth 5.0 for reliable connectivity.

### Key Features

- Display:** 8-inch 1200x1920 Full HD IPS screen for clear visuals.
- Performance:** Quad-Core Processor with 3GB RAM for smooth operation.
- Storage:** 32GB internal storage, expandable up to 256GB via microSD card.
- Operating System:** Android 11.
- Connectivity:** AX WiFi 6 (802.11ax) and Bluetooth 5.0.
- Cameras:** 2MP front camera and 5MP rear camera.



**ANDROID™ 11**



**32GB**

Storage



**Quad-Core**

Processor



**WiFi**

802.11 B/G/N/AX



**Bluetooth**

Connectivity



**8"**

Screen Size



Image: Overview of the HYUNDAI HYtab Pro 8WB1's core specifications and features.

## Tablet Components

Familiarize yourself with the physical components and ports of your tablet:



<b>1</b>	USB Type-C	<b>6</b>	Power
<b>2</b>	Expandable microSD Slot	<b>7</b>	Rear Camera
<b>3</b>	3.5mm Audio Jack	<b>8</b>	Flash
<b>4</b>	Front Camera	<b>9</b>	Speakers
<b>5</b>	Volume +/-		

Image: Labeled diagram illustrating the various ports, buttons, and camera locations on the HYtab Pro 8WB1 tablet.

- 1. USB Type-C:** For charging and data transfer.
- 2. Expandable microSD Slot:** To insert a microSD card for additional storage.
- 3. 3.5mm Audio Jack:** For connecting headphones or external speakers.
- 4. Front Camera:** For video calls and selfies.
- 5. Volume +/-:** To adjust the audio volume.
- 6. Power Button:** To turn the tablet on/off or put it to sleep.
- 7. Rear Camera:** For taking photos and videos.
- 8. Flash:** Provides illumination for the rear camera.
- 9. Speakers:** For audio output.

### 3. Getting Started

### 3.1 Charging the Tablet

Before first use, fully charge your tablet. Connect the provided USB Type-C cable to the tablet's USB Type-C port and the other end to a compatible power adapter. The battery indicator on the screen will show charging status.

### 3.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the HYUNDAI logo appears.
- **To Power Off:** Press and hold the Power button until a menu appears, then select 'Power off'.
- **To Sleep/Wake:** Briefly press the Power button.

### 3.3 Initial Android Setup

Upon first power-on, the tablet will guide you through the initial setup process. This includes selecting your language, connecting to a Wi-Fi network, setting up your Google account, and configuring basic device settings.

### 3.4 Inserting a microSD Card

To expand your tablet's storage, you can insert a microSD card (up to 256GB) into the dedicated slot.

1. Locate the microSD card slot on the side of the tablet.
2. Gently insert the microSD card into the slot with the gold contacts facing down until it clicks into place.
3. The tablet will detect the new storage. You may be prompted to format the card for optimal use with the device.



Image: Demonstrating the insertion of a microSD card into the tablet for storage expansion.

## 4. Basic Operation

### 4.1 Touchscreen Gestures

- **Tap:** To select an item or open an app.
- **Touch & Hold:** To access contextual menus or move items.
- **Swipe:** To scroll through screens or lists.

- **Pinch:** To zoom in or out on images and web pages.

## 4.2 Connecting to Wi-Fi

Your tablet supports AX WiFi 6 for fast and reliable internet access.

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list.
4. Enter the password if prompted, then tap **Connect**.

## 4.3 Pairing Bluetooth Devices

Connect Bluetooth-enabled accessories like headphones or speakers.

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure your Bluetooth device is in pairing mode.
4. Select your device from the list of available devices and follow any on-screen prompts to complete pairing.

# Capture & Stay Connected

2MP Front Cam / 5MP Rear Cam



WiFi  
802.11 B/G/N/AX



Bluetooth 5.0



4000mAh

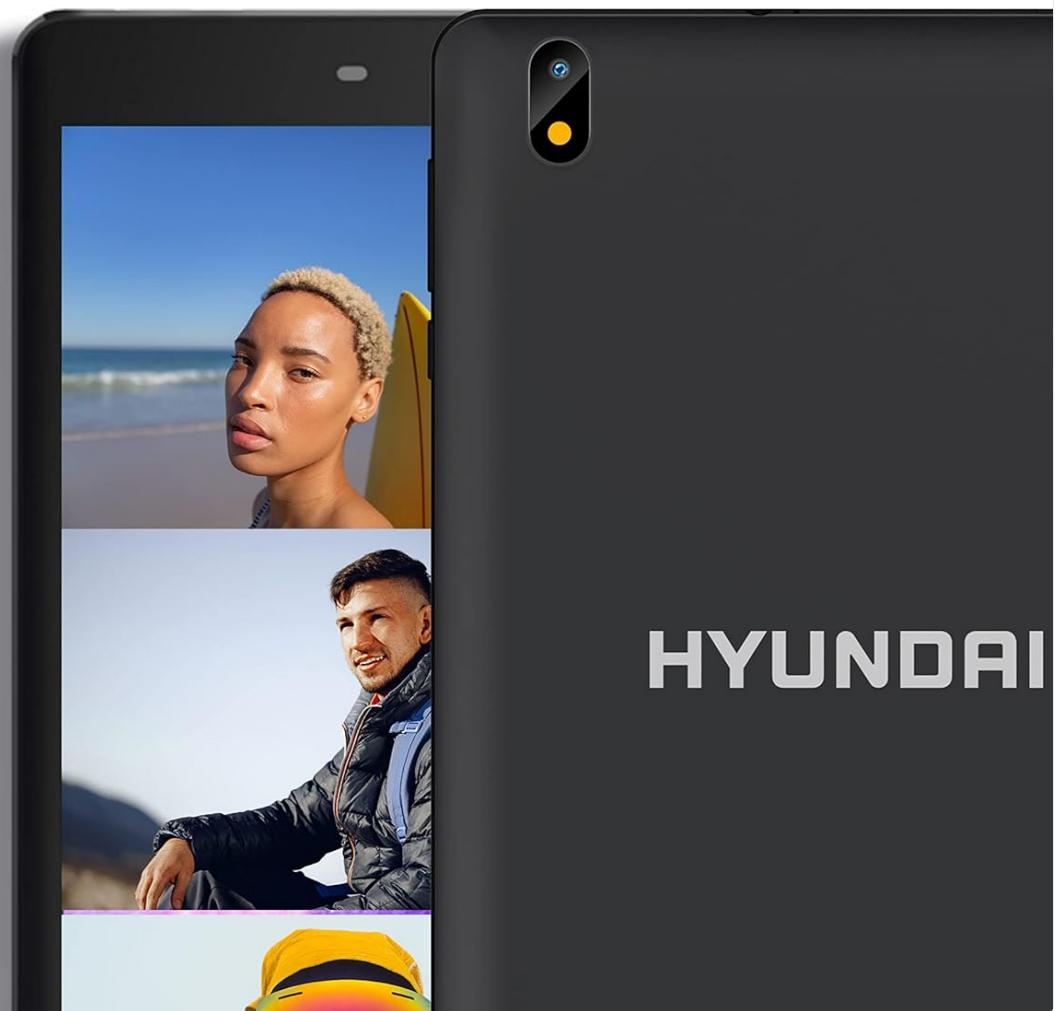


Image: Illustrates the tablet's connectivity features and camera capabilities.

## 4.4 Using the Cameras

The tablet features a 2MP front camera and a 5MP rear camera.

1. Open the **Camera** app from your home screen or app drawer.
2. Tap the camera switch icon to toggle between the front and rear cameras.
3. Tap the shutter button to take a photo or start/stop video recording.

## 4.5 Managing Storage

Your tablet comes with 32GB of internal storage. You can view and manage your storage usage in **Settings > Storage**. To free up space, consider uninstalling unused apps, deleting old files, or moving media to a microSD card.

## 4.6 Display Settings

The 8-inch Full HD IPS display offers a clear viewing experience. Adjust brightness, wallpaper, and sleep settings in **Settings > Display**.

# Stunning Display, Immersive Experience

8" / 1200x1920 FHD IPS / Integrated Speaker / 32GB



Image: The tablet's display showcasing its Full HD IPS screen quality.

## 5. Maintenance and Care

### 5.1 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials, which can damage the surface.

### 5.2 Battery Optimization

- To prolong battery life, reduce screen brightness.
- Close unused applications running in the background.
- Turn off Wi-Fi and Bluetooth when not in use.
- Avoid exposing the tablet to extreme temperatures.

## 5.3 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings > System > System update**.

## 6. Troubleshooting

This section addresses common issues you might encounter with your HYUNDAI HYtab Pro 8WB1 tablet.

Issue	Possible Solution
Tablet does not power on	Ensure the tablet is charged. Connect it to a power source for at least 30 minutes, then try powering on again. If unresponsive, perform a force restart by holding the Power button for 10-15 seconds.
Slow performance or freezing	Close unnecessary background applications. Clear app caches in <b>Settings &gt; Apps</b> . Restart the tablet. Ensure sufficient free storage space.
Wi-Fi connection issues	Ensure Wi-Fi is enabled in settings. Restart your Wi-Fi router. Forget the network and reconnect. Try connecting to a different Wi-Fi network to isolate the issue.
Bluetooth device not pairing	Ensure Bluetooth is enabled on both the tablet and the accessory. Place devices close to each other. Put the accessory in pairing mode. Restart both devices.
Rapid battery drain	Reduce screen brightness. Disable Wi-Fi, Bluetooth, and GPS when not in use. Close background apps. Check battery usage in <b>Settings &gt; Battery</b> to identify power-hungry apps.

## Factory Reset

If issues persist, a factory reset may resolve them. **Warning:** This will erase all data on your tablet. Back up important data before proceeding.

1. Go to **Settings > System > Reset options**.
2. Select **Erase all data (factory reset)**.
3. Confirm your choice and follow the on-screen instructions.

## 7. Specifications

Detailed technical specifications for the HYUNDAI HYtab Pro 8WB1 tablet:

Feature	Detail
Model Name	HT8WB1RBK01 (HT8WB)
Screen Size	8 Inches
Screen Resolution	1920x1200 (FHD IPS)
Processor	Quad-Core, 1.6 GHz
RAM	3 GB

Feature	Detail
Internal Storage	32 GB SSD
Expandable Storage	microSD, up to 256 GB
Operating System	Android 11
Wireless Type	802.11ax (AX WiFi 6)
Bluetooth	Bluetooth 5.0
Rear Camera	5 MP
Front Camera	2 MP
Item Weight	1.56 pounds
Product Dimensions	8.2 x 4.9 x 0.35 inches
Color	Black
Power Source	Battery Powered

## 8. Warranty and Support

For warranty information and technical support, please refer to the warranty card included with your product or visit the official HYUNDAI customer support website. Keep your proof of purchase for warranty claims.