

[Manuals.plus](#) /

› [Sharper Image](#) /

› SHARPER IMAGE Powerboost Move - Mini Massage Gun User Manual

Sharper Image 1014502

SHARPER IMAGE Powerboost Move - Mini Massage Gun User Manual

Brand: Sharper Image | Model: 1014502

INTRODUCTION

The SHARPER IMAGE Powerboost Move Mini Massage Gun is designed to provide professional-grade deep tissue percussion for muscle recovery and pain relief. Its compact and lightweight design makes it ideal for on-the-go use, offering powerful massage with a quiet brushless motor. This manual provides essential information for setting up, operating, and maintaining your device.



Image: The Sharper Image Powerboost Move Mini Massage Gun, showcasing its compact size, four attachments, and sleek design.

 
What's Included

Your SHARPER IMAGE Powerboost Move package includes the following components:

- SHARPER IMAGE Powerboost Move Massage Gun
- 4 Interchangeable Massage Attachments:
 - Round Head
 - Cone Head
 - Fork Head
 - Flat Head

- USB Charging Cable
- Carrying Case (Pouch)
- User Manual (this document)

SHARPER IMAGE®



WHISPER DRIVE



4 ATTACHMENTS



4 SPEEDS



Image: The massage gun in use, demonstrating its compact size and highlighting key features such as quiet operation and long battery life.

SETUP

Initial Charging

1. Remove the massage gun from its packaging.
2. Charge the battery fully before first use. The device features a USB charging port.
3. The battery indicator lights will show charging progress. A full charge provides up to 2 hours of runtime.

Attaching Massage Heads

- Select the desired attachment based on the area of your body you want to massage and the desired intensity.
- Gently insert the stem of the attachment into the opening on the massage gun until it is securely in place.
- To remove, simply pull the attachment straight out.

SHARPER IMAGE®



01 SPORTS RECOVERY

Recover post-workout with deep tissue massage

02 QUIET DRIVE

Enjoy massage anywhere with the quiet brushless motor

03 ATTACHMENTS

Choose from 4 attachments – round, cone, fork and flat

04 VARIABLE SPEED

Customize your recovery with 4 massage intensities

05 COMPACT POWER

Take on the go with up to 2 hours runtime per charge

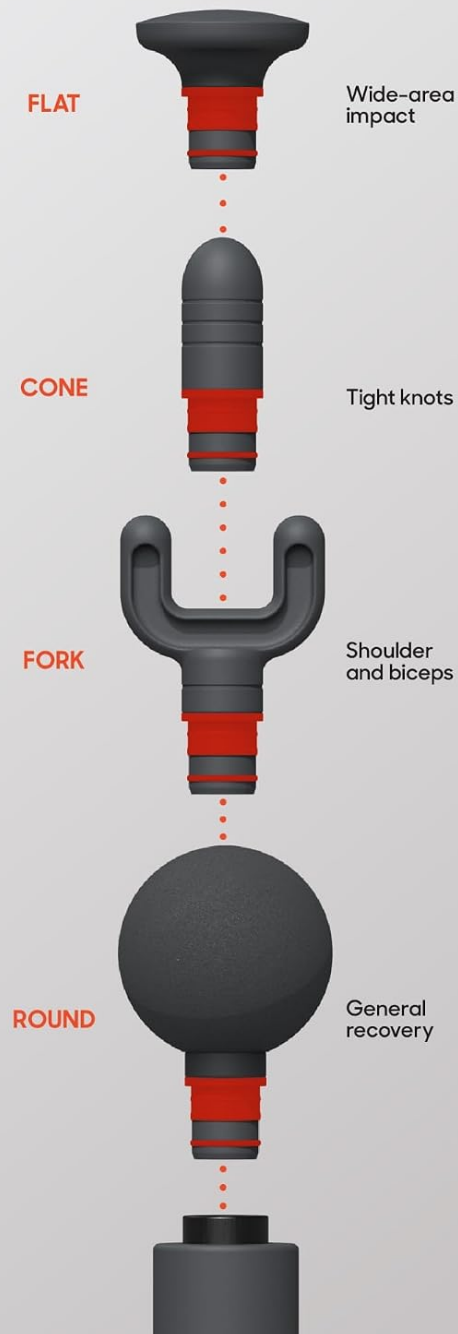 


Image: A visual guide to the four massage attachments and their recommended applications for different muscle groups.

OPERATING INSTRUCTIONS

Power On/Off

1. To turn on the device, press and hold the power button located at the bottom of the handle.
2. To turn off the device, press and hold the power button again.

Adjusting Intensity Levels

- The Powerboost Move offers 4 variable speeds. Once powered on, tap the power button to cycle through the intensity levels.
- Indicator lights on the device will illuminate to show the current speed setting.

Dynamic Response Mode

- The device features a dynamic response mode where the intensity of the percussion adapts to the pressure you apply.
- To activate this mode, double-click the power button. The more pressure you apply, the faster the percussion will be.

Usage Guidelines

- Place the chosen attachment on the desired area of your body.
- Move the massage gun slowly and evenly over the area for a few minutes.
- Limit use to 15 minutes at a time per area to prevent overheating and ensure device longevity.

SHARPER IMAGE®

POWERBOOST MOVE

PORTABLE PERCUSSION MASSAGER



Image: The massage gun's key features including its durable alloy body, customizable compact power, and quiet drive technology.

SHARPER IMAGE®



PORTABLE RECOVERY

Take recovery everywhere you go.

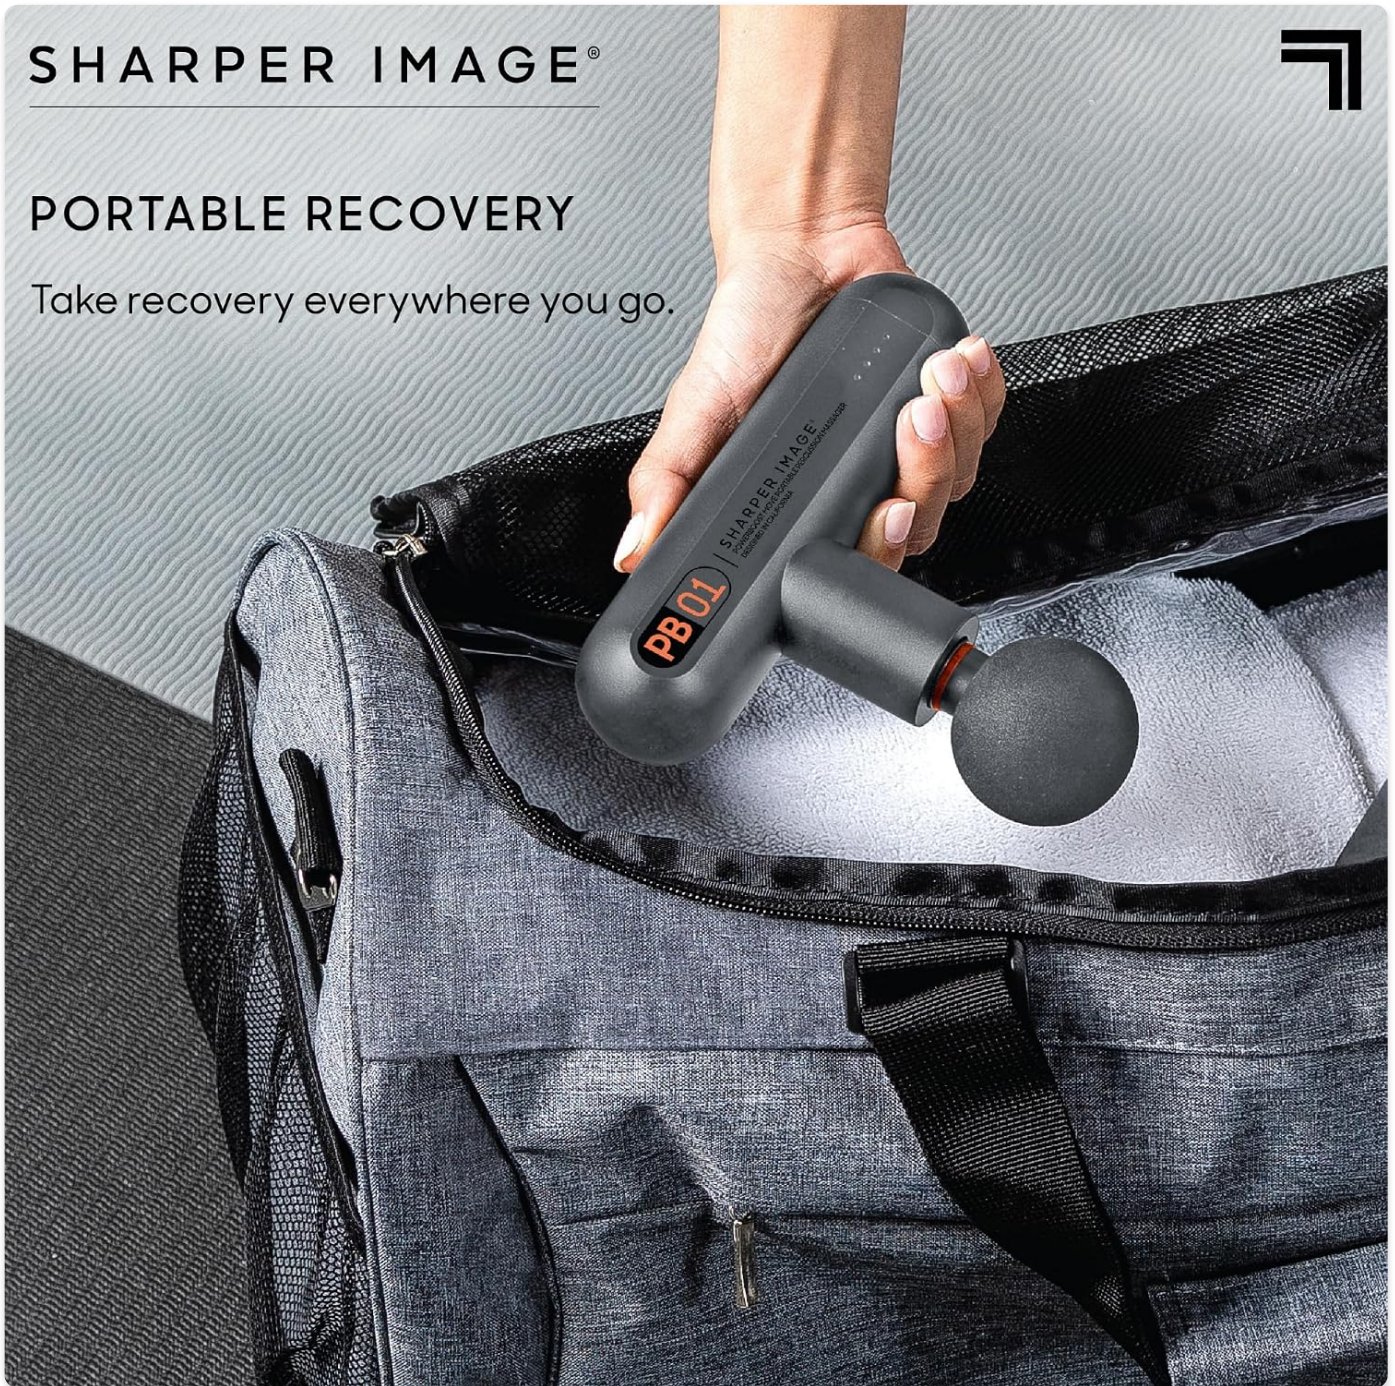 


Image: The compact massage gun being stored in a gym bag, illustrating its portability for recovery anywhere.

MESSAGE ATTACHMENTS

The Powerboost Move comes with four versatile massage nodes, each designed for specific muscle groups and massage types:

Round Head

Ideal for larger muscles and overall comfort. Provides a general, softer massage.

Cone Head

Designed for deep-tissue targeting and penetration, perfect for pinpointing stubborn knots.

Fork Head

Excellent for working out knots and tense spots, especially along the spine and neck, or for targeting specific muscle contours.

Flat Head

Provides deep impact and is suitable for general use across various muscle groups, offering a broader massage area.

SHARPER IMAGE®



FULL BODY MASSAGE

THE POWERBOOST MOVE
FROM SHARPER IMAGE
REPRESENTS THE FUTURE OF
MASSAGE TECHNOLOGY,
PROVIDING FOCUSED
ATTENTION TO TARGETED
MUSCLE GROUPS

#1 MASSAGE BRAND*

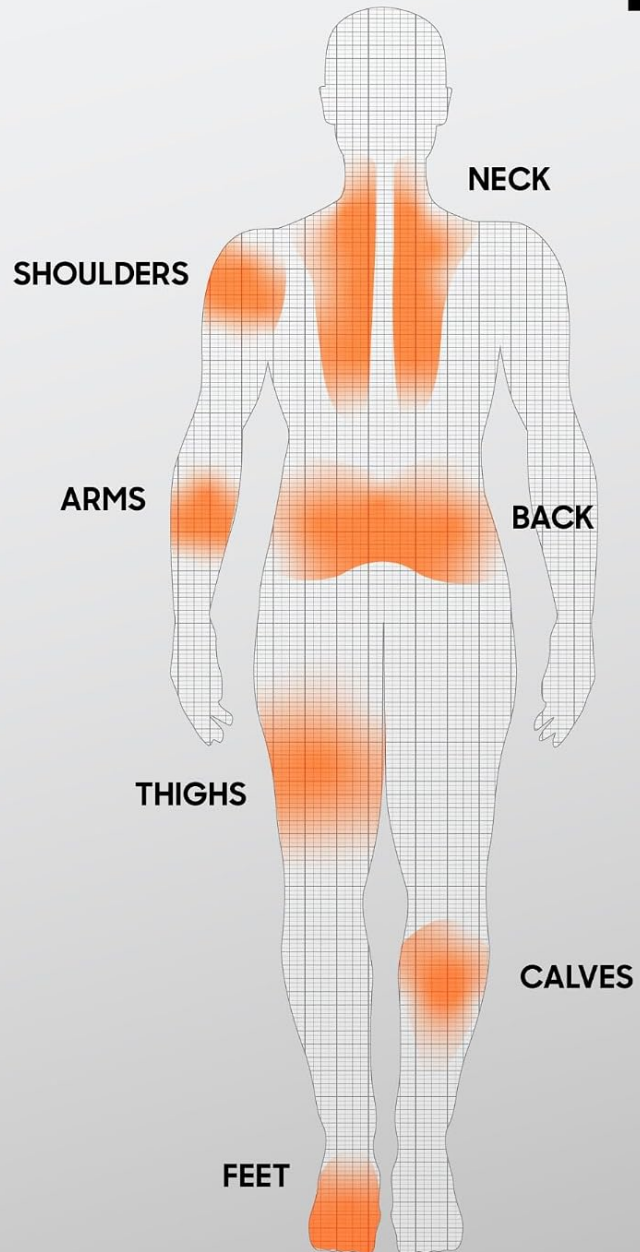 


Image: A visual representation of the human body indicating various muscle groups where the massage gun can be effectively used.

MAINTENANCE

Cleaning and Storage

- Always unplug the device and allow it to cool down after each use.

- Wipe the massage gun and attachments with a clean, damp cloth. Do not use abrasive cleaners or submerge the device in water.
- Store the massage gun and its attachments in a dry place, away from direct sunlight and heat sources.

Battery Care

- To prolong battery life, avoid completely draining the battery before recharging.
- If storing for an extended period, charge the device to approximately 50% capacity.

TROUBLESHOOTING

No specific troubleshooting steps are provided in the product information. If you encounter issues with your device, please ensure it is fully charged and that attachments are correctly secured. For persistent problems, refer to the official Sharper Image support channels.

SPECIFICATIONS

Feature	Detail
Product Dimensions	8.82 x 2.72 x 8.82 inches
Item Weight	1.1 Pounds
Item Model Number	1014502
Batteries	1 Lithium Ion battery required (included)
Power Source	Battery Powered
Material	Metal
Manufacturer	MerchSource
Date First Available	September 29, 2021

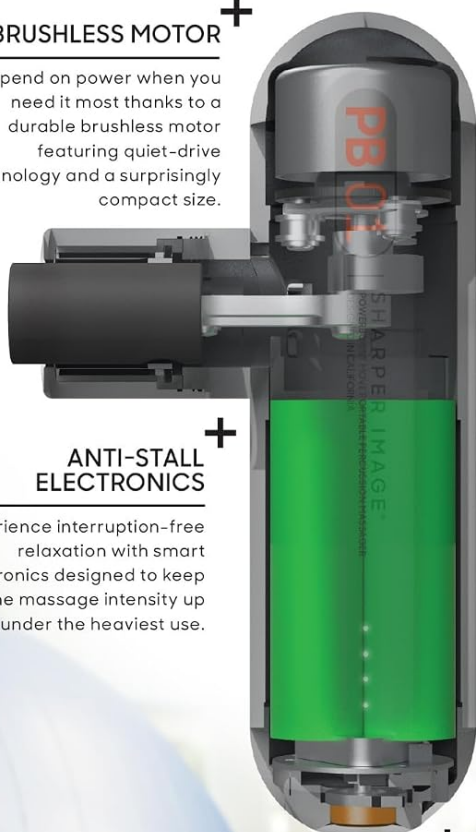 


Image: The physical dimensions of the massage gun, illustrating its compact and ergonomic design.

SHARPER IMAGE®

BRUSHLESS MOTOR +

Depend on power when you need it most thanks to a durable brushless motor featuring quiet-drive technology and a surprisingly compact size.



ANTI-STALL ELECTRONICS +

Experience interruption-free relaxation with smart electronics designed to keep the massage intensity up under the heaviest use.

LITHIUM ION BATTERIES +

Plug in and recharge the internal batteries for up to 2 hours of completely wireless massage – ideal for massage on the go.



Image: An internal diagram of the massage gun, highlighting its brushless motor, anti-stall electronics, and lithium-ion battery for efficient performance.

IMPORTANT SAFETY INFORMATION

- Always use on bare skin.
- Avoid bones and joints.
- Do not use on injured or inflamed areas.
- Limit use to 15 minutes at a time per area.
- Unplug and allow the device to cool down after each use.
- Do not submerge in water.
- Keep away from heat sources.
- Do not use while sleeping or unconscious.

- Store in a dry place.
- Keep out of reach of children.

WARRANTY & SUPPORT

For detailed warranty information and customer support, please refer to the official Sharper Image website or the user manual PDF provided with your product.

You can also access the User Manual (PDF) [here](#).

© 2023 Sharper Image. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why does my Sharper Image 1014502 Powerboost Move massager cut off when I try to use it, and how can I order a replacement charging cable?

Based on the Sharper Image 1014502 Powerboost Move manual, here are the likely reasons your massager is cutting off and how to obtain a new cable: Why the massager may be cutting off: Safety...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B09HGCMLR5>

More documents and user manuals: <https://manuals.plus/>