

TIMEX TW2V18200

TIMEX Waterbury Legacy TW2V18200 Watch User Manual

Model: TW2V18200 | Brand: **TIMEX**

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your new TIMEX Waterbury Legacy TW2V18200 watch. Please read this manual thoroughly to ensure proper use and longevity of your timepiece.

TIMEX, with over 160 years of history, is one of the most recognized brands globally. Founded in 1854 as Waterbury Clock Company in Waterbury, Connecticut, USA, TIMEX has grown to be loved by hundreds of millions of people worldwide. Throughout its long history, TIMEX has created numerous innovative technologies and designs, not just products, including the world's first Mickey Mouse watch manufactured in 1931, the acclaimed IRONMAN watch released in 1986, and the world's first full-dial illumination feature, Indiglo night light, introduced in 1992, which overturned conventional wisdom. Looking back at TIMEX's 160-year history as an American brand, it is no exaggeration to say that its many achievements support TIMEX today, making it a universal, versatile, and timeless American brand.





Figure 1: Front view of the TIMEX Waterbury Legacy TW2V18200 watch, showcasing its blue dial, silver-tone case, and metal bracelet. The watch features a date and day display at the 3 o'clock position.

SETUP

1. Setting the Time and Date

1. **Pull out the crown:** Gently pull the crown (the knob on the side of the watch) to position 2 for setting the date and day, or to position 3 for setting the time.



Figure 2: Side view of the watch, highlighting the crown used for setting time and date.

2. **Set the Date and Day:** In position 2, rotate the crown to adjust the date and day. Note that some watches require rotating the hands past midnight to change the day.
3. **Set the Time:** In position 3, rotate the crown to move the hour and minute hands. Rotate until the desired time is displayed. Ensure you set the correct AM/PM for the date change.
4. **Push in the crown:** Once the time, date, and day are set, push the crown back into position 1 (normal operating position) to start the watch.

2. Adjusting the Bracelet

The metal bracelet can be adjusted by removing or adding links. This process typically requires specialized tools and is best performed by a professional jeweler or watch repair service to avoid damage.

- **Clasp Adjustment:** The clasp may have micro-adjustment holes for fine-tuning the fit. Open the clasp and look for small pins that can be moved to different holes.



Figure 3: Detail of the watch's metal bracelet clasp, showing the folding mechanism.

OPERATING

Your TIMEX Waterbury Legacy watch is designed for reliable daily use. Once the time and date are set, the watch will operate continuously as long as the battery has power.

- **Timekeeping:** The watch displays hours, minutes, and seconds.
- **Date and Day Display:** The window at the 3 o'clock position shows the current date and day of the

week. This will automatically advance at midnight.

- **Water Resistance:** This watch is water-resistant to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown while the watch is wet or submerged.

MAINTENANCE

Cleaning

To maintain the appearance of your watch, wipe it regularly with a soft, dry cloth. For the metal bracelet, a soft brush and mild soapy water can be used, ensuring to rinse thoroughly and dry immediately. Avoid using harsh chemicals or abrasive materials.

Battery Replacement

Your watch is powered by a quartz movement and requires a battery. When the watch stops or the second hand begins to jump erratically (indicating low battery), it's time for a replacement. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

Water Resistance Care

While water-resistant, prolonged exposure to water, extreme temperature changes, or impacts can compromise the seals. Always ensure the crown is fully pushed in before any contact with water. If condensation appears inside the watch, have it inspected by a professional immediately.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch is not running.	Battery is depleted or crown is pulled out.	Push the crown fully in. If it still doesn't run, the battery may need replacement.
Date/Day does not change at midnight.	Time is set to PM instead of AM, or date/day mechanism is stuck.	Advance the time by 12 hours. If the issue persists, consult a watch technician.
Watch is losing or gaining time significantly.	Weak battery, exposure to strong magnetic fields, or internal mechanism issue.	Replace battery. Keep watch away from magnets. If problem continues, seek professional repair.

SPECIFICATIONS

Model Number: TW2V18200

Brand: TIMEX

Movement: Quartz

Case Material: Stainless Steel

Band Material: Stainless Steel

Water Resistance: 50 meters (5 ATM)

Gender: Unisex

Approximate Package Dimensions: 10.6 x 10.6 x 8.2 cm

Approximate Package Weight: 280 g



Figure 4: Rear view of the watch, displaying the engraved case back with model number TW2V18200 and water resistance rating.

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or visit the official TIMEX website. Warranty terms and conditions may vary by region.

For technical support, repairs, or inquiries not covered in this manual, please contact TIMEX customer service or an authorized service center. Contact details can typically be found on the official TIMEX website or on your product packaging.

Important: Unauthorized repairs or modifications may void your warranty.