

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HCDZ](#) /

› [HCDZ Replacement Remote Control User Manual for Panasonic Home Theater Systems](#)

## HCDZ N2QAYB000515, N2QAYB000516 (Compatible with Panasonic SA-PT465, SC-PT465, SA-PT480, SC-PT480, SA-PT580, SC-PT580)

# HCDZ Replacement Remote Control User Manual

For Panasonic SA-PT465, SC-PT465, SA-PT480, SC-PT480, SA-PT580, SC-PT580 DVD Home Theater Sound Systems

## INTRODUCTION

---

This manual provides instructions for the HCDZ replacement remote control, designed for use with various Panasonic DVD Home Theater Sound Systems, including models SA-PT465, SC-PT465, SA-PT480, SC-PT480, SA-PT580, and SC-PT580. This remote control functions as a direct replacement for original Panasonic remote models N2QAYB000515 and N2QAYB000516. It operates using infrared (IR) technology and requires no programming for immediate use.

## SETUP

---

### 1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.



**Figure 1:** Back view of the remote control with the battery compartment. This image shows the location for battery insertion and the required polarity markings.



**Figure 2:** Side view of the remote control, illustrating the battery cover in an open position for battery access.

## **2. Initial Use**

This HCDZ replacement remote control requires no programming. Once fresh batteries are installed, it is ready for immediate use with your compatible Panasonic DVD Home Theater Sound System.

## **OPERATING INSTRUCTIONS**

To operate your Panasonic DVD Home Theater Sound System, point the remote control directly at the system's infrared receiver. Ensure there are no obstructions between the remote and the system. Press the desired function buttons to control playback, volume, menu navigation, and other features.



**Figure 3:** Front view of the remote control, displaying the layout of all operational buttons for various functions.

The remote is compatible with the following Panasonic models:

- SA-PT465
- SC-PT465
- SA-PT480

- SC-PT480
- SA-PT580
- SC-PT580

## MAINTENANCE

- **Battery Replacement:** Replace both AA batteries with fresh ones of the same type when the remote's performance degrades. Do not mix old and new batteries.
- **Storage:** Store the remote control in a dry place at room temperature. Avoid exposing it to extremely hot or humid environments, as this can cause malfunction or damage.
- **Cleaning:** To clean the remote, gently wipe it with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Long-Term Storage:** If the remote will not be used for an extended period, remove the batteries to prevent potential damage from battery leakage and corrosion.
- **Sensor Protection:** Do not expose the remote's infrared sensor to direct sunlight or strong lighting apparatuses, as this may interfere with its operation.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not responding.	<ul style="list-style-type: none"> <li>• Batteries are depleted or incorrectly inserted.</li> <li>• Obstruction between remote and device.</li> <li>• Remote is too far from the device.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace batteries with fresh AA batteries, ensuring correct polarity.</li> <li>• Remove any objects blocking the line of sight to the home theater system.</li> <li>• Move closer to the home theater system.</li> </ul>
Intermittent response.	<ul style="list-style-type: none"> <li>• Weak batteries.</li> <li>• Infrared sensor interference.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace batteries.</li> <li>• Ensure no direct sunlight or strong artificial light is hitting the remote's sensor or the device's receiver.</li> </ul>
Remote does not control the device after battery replacement.	<ul style="list-style-type: none"> <li>• Incorrect battery insertion.</li> <li>• Device compatibility issue.</li> </ul>	<ul style="list-style-type: none"> <li>• Verify batteries are inserted with correct polarity.</li> <li>• Confirm your Panasonic Home Theater System model is listed as compatible (SA-PT465, SC-PT465, SA-PT480, SC-PT480, SA-PT580, SC-PT580). This remote requires no programming.</li> </ul>

## SPECIFICATIONS

- **Brand:** HCDZ
- **Model Numbers (Replacement for Panasonic):** N2QAYB000515, N2QAYB000516

- **Compatible Panasonic Home Theater Systems:** SA-PT465, SC-PT465, SA-PT480, SC-PT480, SA-PT580, SC-PT580
- **Connectivity Technology:** Infrared (IR)
- **Max Number of Supported Devices:** 1
- **Batteries Required:** 2 x AA (not included)
- **Special Feature:** No programming needed
- **Manufacturer:** HCDZ
- **ASIN:** B09HGS9MS8

## WARRANTY INFORMATION

---

Specific warranty details for this HCDZ replacement remote control are not provided in the product information. Please refer to the retailer's return policy or contact the seller directly for warranty inquiries.

## SUPPORT

---

For further assistance or questions regarding the HCDZ replacement remote control, please contact the seller through the platform where the purchase was made. No direct manufacturer support contact information is available in the provided product details.

