

[Manuals.plus](#) /

› [weelikeit](#) /

› weelikeit 7-inch Kids Tablet C72W User Manual

## weelikeit C72W

# weelikeit 7-inch Kids Tablet C72W User Manual

Model: C72W


## 1. INTRODUCTION

The weelikeit 7-inch Kids Tablet is designed to provide a safe and engaging digital experience for children. Running on Android 11.0, it features a durable kid-proof case, parental control functions, and access to educational content. This manual will guide you through the setup, operation, and maintenance of your new tablet.

# Newest Android 11.0 Go



1024\*600

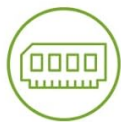


2 GB RAM  
32GB ROM



2MP+5MP  
Dual Camera



WiFi

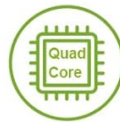

1.5 GHz



Bluetooth



Google Play

Figure 1: weelikeit 7-inch Kids Tablet

## 2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- 1 x 7-inch Android Tablet
- 1 x Screen Protector
- 1 x Stylus
- 1 x Type-C Cable
- 1 x UL Certified Charger
- 1 x User Manual (this document)



Figure 2: Stylus and Screen Protector included with the tablet.

### 3. PRODUCT OVERVIEW

The weelikeit Kids Tablet features a 7-inch IPS HD display, dual cameras (2MP front, 5MP rear), and a durable kid-proof case with an integrated stand. It is equipped with a 1.5 GHz quad-core processor, 2GB RAM, and 32GB ROM, expandable up to 256GB via an SD card.



Figure 3: Tablet Features and Ports

#### Key Features:

- **Display:** 7-inch IPS HD (1024x600)
- **Processor:** 1.5 GHz Quad-Core
- **Memory:** 2GB RAM, 32GB ROM (expandable to 256GB with SD card)
- **Cameras:** 2MP Front, 5MP Rear
- **Connectivity:** Wi-Fi, Bluetooth
- **Operating System:** Android 11.0
- **Ports:** Type-C, 3.5mm Headphone Jack, Micro SD Card Slot
- **Protection:** Built-in Kid-Proof Case with Stand



Figure 4: Built-in Kid-Proof Case with Stand

## 4. SETUP

Follow these steps to set up your weelikeit Kids Tablet for the first time:

1. **Charge the Tablet:** Before first use, fully charge the tablet using the provided Type-C cable and UL Certified Charger. The charging port is located on the side of the tablet.
2. **Power On:** Press and hold the Power button (refer to Figure 3) for a few seconds until the screen lights up.
3. **Initial Setup Wizard:** The tablet will guide you through the initial setup process. This includes selecting your language, connecting to a Wi-Fi network, and setting up a Google account. A Google account is required to download apps from the Google Play Store.
4. **Wi-Fi Connection:** During setup, you will be prompted to connect to a Wi-Fi network. Select your network from the list and enter the password. If you encounter issues, ensure your Wi-Fi router is on and within range.
5. **Google Account:** You can choose to set up the tablet with a parent's Google account or create a new one. This account will be used for app downloads and parental control management.

## 5. OPERATING INSTRUCTIONS

### 5.1 Power On/Off and Restart

- **Power On:** Press and hold the Power button until the screen turns on.
- **Power Off:** Press and hold the Power button until a menu appears. Select "Power off" to shut down the tablet.
- **Restart:** Press and hold the Power button until a menu appears. Select "Restart" to reboot the tablet.

### 5.2 Basic Navigation

The tablet uses a touchscreen interface. Swipe, tap, and pinch gestures are used for navigation and interaction. Swipe up from the bottom of the screen to access the app drawer or navigate between screens.

## 5.3 Parental Control Function (iWawa App)

The tablet comes with the iWawa App pre-installed, offering robust parental control features. This allows parents to manage content and screen time for their children.

1. **Access iWawa:** Turn on the tablet and open the iWawa application.
2. **Set Up Profiles:** Parents can create separate profiles for each child.
3. **Manage Content:** Within the parental control settings, you can add or block specific applications, filter web content, and set screen time limits.
4. **Lock Device:** The tablet can be locked with a password to prevent children from exiting the child mode without permission.
5. **Exit Child Mode:** Parents can exit the child mode using a password to use the tablet as a regular Android device.



### Parents Area:

1. Support multiple child accounts
2. Support offline mode
3. Daily time limit per child
4. Enable/disable applications and online content
5. Download apps and contents you like on Google Playstore

### Child Mode:

1. Turn on the tablet, go to IWAWA program
2. Parents can set separate profiles for each kid
3. Add or block apps
4. Filter contents
5. Set screen time limits
6. Lock kids tablets device by password



Figure 5: Parental Control Interface

## 5.4 Learning and Entertainment

The iWawa App provides a range of age-appropriate creative and educational content. Additionally, the tablet is GMS Certified, allowing access to the Google Play Store for downloading more educational apps like ABC Mouse, YouTube Kids, and Zoom.



Figure 6: Children engaging with the tablet

Your browser does not support the video tag.

Video 1: Overview of the weelikeit Kids Tablet features, including ports, parental control, and learning apps.

## 6. MAINTENANCE

To ensure the longevity and optimal performance of your tablet, follow these maintenance guidelines:

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials.
- **Battery Care:** Avoid completely draining the battery frequently. Charge the tablet regularly. Do not expose the tablet to extreme temperatures.
- **Software Updates:** Periodically check for system updates to ensure your tablet has the latest features and security patches.
- **Storage Management:** Regularly clear unnecessary files and apps to maintain optimal performance. Consider using an SD card for additional storage.
- **Protective Case:** The built-in kid-proof case provides protection against drops and bumps. Ensure it remains properly fitted.

## 7. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common problems and solutions:

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Tablet does not turn on	Ensure the tablet is charged. Connect it to the charger for at least 30 minutes, then try powering it on again. If it still doesn't turn on, try pressing and holding the power button for 10-15 seconds.
Wi-Fi connection issues	Check if your Wi-Fi router is working correctly. Restart the tablet and your router. Ensure you are entering the correct Wi-Fi password. Try connecting to a different Wi-Fi network if available.
Slow performance	Close unused applications. Clear cache and data for frequently used apps. Uninstall unnecessary apps. Restart the tablet.
Short battery life	Reduce screen brightness. Close background apps. Disable Wi-Fi or Bluetooth when not in use. Limit continuous video streaming or gaming.
Touchscreen unresponsive	Restart the tablet. If specific areas are unresponsive, ensure the screen is clean and free of debris. If the issue persists, contact customer support.
Cannot download apps	Ensure you are connected to Wi-Fi. Check your Google account settings and payment methods if applicable. Verify that parental controls are not blocking the app.

## 8. SPECIFICATIONS

Detailed technical specifications for the weelikeit 7-inch Kids Tablet C72W:

Feature	Detail
Brand	weelikeit
Model Name	Touch
Model Number	C72W
Operating System	Android 11.0
Screen Size	7 Inches
Display Resolution	1024 x 600 IPS HD
Processor Speed	1.5 GHz Quad-Core
RAM Memory	2 GB
Internal Storage	32 GB
Expandable Storage	Up to 256 GB (MicroSD)
Rear Camera	5 MP
Front Camera	2 MP
Battery Capacity	3000 Milliamp Hours (Lithium Ion)

Feature	Detail
Connectivity	Bluetooth, Wi-Fi
Ports	Type-C, 3.5mm Headphone Jack, MicroSD Slot
Human-Interface Input	Touchscreen, Touchscreen with Stylus Support
GTIN / UPC	608571029989

## 9. WARRANTY AND SUPPORT

weelikeit tablets come with a one-year warranty. For any questions or technical assistance regarding your weelikeit Kids Tablet, please refer to the following:

- **Warranty:** One year from the date of purchase.
- **Contact Support:** If you purchased through Amazon, find your order and click "Get Product Support." Weelikeit aims to assist you within 24 hours.
- **Online Resources:** Visit the official weelikeit store on Amazon for additional product information and FAQs: [weelikeit Store](#)