

Cecotec 04304

Cecotec Power Black Titanium 2500MAX Advance Blender

Model: 04304

INTRODUCTION

Thank you for choosing the Cecotec Power Black Titanium 2500MAX Advance Blender. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and keep them for future reference.



The Cecotec Power Black Titanium blender set up on a kitchen counter, surrounded by fresh ingredients like apples, carrots, and squash, ready for blending.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the motor unit, cord, or plug in water or any other liquid.
- Keep hands and utensils out of the blender jar while blending to prevent severe injury and damage to the blender.
- Always ensure the lid is securely in place before operating the blender.
- Unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The Security Check System ensures the blender operates only when the jar is correctly placed on the motor unit.

PRODUCT COMPONENTS

Your Cecotec Power Black Titanium 2500MAX Advance Blender includes the following parts:

- Motor Unit with Digital Display
- 1.8 L High-Resistance Melted Glass Jar
- 8-Blade Assembly with Black Titanium Coating
- Hermetic Sealing Lid with Measuring Cap
- Pulp-Free Liquid Filter
- Tamper



The Cecotec Power Black Titanium blender displayed on a kitchen counter, alongside fresh fruits and a prepared smoothie, highlighting its design and function.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Clean:** Before first use, wash the glass jar, lid, measuring cap, filter, and tamper in warm soapy water. Rinse thoroughly and dry. The motor unit should only be wiped with a damp cloth.
3. **Assemble:** Place the motor unit on a stable, flat, and dry surface. Ensure the power cord is unplugged.
4. **Attach Jar:** Place the glass jar onto the motor unit. Ensure it is correctly seated and locked into position. The Security Check System prevents operation if the jar is not properly aligned.
5. **Add Ingredients:** Place your desired ingredients into the glass jar. Do not exceed the maximum fill line (1.8 L).
6. **Secure Lid:** Place the lid onto the jar and twist to secure it. Insert the measuring cap into the lid opening.

OPERATING INSTRUCTIONS

The blender features a digital display and a control dial for intuitive operation.



A hand operating the intuitive control dial of the blender, with the digital screen displaying operational time and settings, indicating ease of use.

General Blending

 
1. Plug the blender into a 220V power outlet. The digital display will illuminate.
2. Turn the control dial to select one of the **10 available speeds**. The digital display will show the selected speed and operating time.
3. For quick bursts of maximum power, use the **Turbo function**.
4. Once blending is complete, turn the dial to the 'OFF' position and unplug the appliance.

Pre-set Programs

The blender includes several automatic programs for optimal results:

- **Smoothie Program:** Ideal for blending fruits and liquids to a perfect consistency. The blender automatically adjusts speeds for optimal results.
- **Ice Crush Program:** Specifically designed for crushing ice efficiently.
- **Soups and Sauces Program:** Engineered to push ingredients towards the blades, ensuring homogeneous and smooth textures.


- **AutoClean Program:** Facilitates deep cleaning of the jar after use.

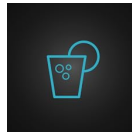


Smoothie Program



 Ice Crush Program

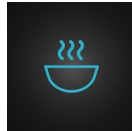

Soups & Sauces Program

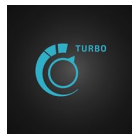 

Turbo Function

Using the Filter and Tamper

- The **pulp-free liquid filter** can be inserted into the jar before blending to create smooth beverages without pulp, such as juices or nut milks.
- The **tamper** can be used through the lid's opening to push down ingredients towards the blades, especially useful for thick mixtures or when processing frozen items.



A detailed view of the blender's interior, highlighting the powerful black titanium blades actively processing nuts, demonstrating its blending capability.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your blender.

1. **Unplug:** Always unplug the blender before cleaning.
2. **AutoClean Program:** For quick cleaning, add warm water and a drop of dish soap to the jar, secure the lid, and run the AutoClean program. Rinse thoroughly afterward.
3. **Manual Cleaning:** The glass jar, lid, measuring cap, filter, and tamper are easily removable and can be washed by hand with warm soapy water or placed in the dishwasher.
4. **Blade Cleaning:** The 8-blade assembly is removable for thorough cleaning. Handle with care as blades are sharp.
5. **Motor Unit:** Wipe the motor unit with a soft, damp cloth. Never immerse it in water or spray it with liquids.
6. **Drying and Storage:** Ensure all parts are completely dry before reassembling or storing the blender. Store in a dry place.

TROUBLESHOOTING

If you encounter issues with your blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; Jar not correctly seated; Power outage.	Check power connection; Ensure jar is securely locked (Security Check System); Check household circuit breaker.
Ingredients are not blending smoothly.	Too little liquid; Overfilling; Ingredients too large.	Add more liquid; Do not exceed max fill line; Cut ingredients into smaller pieces; Use tamper to push ingredients down.
Motor smells or overheats.	Overloading; Continuous operation for too long.	Reduce ingredient quantity; Allow blender to cool down for at least 15 minutes before resuming use.
Loud noise during operation.	Jar not properly seated; Hard ingredients; Foreign object.	Re-seat the jar; Ensure ingredients are suitable for blending; Check for any foreign objects before blending.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Cecotec
Model Number	04304
Color	Black
Power	1800 Watts (Note: Product title indicates 2500MAX Advance, referring to peak power)
Voltage	220 Volts
Capacity	1.8 Liters
Number of Speeds	10
Blades	8 blades with Black Titanium coating
Material	Glass (Jar), Stainless Steel (Finishes)
Special Features	Removable blade, Multiple speeds, Digital display, Metaluxe gear, Non-slip base, Security Check System, AutoClean program
Product Dimensions (L x W x H)	36.5 x 21.7 x 27.7 cm
Item Weight	4 Kilograms

WARRANTY AND SUPPORT

Cecotec products are designed for durability and performance. For any questions, technical assistance, or to inquire about spare parts, please contact Cecotec customer support.

- **Spare Parts Availability:** Spare parts for this model are available for up to 10 years from the date of purchase.
- For warranty claims or service, please refer to the contact information provided with your purchase documentation or visit the official Cecotec website.