

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Volkano](#) /

› [Volkano 10W Rupture VK-3308-BK Bluetooth Speaker User Manual](#)

Volkano VK-3308-BK

Volkano 10W Rupture VK-3308-BK Bluetooth Speaker User Manual

Model: VK-3308-BK | Brand: Volkano

INTRODUCTION

Thank you for choosing the Volkano 10W Rupture VK-3308-BK Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

PACKAGE CONTENTS

- Volkano Rupture Bluetooth Speaker
- Auxiliary P2 Cable
- USB Charging Cable
- Instruction Manual

PRODUCT OVERVIEW



Figure 1: Front view of the Volkano Rupture VK-3308-BK Bluetooth Speaker. The speaker features a black mesh grille, the Volkano logo, and a sturdy integrated handle for portability.

The Volkano Rupture is a portable Bluetooth speaker designed for robust audio performance. It features multiple connectivity options including Bluetooth, FM radio, USB, Micro SD, and auxiliary input, making it versatile for various audio sources. Its integrated handle ensures easy transport.

SETUP

- Charging the Speaker:** Before first use, fully charge the speaker. Connect the supplied USB charging cable to the speaker's charging port and to a standard USB power adapter (not included). The charging indicator will illuminate. Charging time is approximately 3 hours.
- Powering On/Off:** Press and hold the Power button (usually marked with \bullet or I/O symbol) for a few seconds to turn the speaker on or off.

OPERATING INSTRUCTIONS

Bluetooth Mode

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the Mode button to switch to

Bluetooth. The speaker will indicate it's ready for pairing (e.g., a flashing LED or an audible prompt).

2. On your mobile device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "Volkano Rupture" from the list of found devices.
4. Once paired, the speaker will confirm the connection, and you can begin playing audio from your device. The effective Bluetooth range is up to 10 meters.

FM Radio Mode

1. Press the Mode button to switch to FM Radio mode.
2. Press the Play/Pause button to automatically scan and save available FM stations.
3. Use the Previous/Next track buttons to navigate between saved stations.

USB / Micro SD Card Playback

1. Insert a USB flash drive (up to 64GB) or a Micro SD card (up to 32GB) containing MP3 audio files into the respective port.
2. The speaker will automatically switch to USB or Micro SD mode and begin playing audio. If not, press the Mode button to select the correct source.
3. Use the Play/Pause and Previous/Next track buttons to control playback.

Auxiliary Input (AUX) Mode

1. Connect one end of the supplied Auxiliary P2 cable to the AUX input port on the speaker.
2. Connect the other end of the cable to the audio output (headphone jack) of your external audio device.
3. Press the Mode button to switch to AUX mode.
4. Control audio playback from your external device.

SPECIFICATIONS

Bluetooth Version:	5.0
Bluetooth Range:	Up to 10 meters
Battery Capacity:	2000 mAh
Playback Time:	3-6 hours (depending on volume)
Charging Time:	Approximately 3 hours
Sensitivity:	86 dB
Impedance:	4 Ω
Power Output:	10W RMS
Frequency Response:	50Hz-20KHz
Driver Size:	2 x 3.5 inches

Dimensions (H x W x D):	18.5 cm x 37 cm x 14 cm
USB Support:	Up to 64 GB
Micro SD Support:	Up to 32 GB
Compatible Devices:	Notebook, Smartphone, Tablet

MAINTENANCE

- Keep the speaker away from water, moisture, and extreme temperatures.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid dropping the speaker or subjecting it to strong impacts.
- When not in use for extended periods, store the speaker in a cool, dry place and charge it periodically to maintain battery health.

TROUBLESHOOTING

- **No Power:**
 - Ensure the speaker is fully charged.
 - Check the charging cable and adapter for damage.
- **Cannot Pair via Bluetooth:**
 - Make sure the speaker is in Bluetooth pairing mode.
 - Ensure your device's Bluetooth is enabled and within 10 meters of the speaker.
 - Try unpairing and re-pairing the speaker from your device's Bluetooth settings.
 - Restart both the speaker and your device.
- **No Sound:**
 - Check the volume levels on both the speaker and your connected device.
 - Ensure the correct input mode (Bluetooth, FM, USB, SD, AUX) is selected.
 - If using AUX, ensure the cable is securely connected and not damaged.
- **FM Radio Reception is Poor:**
 - Relocate the speaker to an area with better signal reception.
 - Perform an automatic station scan again.

WARRANTY AND SUPPORT

This Volkano Rupture VK-3308-BK Bluetooth Speaker comes with a **3-month warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims.

For technical support or warranty inquiries, please contact your retailer or the Volkano customer service department.

