

## Cecotec ReadyWarm 6000 (05817)

# Cecotec ReadyWarm 6000 Thermal Ceramic Radiator User Manual

Model: 05817

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Cecotec ReadyWarm 6000 Thermal Ceramic Radiator. Please read it thoroughly before installation and use, and keep it for future reference.

The Cecotec ReadyWarm 6000 is a 1500W thermal ceramic radiator designed for efficient heating of spaces up to 20 m<sup>2</sup>. It features Wi-Fi control, a programmable timer, IPX4 protection, and multiple operating modes for optimal comfort and energy saving.

## 2. SAFETY INSTRUCTIONS

Always adhere to the following safety precautions to prevent electric shock, fire, injury, or damage to the appliance.

- Ensure the power supply voltage matches the rating label on the appliance.
- Do not operate the radiator with a damaged cord or plug.
- Do not cover the radiator, as this can lead to overheating.
- Keep flammable materials at a safe distance from the radiator.
- This appliance is equipped with an AutoOff system for overheating protection. If it overheats, it will automatically shut down.
- The IPX4 protection allows for safe use in bathrooms, but avoid direct water spray.
- Do not insert objects into the ventilation openings.
- Unplug the appliance before cleaning or maintenance.
- Keep out of reach of children. The child lock feature helps prevent unintended operation.

## 3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Cecotec ReadyWarm 6000 radiator.



Figure 3.1: Front view of the Cecotec ReadyWarm 6000 radiator, showing its white cast aluminum elements and the control panel on the top right.

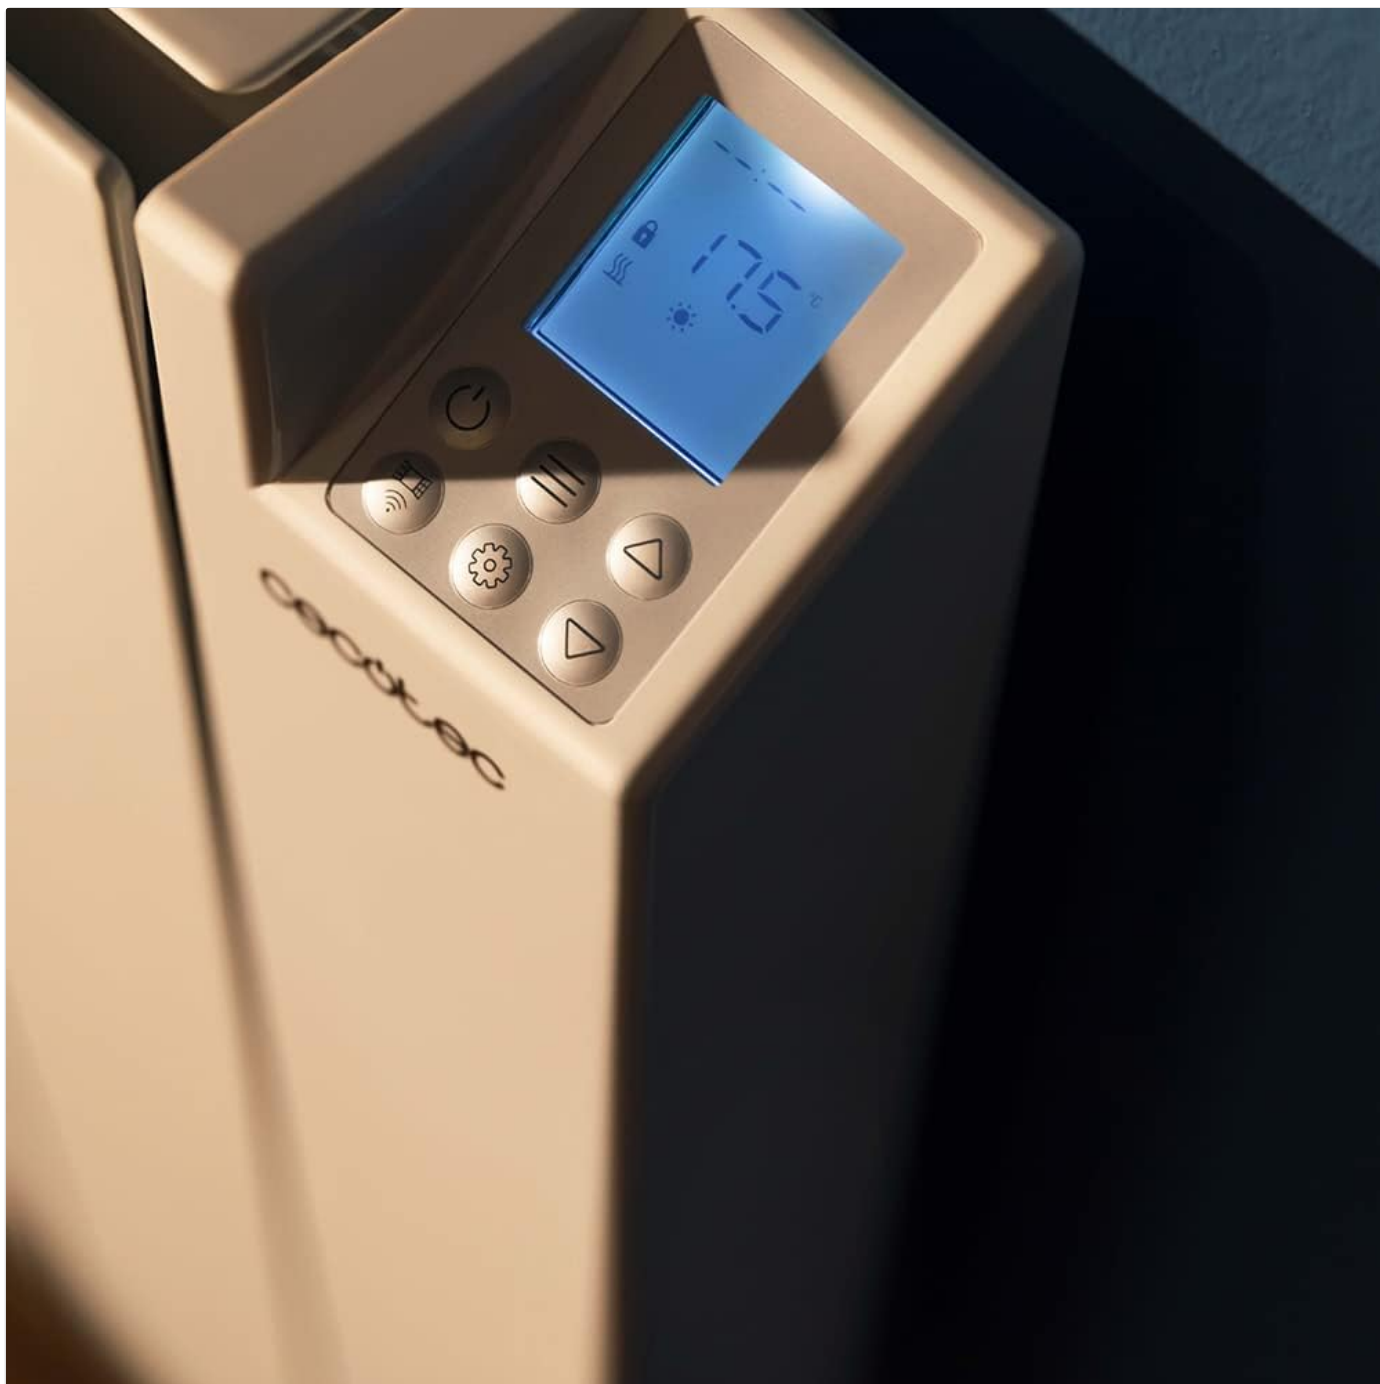 


Figure 3.2: Close-up of the control panel with an LCD screen displaying "17.5°C" and buttons for Wi-Fi, mode, timer, and temperature adjustment.

- **Heating Elements:** 6 cast aluminum elements for efficient heat distribution.
- **Control Panel:** LCD screen and buttons for manual operation.
- **Wi-Fi Module:** For smart control via the EnergySilence app.
- **Wall Mount:** Stable bracket for secure installation.
- **Power Cord:** For electrical connection.

## 4. SETUP AND INSTALLATION

---

Follow these steps for proper installation of your radiator.

### 4.1 Wall Mounting

The radiator is designed for wall mounting. Ensure the wall can support the weight of the unit.

1. Choose a suitable location, away from curtains and direct sunlight, with adequate clearance around the unit for air circulation.
2. Mark the drilling points on the wall using the provided wall mount bracket as a template.
3. Drill holes and insert wall plugs (if necessary).
4. Securely attach the wall mount bracket to the wall.
5. Carefully hang the radiator onto the wall mount bracket, ensuring it is stable and level.

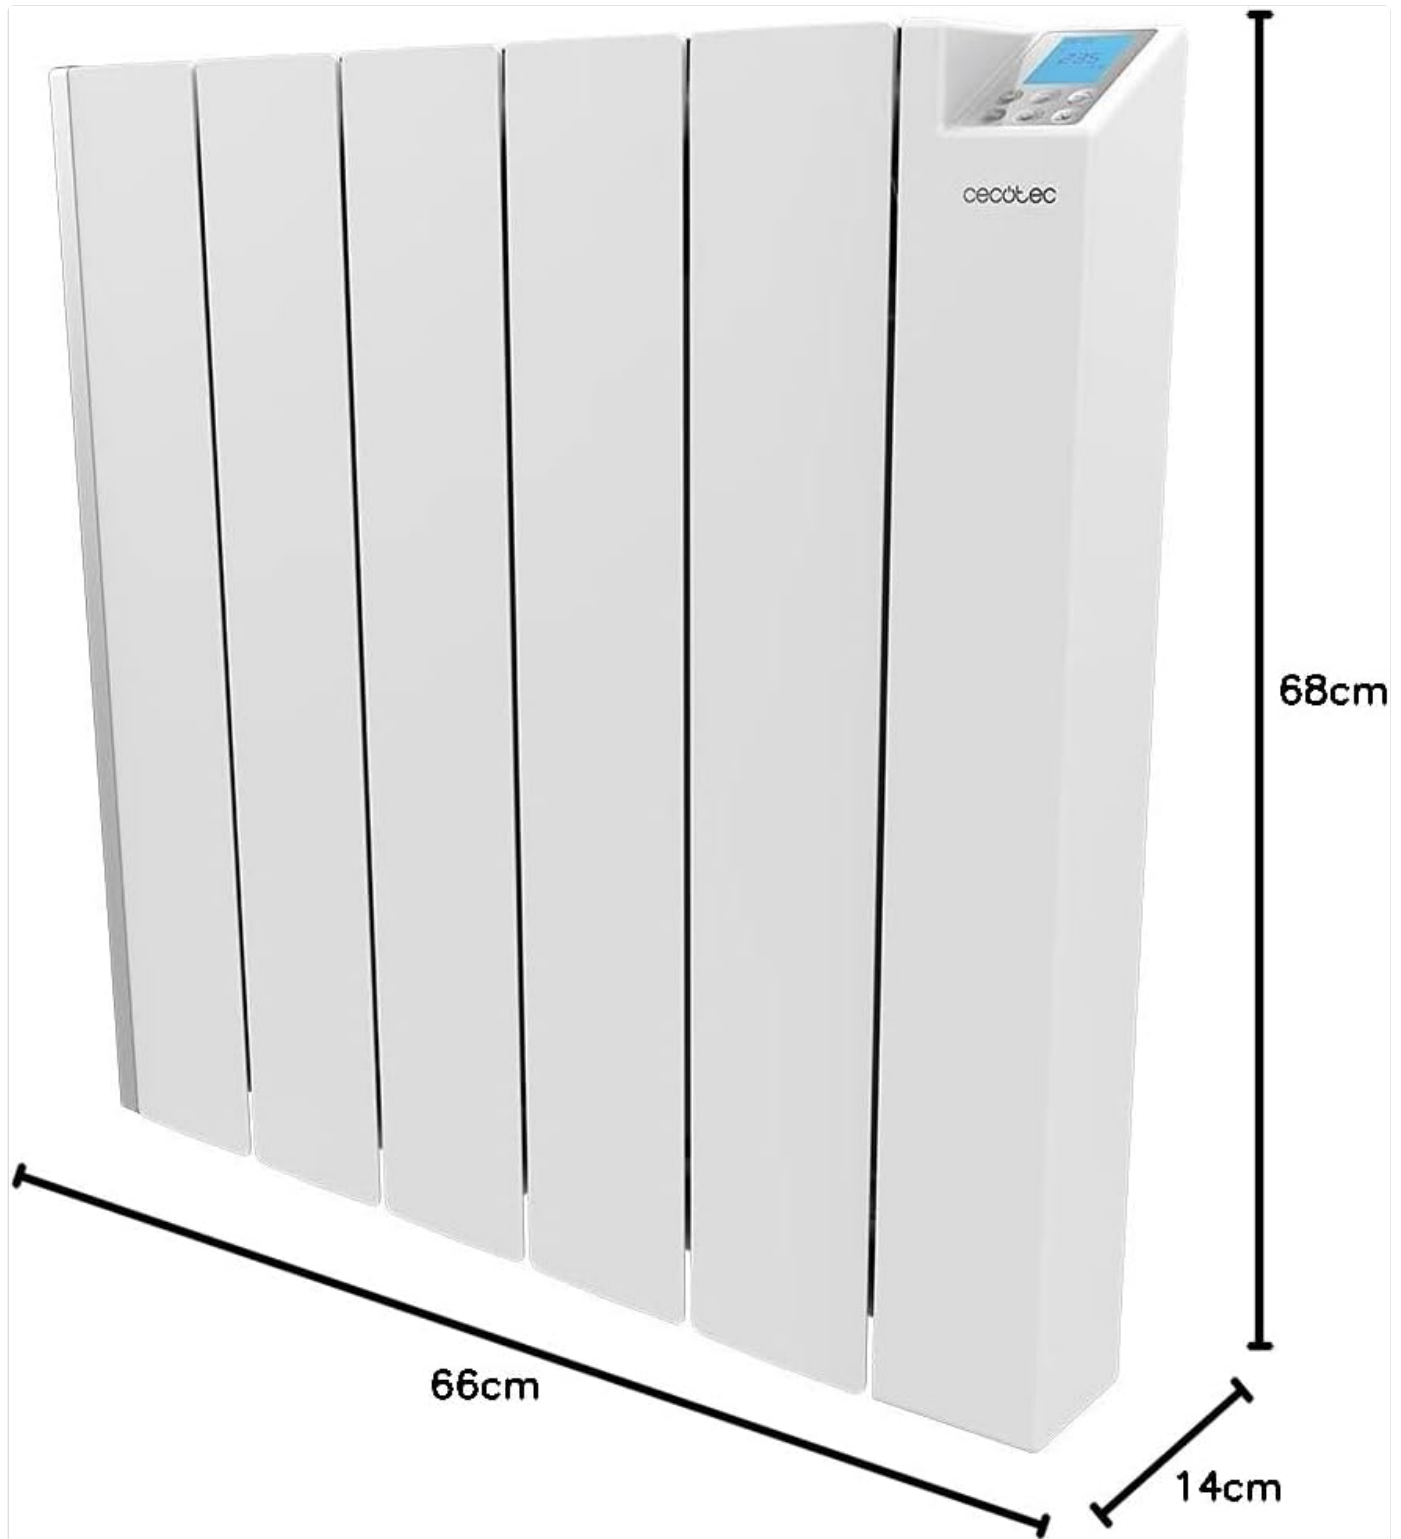 


Figure 4.1: Diagram showing the dimensions of the Cecotec ReadyWarm 6000 radiator: 68cm height, 66cm width, and 14cm depth.

## 4.2 Initial Power-Up

Once mounted, plug the radiator into a grounded electrical outlet. The LCD screen will illuminate, indicating the unit is ready for operation.

## 5. OPERATING INSTRUCTIONS

---

Your Cecotec ReadyWarm 6000 offers both manual control and smart control via the EnergySilence app.

### 5.1 Manual Control

Use the buttons on the control panel to adjust settings:

- **Power Button:** Turns the radiator on or off.
- **Mode Button:** Cycles through the 4 operating modes:
  - *Comfort Mode:* Maintains a comfortable temperature.
  - *Eco Mode:* Energy-saving mode.
  - *Frost Protection Mode:* Prevents freezing in unoccupied rooms.
  - *Open Window Mode:* Detects open windows and temporarily stops heating to save energy.
- **Temperature Adjustment Buttons (Up/Down):** Sets the desired temperature between 5°C and 35°C.
- **Timer Button:** Activates and sets the 24/7 programmable timer.
- **Wi-Fi Button:** Initiates Wi-Fi pairing mode.

### 5.2 Smart Control (EnergySilence App)

For advanced control and programming, download the EnergySilence app on your smartphone.

1. Download the "EnergySilence" app from your device's app store.
2. Register an account or log in.
3. Follow the in-app instructions to add your Cecotec ReadyWarm 6000 radiator. This typically involves pressing the Wi-Fi button on the radiator and connecting to its temporary Wi-Fi network, then configuring it to your home Wi-Fi.
4. Once connected, you can control the radiator's power, mode, temperature, and set detailed 24/7 schedules from your smartphone.

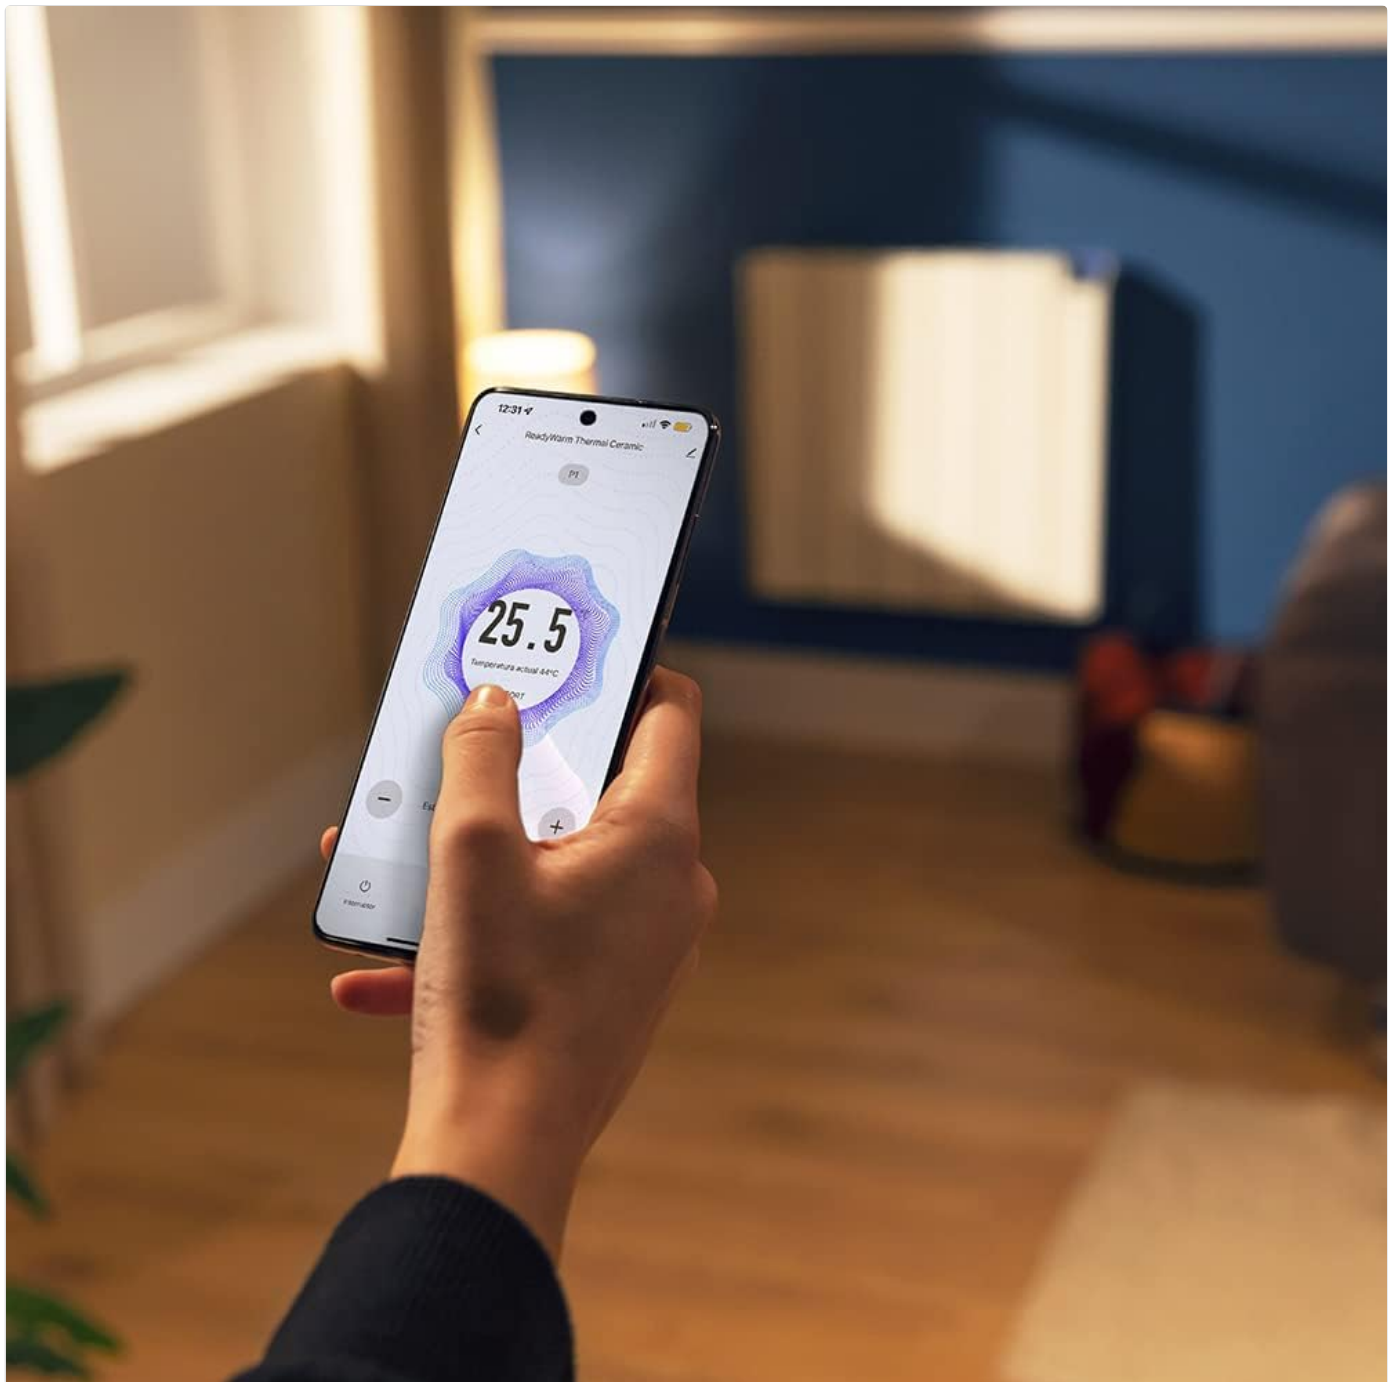 


Figure 5.1: A hand holding a smartphone displaying the EnergySilence app interface, showing temperature control for the radiator.

## 6. MAINTENANCE AND CLEANING

---

Regular maintenance ensures optimal performance and longevity of your radiator.

- Always unplug the radiator and allow it to cool completely before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Do not immerse the radiator in water or any other liquid.
- Periodically check the power cord for any signs of damage.
- Ensure the air inlets and outlets are free from dust and obstructions. Use a vacuum cleaner with a brush attachment if necessary.

## 7. TROUBLESHOOTING

---

If you encounter issues with your radiator, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Radiator does not turn on.	No power supply; Power button not pressed; Overheating protection activated.	Check power cord and outlet; Press the power button; Unplug and allow to cool for 30 minutes, then plug back in.
Radiator not heating sufficiently.	Temperature setting too low; Open Window Mode activated; Room size exceeds capacity.	Increase desired temperature; Close windows/doors; Consider additional heating for larger rooms.
Wi-Fi connection issues.	Incorrect Wi-Fi password; Radiator too far from router; Router issues.	Verify Wi-Fi password; Move radiator closer to router or use a Wi-Fi extender; Restart your router.
Child lock engaged.	Accidental activation of child lock.	Refer to the app or manual for specific instructions on deactivating the child lock.

If the problem persists after trying these solutions, please contact customer support.

## 8. TECHNICAL SPECIFICATIONS


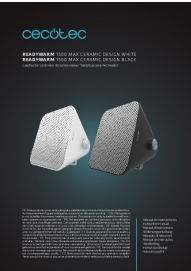




Feature	Specification
Brand	Cecotec
Model Number	05817
Power	1500 W
Voltage	230 V
Material	Cast Aluminum, Stainless Steel
Dimensions (D x W x H)	14 x 66 x 68 cm
Heating Method	Convection
Operating Modes	Comfort, Eco, Frost Protection, Open Window
Temperature Range	5°C to 35°C
Protection Rating	IPX4
Special Features	Wi-Fi Control, 24/7 Programmable Timer, Overheating Protection, Child Lock, AutoOff System

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Cecotec website or contact your local retailer.  
**Cecotec Official Website:** [www.cecotec.com](http://www.cecotec.com)  
Please have your model number (05817) and purchase details ready when contacting support.

[gen\_bottom\_of\_page]

Related Documents - ReadyWarm 6000 (05817)

	<p><a href="#">Cecotec ReadyWarm 4000/6000/8000 Thermal Ceramic Connected: Manual de Instrucciones y Características</a></p> <p>Descubra el Cecotec ReadyWarm 4000/6000/8000 Thermal Ceramic Connected, un termoventilador vertical inteligente. Este manual de instrucciones cubre su funcionamiento, seguridad y especificaciones.</p>
	<p><a href="#">Cecotec ReadyWarm 1500 Max Ceramic Design: Manual de Instrucciones</a></p> <p>Manual de instrucciones completo para el Cecotec ReadyWarm 1500 Max Ceramic Design (modelos White y Black), incluyendo seguridad, funcionamiento, mantenimiento y especificaciones técnicas.</p>
	<p><a href="#">Cecotec ReadyWarm 1570 Max Ceramic Smart: Calefactor de Sobremesa</a></p> <p>Manual de instrucciones para el calefactor de sobremesa cerámico Cecotec ReadyWarm 1570 Max Ceramic Smart. Descubra sus características, uso seguro, mantenimiento y especificaciones técnicas para un confort óptimo.</p>
	<p><a href="#">Cecotec ReadyWarm 5350 Power Box Ceramic Connected - Calentador Cerámico de Pared con Wi-Fi</a></p> <p>Descubra el Cecotec ReadyWarm 5350 Power Box Ceramic Connected, un calentador cerámico de pared de 2000W con pantalla LED y control inteligente por Wi-Fi. Diseñado para uso doméstico, ofrece calefacción eficiente y control remoto a través de la app Cecotec.</p>
	<p><a href="#">Cecotec Ready Warm 6000 Ceramic Heater - User Manual</a></p> <p>Official user manual for the Cecotec Ready Warm 6000 Ceramic heater, providing instructions on operation, safety, cleaning, maintenance, and warranty information.</p>
	<p><a href="#">Cecotec ReadyWarm 6350 Ceramic Touch Connected User Manual and Instructions</a></p> <p>Comprehensive user manual for the Cecotec ReadyWarm 6350 Ceramic Touch Connected heater, covering safety, operation, technical specifications, and maintenance.</p>



