

[Manuals.plus](#) /

> [InfratexRC](#) /

> InfratexRC Remote Control User Manual for Akai TVs (Models AKTV2013T, AKTV2014T, AKTV2414T, AKTV405TS, AKTV408TS, AKTV409TS)

InfratexRC CELED43419B6

InfratexRC Remote Control User Manual

For Akai TV Models: AKTV2013T, AKTV2014T, AKTV2414T, AKTV405TS, AKTV408TS, AKTV409TS

1. INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your InfratexRC remote control, model CELED43419B6. This remote is designed to be compatible with various Akai television models, including AKTV2013T, AKTV2014T, AKTV2414T, AKTV405TS, AKTV408TS, and AKTV409TS. It is also compatible with Continental Edison models CELED43419B6 and CELED554K20B6. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.

2. SAFETY INFORMATION

- Do not expose the remote control to direct sunlight, heat sources, or extreme temperatures.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Do not immerse the remote control in water or any other liquid.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations. Do not dispose of batteries in fire.
- Do not mix old and new batteries, or different types of batteries.

3. PACKAGE CONTENTS

Please check that all items are present:

- 1 x InfratexRC Remote Control (Model CELED43419B6)
- 1 x User Manual

Note: Batteries are not included and must be purchased separately.

4. PRODUCT OVERVIEW

The InfratexRC remote control is designed for ease of use with an ergonomic shape. It features 25 buttons for

comprehensive control over your compatible television. The layout includes standard functions such as power, volume control, channel selection, navigation, and input source selection.



Image 1: Front view of the InfrateXRC remote control, model CELED43419B6. The remote is black with clearly labeled buttons for various TV functions, including a numeric keypad, directional pad, and dedicated function buttons.

5. SETUP

5.1 Inserting Batteries

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two (2) AAA alkaline batteries (not included) into the compartment. Ensure the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

The remote control is now ready for use.

6. OPERATING INSTRUCTIONS

6.1 Basic Operation

This remote control operates using infrared (IR) technology. For proper function, ensure there is a clear line of sight between the remote control's IR emitter (located at the front) and the IR receiver on your television.

- **Power On/Off:** Press the **POWER** button to turn the TV on or off.
- **Volume Control:** Use the **VOL+** and **VOL-** buttons to adjust the volume.
- **Channel Selection:** Use the **CH+** and **CH-** buttons to change channels. You can also use the numeric keypad to directly enter channel numbers.
- **Input Source:** Press the **SOURCE** or **INPUT** button to cycle through available input sources (HDMI, AV, etc.).
- **Navigation:** Use the directional arrow buttons (**UP**, **DOWN**, **LEFT**, **RIGHT**) and the **OK/ENTER** button to navigate menus and confirm selections.

Refer to your television's user manual for specific functions and menu navigation details.

7. MAINTENANCE

7.1 Cleaning the Remote Control

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials, as these can damage the remote's finish or buttons.

7.2 Battery Replacement

Replace the batteries when the remote control's performance degrades, such as reduced range or unresponsive buttons. Follow the steps in Section 5.1 to replace the batteries. Always use new AAA alkaline batteries and dispose of old batteries responsibly.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity.

Problem	Possible Cause	Solution
Remote control has short range or intermittent response.	Weak batteries; Obstruction between remote and TV; Remote too far from TV.	Replace batteries. Remove any objects blocking the line of sight. Move closer to the TV (within 10 meters).
Specific buttons not functioning.	Dirt or debris under the button; Remote control malfunction.	Clean the remote control. If the issue persists, the remote may be faulty.
Remote control does not control the TV.	Incompatibility; TV's IR receiver is blocked or faulty.	Ensure your TV model is listed as compatible. Check the TV's IR receiver for obstructions.

9. SPECIFICATIONS

Brand: InfratexRC

Model: CELED43419B6

Compatible TV Models (Akai): AKTV2013T, AKTV2014T, AKTV2414T, AKTV405TS, AKTV408TS, AKTV409TS

Compatible TV Models (Continental Edison): CELED43419B6, CELED554K20B6

Connectivity Technology: Infrared (IR)

Number of Buttons: 25

Maximum Range: 10 meters

Battery Type: AAA Alkaline (not included)

Dimensions (L x W x H): 22.9 x 4.7 x 2.8 cm

Weight: 90 grams

Special Feature: Ergonomic design

10. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the retailer or the original purchase documentation. Keep your proof of purchase for any warranty claims.