

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cecotec](#) /

› [Cecotec Ready Warm 6700 Ceramic Sky Heater User Manual](#)

Cecotec Ready Warm 6700 Ceramic Sky (05823)

Cecotec Ready Warm 6700 Ceramic Sky Heater User Manual

Model: Ready Warm 6700 Ceramic Sky (05823)

INTRODUCTION

Thank you for choosing the Cecotec Ready Warm 6700 Ceramic Sky Heater. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new ceramic heater. Please read it thoroughly before use and keep it for future reference.

The Ready Warm 6700 Ceramic Sky is a powerful 2000W ceramic heater designed to provide efficient and quiet heating for spaces up to 20 m² (45 m³). It features an adjustable thermostat, three operating modes, 45° oscillation for even heat distribution, and a triple safety system for user protection.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug the heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
- Do not use outdoors. This heater is intended for indoor use only.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.

- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- This heater includes a triple safety system: an automatic shut-off in case of accidental tip-over or overheating, and a protective grille to prevent finger insertion.

SETUP

Unpacking

Carefully remove the heater from its packaging. Ensure all components are present and undamaged. Retain the packaging for storage or if the product needs to be returned.

Placement

Place the heater on a firm, level surface. Ensure there is at least 1 meter (3 feet) of clear space around the heater to allow for proper airflow and to prevent fire hazards. Do not place the heater directly below a power outlet. This heater is designed with VerticalDesign for stability and portability, making it easy to move between rooms.



Image: The Cecotec Ready Warm 6700 Ceramic Sky Heater positioned on a table in a living room, demonstrating its compact and vertical design.



Image: A person carrying the Cecotec Ready Warm 6700 Ceramic Sky Heater, highlighting its lightweight and portable design for easy transport between rooms.

Power Connection

Plug the power cord into a grounded 220V electrical outlet. Ensure the outlet is suitable for the heater's 2000W power rating.

OPERATING INSTRUCTIONS

The heater is controlled by a single rotary dial located on the top of the unit.



Image: A top-down view of the Cecotec Ready Warm 6700 Ceramic Sky Heater, showing the single rotary control dial for mode and power selection.

Power On/Off and Mode Selection

1. **Turn On:** Rotate the dial clockwise from the "0" (Off) position to select a desired mode.
2. **Fan Mode (Symbol: Fan icon or 'I'):** This mode operates the fan without heating, providing air circulation.
3. **Eco Mode (Symbol: 'II' or 1000W):** Provides 1000W of heating power for energy-efficient warmth.
4. **Turbo Mode (Symbol: 'III' or 2000W):** Provides 2000W of heating power for rapid and maximum warmth.
5. **Turn Off:** Rotate the dial counter-clockwise back to the "0" position.



Image: A hand turning the control dial on the Cecotec Ready Warm 6700 Ceramic Sky Heater, illustrating the intuitive manual operation.

Oscillation Function

The heater features a 45° oscillation function to distribute heat more evenly across the room. This function is typically activated by a separate switch or by a specific setting on the main dial (refer to the markings on your specific unit if not explicitly labeled on the dial). When oscillation is active, the heater will slowly rotate from side to side.

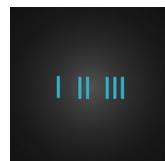


Image: An icon depicting 45-degree oscillation, indicating the heater's ability to rotate for wider heat distribution.

MAINTENANCE

Cleaning

- Always unplug the heater and allow it to cool completely before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the heater. Do not use abrasive cleaners or solvents.
- Do not immerse the heater in water or spray water directly onto it.
- Periodically clean the air intake and exhaust grilles with a vacuum cleaner brush attachment to remove dust and lint.



Image: A close-up view of the heater's protective grille, which should be kept clean for optimal performance.

Storage

When not in use, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in; power switch off; power outage; safety feature activated.	Ensure plug is firmly in outlet; turn power dial to a mode (Eco/Turbo); check household circuit breaker; check if heater has tipped over or overheated (unplug, wait 30 min, plug back in).
Heater produces no heat in heating modes.	Fan mode selected; thermostat set too low.	Ensure Eco or Turbo mode is selected; adjust thermostat dial to a higher setting.
Heater stops unexpectedly.	Overheat protection activated; tip-over switch activated.	Unplug the heater, wait 30 minutes for it to cool down, then plug it back in. Ensure the heater is on a stable, level surface. Clear any obstructions from air vents.
Reduced airflow or heating efficiency.	Dust accumulation on grilles.	Clean the air intake and exhaust grilles as described in the Maintenance section.

SPECIFICATIONS

Brand	Cecotec
Model Number	05823
Product Name	Ready Warm 6700 Ceramic Sky Heater
Color	White
Dimensions (L x W x H)	55.3 x 18 x 21.5 cm
Power	2000 W
Voltage	220 Volts
Operating Modes	3 (Fan, Eco 1000W, Turbo 2000W)
Oscillation	45°
Coverage Area	Up to 20 m ² (45 m ³)
Noise Level	44 Decibels (low noise operation)

Safety Features	Automatic shut-off (tip-over, overheat), Protective grille
Item Weight	1.62 Kilograms
Heating Method	Forced air
Recommended Use	Indoor, e.g., living rooms, bedrooms, bathrooms

WARRANTY AND SUPPORT

Cecotec products are manufactured to high-quality standards. This product is covered by a warranty in accordance with current legislation.

- **Spare Parts Availability:** Spare parts for this model are available for 10 years from the date of purchase.
- For technical support, warranty claims, or to purchase spare parts, please contact Cecotec customer service through their official website or the retailer where the product was purchased.
- Please retain your proof of purchase for any warranty claims.