

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Cecotec](#) /

› [Cecotec Ready Warm 2650 Curved Flames Connected Electric Fireplace User Manual](#)

**Cecotec 05814**

# Cecotec Ready Warm 2650 Curved Flames Connected Electric Fireplace User Manual

Model: 05814

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read these instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the voltage indicated on the rating label matches your mains voltage.
- Do not use this appliance near water or in damp environments.
- Do not cover the heater to avoid overheating.
- Keep combustible materials (furniture, curtains, paper, clothes, etc.) at least 1 meter away from the front, sides, and rear of the heater.
- Do not insert objects into any openings, as this may cause electric shock, fire, or damage to the heater.
- Unplug the appliance when not in use or before cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

## 2. PRODUCT OVERVIEW

---

The Cecotec Ready Warm 2650 Curved Flames Connected Electric Fireplace provides efficient heating and a realistic flame effect for your home. It features a modern curved design, two power settings, Wi-Fi connectivity for smartphone control, and a remote control for convenience.



Image: The Cecotec Ready Warm 2650 electric fireplace mounted on a blue wall in a modern living room setting, showcasing its curved design and flame effect.

### 3. PACKAGE CONTENTS

---

Please check that all components are present and in good condition upon opening the package. If any item is missing or damaged, contact Cecotec customer service.

- Cecotec Ready Warm 2650 Electric Fireplace
- Remote Control
- Mounting Hardware (screws, wall anchors)
- User Manual

### 4. INSTALLATION AND SETUP

---

#### 4.1 Choosing a Location

Select a suitable location for your electric fireplace. Ensure it is on a stable, flat surface if freestanding, or a sturdy wall if wall-mounted. Maintain a safe distance from combustible materials as specified in the safety instructions.

## **4.2 Wall Mounting**

1. Mark the desired mounting height on the wall. Ensure there is a power outlet nearby.
2. Using the provided template (if included) or measuring the fireplace's mounting points, drill pilot holes.
3. Insert wall anchors into the drilled holes.
4. Secure the mounting bracket (if separate) or the fireplace itself to the wall using the provided screws.
5. Ensure the fireplace is securely fastened before proceeding.

## **4.3 Power Connection**

Plug the power cord into a grounded electrical outlet. Ensure the outlet meets the power requirements of the fireplace (2000W).

# **5. OPERATING INSTRUCTIONS**

---

## **5.1 Control Panel**

The fireplace features a control panel, typically located on the unit itself, allowing manual operation.



Image: A detailed view of the touch control panel on the top right side of the electric fireplace, showing power, flame, and timer buttons.

## 5.2 Remote Control

The included remote control provides convenient access to all functions from a distance.



Image: The black remote control for the Cecotec electric fireplace, featuring buttons for power, flame intensity, heat settings, and timer functions.

- **Power Button:** Turns the fireplace on or off.
- **Heat Settings:** Select between 1000 W (low heat) and 2000 W (high heat).
- **Flame Effect:** Adjust the intensity of the LED flames (2 intensities available).
- **Timer:** Set a daily or weekly timer for automatic operation.

### 5.3 Wi-Fi Control (Cecotec App)

For advanced control and scheduling, download the "Cecotec" app on your smartphone and connect it to your fireplace.

1. Download the "Cecotec" app from your smartphone's app store.
2. Follow the in-app instructions to pair your fireplace with your Wi-Fi network.
3. Once connected, you can control all functions, including power, heat, flame intensity, and scheduling, directly from your smartphone.



Image: A hand holding a smartphone showing the Cecotec application interface, which allows control over the fireplace's temperature and settings.

#### 5.4 Flame Effect

The fireplace features realistic LED flames with two adjustable intensities. These flames can be operated independently of the heating function.



Image: A close-up view of the interior of the electric fireplace, highlighting the glowing artificial logs and decorative stones, creating a realistic flame ambiance.

## 6. MAINTENANCE

---

### 6.1 Cleaning

- Always unplug the fireplace and allow it to cool completely before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Periodically check the air inlets and outlets for dust accumulation and clean them with a soft brush or vacuum cleaner.
- Do not immerse the fireplace in water or any other liquid.

### 6.2 Storage

If storing the fireplace for an extended period, unplug it and store it in a cool, dry place, preferably in its original packaging, away from direct sunlight and moisture.

## 7. TROUBLESHOOTING

| Problem                     | Possible Cause   | Solution  |
|-----------------------------|--|---|
| Fireplace does not turn on. | No power supply.<br>Power switch is off.                         | Check if the power cord is securely plugged in.<br>Ensure the main power switch on the unit is in the "ON" position.<br>Check the circuit breaker.                            |
| No heat output.             | Heat function is off.<br>Overheat protection activated.          | Activate the heat function using the remote or control panel.<br>Unplug the unit, wait 15-20 minutes for it to cool down, then plug it back in. Ensure vents are not blocked. |
| Flame effect not working.   | Flame effect is off.<br>LED malfunction.                         | Activate the flame effect using the remote or control panel.<br>If the issue persists, contact customer service.  |
| Remote control not working. | Dead batteries.<br>Obstruction between remote and unit.          | Replace batteries.<br>Ensure there is a clear line of sight to the fireplace's sensor.  |
| Wi-Fi connection issues.    | Incorrect Wi-Fi password.<br>Router too far.<br>App not updated. | Re-enter Wi-Fi password in the app.<br>Move the fireplace closer to the router or use a Wi-Fi extender.<br>Update the Cecotec app to the latest version.                      |

## 8. SPECIFICATIONS

| Feature                  | Detail  |
|--------------------------|---|
| Brand                    | Cecotec   |
| Model Number             | 05814   |
| Color                    | Black   |
| Dimensions (L x W x H)   | 72.7 x 19.7 x 60 cm (28.6 x 7.8 x 23.6 inches)                              |
| Weight                   | 11 kg (24.25 lbs)   |
| Power                    | 2000 Watts (2 heat levels: 1000W / 2000W)                                   |
| Material                 | Metal   |
| Heating Area             | Up to 25 m <sup>2</sup>   |
| Special Features         | Timer, Wi-Fi Control, Remote Control, Curved Panel, 2 LED Flame Intensities |
| Spare Parts Availability | 10 Years  |

## 9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official Cecotec website.

For technical support, spare parts, or any inquiries regarding your Cecotec Ready Warm 2650 Electric Fireplace, please

contact Cecotec customer service through their official website or the contact information provided in your product documentation.

You can find more information and support at: [www.cecotec.com](http://www.cecotec.com)