

RYGHT STILL ANC R481986

RYGHT STILL ANC R481986 Wireless Earbuds User Manual

Model: STILL ANC R481986 | Brand: RYGHT

[Overview](#) [Setup](#) [Operating](#) [Introduction](#) [What's in the Box](#) [Product](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the RYGHT STILL ANC R481986 Wireless Earbuds. These earbuds are designed to provide a superior audio experience with Active Noise Cancellation (ANC) technology, ensuring clear sound and deep bass. This manual will guide you through the setup, operation, and maintenance of your new earbuds.

2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- RYGHT STILL ANC Wireless Earbuds
- Wireless Charging Case
- USB-C Cable
- Ear Tips (XS, S, M sizes)
- User Manual



Image: Contents of the RYGHT STILL ANC R481986 package, including earbuds, charging case, USB-C cable, and various ear tip sizes. A key is shown for size comparison.

3. PRODUCT OVERVIEW

The RYGHT STILL ANC R481986 earbuds feature a sleek, in-ear design with intuitive touch controls. The compact charging case provides extended battery life and convenient storage.



Image: RYGHY STILL ANC R481986 earbuds resting in their open charging case, with different sized ear tips displayed in front.

Earbud Components

- **Touch Control Area:** For managing music, calls, and voice assistant.

- **Microphones:** For calls and Active Noise Cancellation.
- **Ear Tips:** Replaceable for optimal fit and sound isolation.

Charging Case Components

- **Charging Port:** USB-C for recharging the case.
- **LED Indicators:** Show battery status of the case and earbuds.

4. SETUP

4.1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

1. Place the earbuds into the charging case.
2. Connect the USB-C cable to the charging port on the case and to a power source.
3. The LED indicators on the case will show the charging status. Once fully charged, the indicators will remain solid or turn off.

The compact charging case is designed for easy portability and optimized charging via USB-C.



Image: RYGHT STILL ANC R481986 earbuds placed next to their closed charging case, ready for charging.

4.2. Bluetooth Pairing

Pair your earbuds with your device for the first time.

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, computer), go to Bluetooth settings and enable Bluetooth.
3. Select "RYGHT STILL ANC" from the list of available devices.
4. Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.

Thanks to their latest generation chips, pairing is quick and easy, providing a stable connection without latency.

4.3. Fitting the Earbuds

For optimal sound quality and comfort, choose the correct ear tip size.

1. Try different ear tip sizes (XS, S, M) to find the best fit for your ears.
2. Gently insert the earbuds into your ear canal and twist slightly to secure them.
3. A good fit will provide better noise isolation and bass response.



Image: A detailed view of one RYGHT STILL ANC R481986 earbud, highlighting its ergonomic design and ear tip.

5. OPERATING THE EARBUDS

5.1. Active Noise Cancellation (ANC) & Transparency Mode

The STILL ANC earbuds feature Active Noise Cancellation to reduce ambient distractions and Transparency Mode to stay aware of your surroundings.

- **ANC Mode:** Equipped with external microphones, the STILL ANC earbuds analyze your environment to suppress external noise, allowing you to focus on your audio.
- **Transparency Mode:** Activate this mode to allow ambient sounds to filter through, enabling you to hear your surroundings without removing the earbuds.

Refer to the touch control section for instructions on switching between modes.

5.2. Touch Controls

Manage your music, calls, and voice assistant with intuitive touch controls on the earbuds. Instant sound feedback confirms your actions.

Action	Function
--------	----------

Action	Function
Single Tap (Left/Right)	Play/Pause Music, Answer/End Call
Double Tap (Right)	Next Track
Double Tap (Left)	Previous Track
Triple Tap (Left/Right)	Activate Voice Assistant
Long Press (Left/Right)	Toggle ANC / Transparency Mode
Long Press (Incoming Call)	Reject Call



Image: Two RYGH T STILL ANC R481986 earbuds, showcasing the design and potential touch control areas.

5.3. Battery Life

The RYGH T STILL ANC earbuds offer extended listening time.

- Up to **4 hours** of listening time on a single charge.
- Up to **3 hours** of listening time with ANC activated.
- The charging case provides an additional **16 hours** of battery life, for a combined total of **20 hours**.

To recharge the earbuds, simply place them back into their charging case.

6. MAINTENANCE

6.1. Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove ear tips and clean them separately with mild soap and water if necessary. Ensure they are completely dry before reattaching.
- Do not use harsh chemicals or abrasive materials.

6.2. Storage

- When not in use, always store the earbuds in their charging case to protect them and keep them charged.
- Store in a cool, dry place away from extreme temperatures and direct sunlight.

Note: The earbuds are not waterproof. Avoid exposure to water or excessive moisture.

7. TROUBLESHOOTING

If you encounter any issues with your RYGHT STILL ANC earbuds, please refer to the common problems and solutions below:

Problem	Possible Solution
Earbuds not pairing	◦ Ensure earbuds are charged. ◦ Place earbuds back in the case, close it, then open it again to re-enter pairing mode. ◦ Turn off and on Bluetooth on your device. ◦ Forget "RYGHT STILL ANC" from your device's Bluetooth list and try pairing again.
No sound from one earbud	◦ Ensure both earbuds are charged. ◦ Place both earbuds back in the case, close it, then open it again. ◦ Check device's audio balance settings.
ANC not working effectively	◦ Ensure earbuds are properly seated in your ears with a good seal. ◦ Try different ear tip sizes for a better fit. ◦ Confirm ANC mode is activated via touch controls.
Touch controls unresponsive	◦ Ensure your fingers are clean and dry. ◦ Restart the earbuds by placing them in the case and taking them out.

8. SPECIFICATIONS

Feature	Detail
Model Name	STILL
Model Number	R481986
Brand	RYGHT
Color	Black
Ear Placement	In-Ear
Form Factor	In-Ear
Noise Control	Active Noise Cancellation
Connectivity Technology	Wireless
Wireless Communication Technology	Bluetooth
Audio Driver Type	Dynamic
Audio Driver Size	10 Millimeters
Control Method	Touch
Battery Life (Earbuds)	4 hours (3 hours with ANC)
Battery Life (with Case)	20 hours combined
Charging Port	USB-C
Weight	9 Grams (per earbud, approximate)
Water Resistance Level	Not waterproof
Compatible Devices	Computer, Smartphone, Tablet

9. WARRANTY & SUPPORT

9.1. Warranty Information

The RYGHT STILL ANC R481986 Wireless Earbuds come with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims.

9.2. Customer Support

For further assistance, technical support, or warranty inquiries, please contact RYGHT customer service. You can usually find contact information on the RYGHT official website or through your retailer.

[Visit the RYGHT Brand Store on Amazon](#)

