

[Manuals.plus](#) /

› [RYGHT](#) /

› RYGHT STILL ANC R481993 Wireless Earbuds User Manual

RYGHT STILL ANC R481993

RYGHT STILL ANC R481993 Wireless Earbuds User Manual

Model: STILL ANC R481993

INTRODUCTION

Thank you for choosing the RYGHT STILL ANC R481993 Wireless Earbuds. These earbuds are designed to provide a superior audio experience with Active Noise Cancelling (ANC) technology, clear sound, and deep bass. This manual will guide you through the setup, operation, and maintenance of your new earbuds to ensure optimal performance.

WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- RYGHT STILL ANC Wireless Earbuds
- Wireless Charging Case
- USB-C Charging Cable
- Ear Tips (XS, S, M sizes)
- User Manual



Image: RYGHT STILL ANC earbuds, charging case, and three pairs of ear tips (XS, S, M) included in the package.

PRODUCT OVERVIEW

Familiarize yourself with the components of your RYGHT STILL ANC earbuds.



Image: The RYGHY STILL ANC charging case showing the USB-C charging port on the back, with both earbuds placed beside it.



Image: A close-up view of the two RYGHT STILL ANC earbuds, highlighting their design, touch control surfaces, and microphone locations.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. The charging case features a USB-C port for optimized recharging.

1. Place the earbuds into the charging case.
2. Connect the USB-C charging cable to the port on the back of the charging case and plug the other end into a USB power source.
3. The indicator lights on the case will show the charging status.

The earbuds provide 4 hours of listening time (3 hours with ANC activated), with an additional 16 hours provided by the charging case.

2. Pairing with Your Device

The STILL ANC earbuds utilize latest generation chips for simple and fast pairing, ensuring a stable connection without latency.

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, computer), go to Bluetooth settings.
3. Select "RYGHT STILL ANC" from the list of available devices.
4. Once connected, you will hear an audio confirmation.



Image: The RYGHT STILL ANC charging case shown open, with the earbuds removed, illustrating the state for initial pairing.

OPERATING INSTRUCTIONS

Touch Controls

The STILL ANC earbuds feature intuitive touch controls for easy management of music, calls, and voice assistant. Instant sound feedback confirms your actions.

Action	Function
Single Tap (Left/Right Earbud)	Play/Pause Music, Answer/End Call
Double Tap (Right Earbud)	Next Track
Double Tap (Left Earbud)	Previous Track
Triple Tap (Left/Right Earbud)	Activate Voice Assistant
Long Press (Left/Right Earbud)	Toggle ANC / Transparency Mode

Active Noise Cancelling (ANC) & Transparency Mode

The STILL ANC earbuds analyze your environment using external microphones to suppress external noise, helping you stay focused. Activate Transparency mode to allow external sounds to filter through, enhancing situational awareness.

- **ANC Mode:** Reduces ambient noise for an immersive listening experience.
- **Transparency Mode:** Allows you to hear your surroundings without removing the earbuds.
- **Normal Mode:** Standard audio playback without noise cancellation or transparency.

To switch between these modes, perform a long press on either earbud's touch control area.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your earbuds.

Cleaning

- Regularly clean the ear tips with a soft, dry cloth.
- Gently wipe the earbuds and charging case with a slightly damp cloth, then dry thoroughly.
- Do not use abrasive cleaners or immerse the earbuds or case in water.

Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store in a cool, dry place away from extreme temperatures and direct sunlight.

TROUBLESHOOTING

If you encounter any issues, please refer to the following common solutions:

Problem	Solution
---------	----------

Problem	Solution
Earbuds not pairing	Ensure earbuds are charged. Place them back in the case, close, then open again to re-enter pairing mode. Check your device's Bluetooth settings and try reconnecting.
No sound from one earbud	Ensure both earbuds are charged. Try placing both back in the case, closing it, and then taking them out again. Re-pair with your device if necessary.
Poor sound quality	Ensure ear tips are correctly sized and sealed in your ear. Clean any debris from the earbud nozzles. Try moving closer to your connected device to avoid interference.
ANC not working effectively	Ensure ANC mode is activated (long press on earbud). Check that the earbuds are properly seated in your ears to create a good seal.
Charging case not charging	Verify the USB-C cable is securely connected to both the case and the power source. Try a different USB-C cable or power adapter.

SPECIFICATIONS

Feature	Detail
Brand	RYGHT
Model Name	STILL
Model Number	R481993
Color	White
Ear Placement	In-Ear
Form Factor	In-Ear
Noise Control	Active Noise Cancellation
Connectivity Technology	Wireless (Bluetooth)
Driver Size	10mm
Earbud Battery Life	4 hours (3 hours with ANC)
Total Battery Life (with case)	Up to 20 hours
Charging Port	USB-C
Weight (per earbud)	9 Grams
Compatible Devices	Computer, Smartphone, Tablet
Water Resistance Level	Not waterproof

WARRANTY AND SUPPORT

Warranty Information

The RYGHT STILL ANC R481993 Wireless Earbuds come with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims.

Customer Support

For further assistance, technical support, or warranty inquiries, please visit the official RYGHT website or contact their customer service department. Contact details can typically be found on the manufacturer's website or in the packaging materials.