

idoooz U4

idoooz IPX8 Waterproof MP3 Player U4 Instruction Manual

Model: U4

1. PRODUCT OVERVIEW

The idoooz IPX8 Waterproof MP3 Player U4 is designed for active individuals who wish to enjoy music during water sports or other physical activities. Its robust waterproof design and lightweight construction make it suitable for swimming, running, and jogging. This manual provides essential information for setup, operation, and maintenance.



Figure 1: idoooz IPX8 Waterproof MP3 Player U4 with included headphones.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1x idoooz IPX8 Waterproof MP3 Player (U4)
- 1x Waterproof Headphone
- 1x USB Data Cable for charging and data transfer
- 1x 60cm Audio Extension Cable
- 3x Pairs of 3-layer earplugs (various sizes)
- 1x Pair of single-layer earplugs
- 1x User Manual



Figure 2: All components included in the idoooz MP3 Player package.

3. PRODUCT FEATURES AND CONTROLS

The idoooz U4 MP3 player features intuitive controls and a durable design for active use.



Figure 3: Detailed view of the MP3 player's controls and 360-degree rotatable clip.

- **ON/OFF & Play/Pause Button:** Central button for power and playback control.
- **Volume + / Volume -:** Buttons to adjust audio volume.
- **Previous Track / Rewind:** Button to go to the previous song or rewind the current track (long press).
- **Next Track / Fast Forward:** Button to skip to the next song or fast forward the current track (long press).
- **Status Indicator:** LED light indicating device status (e.g., charging, playing).
- **3.5mm Port:** Used for charging, headphone connection, and data transfer.
- **360-degree Rotatable Clip:** Allows for flexible attachment to clothing or gear.

4. SETUP

4.1 Charging the Device

Before initial use, fully charge your MP3 player. The device typically comes with some charge, but a full charge ensures optimal performance.

1. Connect the provided USB data cable to the 3.5mm port on the MP3 player.
2. Plug the other end of the USB cable into a computer's USB port or a compatible USB wall adapter (not included).
3. The status indicator light will show the charging status. It will typically turn solid when fully charged.
4. A full charge can provide up to 20 hours of playback time, depending on usage habits.

4.2 Transferring Music Files

The MP3 player supports MP3, WMA, APE, and FLAC audio formats. It has an 8 GB storage capacity, capable of storing over 2,000 songs.

1. Connect the MP3 player to your computer using the USB data cable.
2. The computer should recognize the MP3 player as a removable storage device.
3. Open the MP3 player's folder on your computer.
4. Drag and drop your desired audio files (MP3/WMA/APE/FLAC) directly into the player's storage folder.
5. Once transfer is complete, safely eject the device from your computer before disconnecting the USB cable.

4.3 Attaching and Wearing Headphones

The included waterproof headphones are designed for comfort and to prevent water seepage.

1. Select the appropriate earplug size (large, medium, or small) from the provided accessories for a secure and comfortable fit. For swimming, 3-layer earplugs are recommended to prevent water entry.
2. Connect the waterproof headphones to the 3.5mm port on the MP3 player.
3. For swimming, the short cable headphones are ideal to avoid tangling. For other activities like running, you can use the 60cm audio extension cable for more flexibility.
4. Use the 360-degree rotatable clip to securely attach the MP3 player to your swimwear, goggles strap, shirt, or shorts.



Figure 4: MP3 player securely clipped to a swimmer's goggle strap.

5. OPERATION

5.1 Power On/Off

- **To Power On:** Press and hold the central ON/OFF & Play/Pause button until the status indicator light illuminates.
- **To Power Off:** Press and hold the central ON/OFF & Play/Pause button until the status indicator light turns off.

5.2 Music Playback

- **Play/Pause:** Press the central ON/OFF & Play/Pause button once to play or pause the current track.
- **Volume Adjustment:** Use the **Volume +** and **Volume -** buttons to increase or decrease the audio volume.
- **Next/Previous Track:** Press the **Next Track** button to skip to the next song. Press the **Previous Track** button to go back to the beginning of the current song or to the previous song.
- **Fast Forward/Rewind:** Long press the **Next Track** button to fast forward. Long press the **Previous Track** button to rewind.

Video 1: Demonstration of idoooz MP3 Player controls and features.

6. MAINTENANCE

Proper maintenance ensures the longevity and performance of your idoooz Waterproof MP3 Player.

- **Rinsing:** After each use, especially in chlorinated or saltwater, rinse the MP3 player and headphones thoroughly with fresh water.
- **Drying:** Pat dry the device and headphones completely before storing or charging. Ensure the 3.5mm port is dry to prevent corrosion and ensure proper charging/data transfer.
- **Storage:** Store the device in a cool, dry environment away from direct sunlight and extreme temperatures.
- **Earplug Care:** Clean earplugs regularly with mild soap and water. Replace them if they show signs of wear or damage to maintain a good seal.

7. TROUBLESHOOTING

If you encounter issues with your idoooz MP3 player, please refer to the following common solutions:

- **Device Not Turning On:** Ensure the device is fully charged. Connect it to a power source and check if the status indicator light appears.
- **No Sound/Poor Sound Quality:**
 - Check if the headphones are securely plugged into the 3.5mm port.
 - Verify the volume level is not set to minimum.
 - Ensure the earplugs are correctly inserted into your ears to create a proper seal, especially in water.
 - If used in water, ensure no water has entered the headphone speakers. Dry them thoroughly.
- **Device Not Recognized by Computer:**
 - Ensure the USB data cable is properly connected to both the MP3 player and the computer.
 - Try a different USB port on your computer.
 - Make sure the device is completely dry before connecting to the computer. Moisture in the port can interfere with connection.
- **Battery Drains Quickly:** Ensure the device is fully charged before use. Reduce volume levels to conserve battery life.

8. SPECIFICATIONS

- **Model:** U4
- **Brand:** idoooz
- **Waterproof Rating:** IPX8 (submersible up to 12 feet/3 meters)
- **Memory Storage Capacity:** 8 GB (stores over 2,000 songs)
- **Supported Audio Formats:** MP3, WMA, APE, FLAC
- **Playback Time:** Up to 20 hours (varies with usage)
- **Connectivity Technology:** USB
- **Item Weight:** 3.7 ounces
- **Package Dimensions:** 5.35 x 4.25 x 1.54 inches

9. WARRANTY AND SUPPORT

idoooz is committed to customer satisfaction. Your MP3 player comes with the following:

- **30-Day Replacement:** A no-questions-asked replacement policy within 30 days of purchase.
- **365-Day Warranty:** A long-term warranty covering manufacturing defects for 365 days from the date of purchase.
- **24/7 Customer Support:** Exclusive customer support available 24 hours a day, 7 days a week.

For any questions, technical assistance, or warranty claims, please contact idoooz customer support. Refer to the product packaging or official idoooz website for the most current contact information.

Video 2: Official idoooz video showcasing the Waterproof MP3 Player and Headphones.