

[Manuals.plus](#) /

› [Maxxair](#) /

› Maxxair Maxxfan Deluxe Remote Control 00A01150K User Manual

Maxxair 00A01150K

Maxxair Maxxfan Deluxe Remote Control User Manual

MODEL: 00A01150K

Introduction

This manual provides detailed instructions for the Maxxair Maxxfan Deluxe replacement remote control, model 00A01150K. This remote is designed to operate compatible Maxxair Maxxfan Deluxe ventilation systems, allowing for convenient control of fan speed, temperature settings, and vent operation.

Product Overview



Image: Maxxair Maxxfan Deluxe Replacement Remote Control 00A01150K. The remote is black with a digital display at the top and various control buttons below.

The Maxxair Maxxfan Deluxe remote control features a clear digital display and intuitive button layout for easy operation. Key components include:

- **Digital Display:** Shows current settings such as SET TEMP, ROOM TEMP, fan status (ON/OFF), fan speed percentage, and vent status (OPEN/AIR IN).
- **Power Button:** Located at the top center, used to turn the remote and fan system on or off.
- **FAN ON/OFF Button:** Controls the fan motor operation.
- **Fan Speed Control Buttons (Up/Down Triangles):** Adjusts the fan speed.
- **AUTO Button:** Activates or deactivates automatic fan operation based on temperature settings.
- **Temperature Adjustment Buttons (+/-):** Used to set the desired temperature for automatic mode.
- **Vent Open/Close Button:** Controls the opening and closing of the fan's vent lid.
- **Air Direction/Rotation Button:** Adjusts the direction of airflow or activates oscillation if supported by the fan model.

Setup

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert the required batteries (not included) according to the polarity indicators (+ and -) inside the compartment.
4. Close the battery compartment cover securely.

Initial Use

The remote control uses infrared (IR) technology. Ensure there is a clear line of sight between the remote and the Maxxfan Deluxe unit for proper operation. No complex pairing is typically required for standard IR replacement remotes.

Operating Instructions

Point the remote control directly at the Maxxfan Deluxe unit when pressing buttons.

- **Power On/Off:** Press the **Power** button to turn the Maxxfan system on or off.
- **Fan On/Off:** Press the **FAN ON/OFF** button to toggle the fan motor on or off independently of the main power.
- **Adjust Fan Speed:** Use the **Up (▲)** and **Down (▼)** triangle buttons to increase or decrease the fan speed. The current speed percentage will be displayed.
- **Set Temperature (Auto Mode):** Press the **AUTO** button to activate automatic temperature control. Use the **+** and **-** buttons to set your desired temperature (SET TEMP). The fan will adjust its speed or turn on/off to maintain this temperature relative to the ROOM TEMP.
- **Open/Close Vent:** Press the **Vent Open/Close** button (icon resembling a vent) to open or close the fan's lid. The display will show OPEN or AIR IN.
- **Adjust Air Direction:** Press the **Air Direction/Rotation** button (icon resembling a circular arrow) to change the airflow direction or activate oscillation, if your Maxxfan model supports this feature.

Maintenance

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or immerse the remote in water.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or the display dims. Refer to the Battery Installation section for instructions.

Troubleshooting

- **Remote not responding:**
 - Check if batteries are correctly installed and have sufficient charge. Replace if necessary.
 - Ensure there is a clear line of sight between the remote and the Maxxfan unit. Obstructions can block the infrared signal.
 - Confirm the remote is pointed directly at the Maxxfan's IR receiver.
- **Limited operating range:**
 - Ensure batteries are fresh.
 - Minimize interference from strong light sources or other electronic devices.
- **Fan not performing as expected:**
 - Verify that the Maxxfan Deluxe unit itself is powered on and functioning correctly.
 - Ensure the remote control is compatible with your specific Maxxfan Deluxe model.

Specifications

Brand	Maxxair (Replacement for)
Model Name	00A01150K
Connectivity Technology	Infrared (IR)
Special Feature	Digital Display
Compatible Devices	Maxxfan
Maximum Range	10 Meters
Maximum Supported Devices	1
Controller Type	Button Control

Warranty and Support

For information regarding warranty coverage or technical support for your Maxxair Maxxfan Deluxe remote control, please refer to the documentation provided with your original Maxxfan Deluxe unit or contact Maxxair customer service directly. Keep your purchase receipt for warranty claims.

