

[manuals.plus](#) /

› [Ikea](#) /

› [IKEA GURSKEN Chest of 3 Drawers, Light Beige, 69x67 cm Instruction Manual](#)

**Ikea 60503296**

# IKEA GURSKEN Chest of 3 Drawers Instruction Manual

Model: 60503296

## 1. INTRODUCTION

This instruction manual provides important information for the safe assembly, proper use, and maintenance of your IKEA GURSKEN Chest of 3 Drawers. Please read this manual thoroughly before beginning assembly or use, and retain it for future reference.

The IKEA GURSKEN chest of drawers is designed for functionality and simplicity, offering ample storage with three spacious drawers. Its light beige finish and minimalist design complement various room decors.



*Image 1.1: The IKEA GURSKEN Chest of 3 Drawers in Light Beige.*

## 2. SAFETY INFORMATION

**WARNING: Tip-over hazard.** Furniture can tip over. This furniture must be permanently fixed to the wall with the enclosed wall attachment device(s) to prevent it from tipping over. Different wall materials require different types of fastening devices. Use fastening devices suitable for the walls in your home (not included).

- Always place heavier items in the lowest drawers.
- Do not allow children to climb or hang on drawers, doors, or shelves.
- Never open more than one drawer at a time to maintain stability.
- Ensure the chest is placed on a level surface.

## 3. WHAT'S IN THE BOX

Before assembly, please verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact IKEA customer service.


- Chest Of Drawers (main panels and drawer components)

- Assembly Instructions (detailed graphical guide)
- Hardware (screws, dowels, drawer slides, handles, wall attachment device)

## 4. SETUP AND ASSEMBLY

Assembly of the IKEA GURSKEN Chest of 3 Drawers is required. A detailed graphical assembly guide is included in the packaging. Please follow the step-by-step instructions carefully to ensure correct and safe assembly.

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Identify all hardware and panels using the included assembly instructions.
3. Follow the numbered steps in the graphical manual for assembling the frame, drawers, and attaching the back panel.
4. Once assembled, securely attach the chest to the wall using the provided wall attachment device and appropriate fasteners for your wall type. This is a critical safety step.

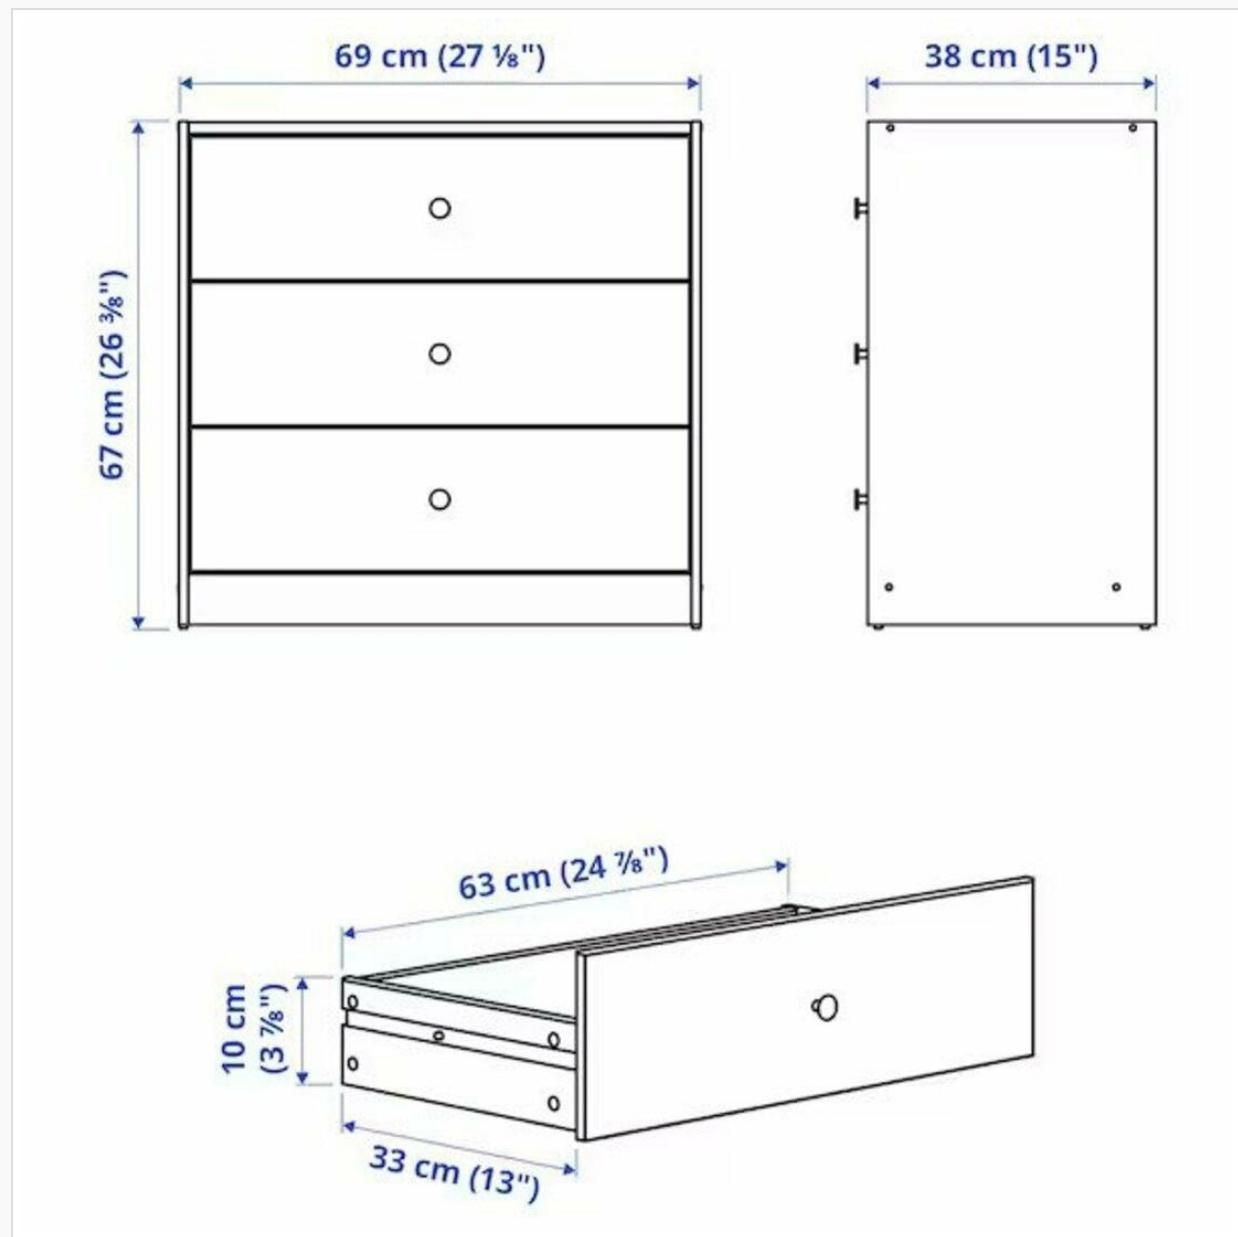

*Image 4.1: Dimensional overview of the GURSKEN chest and its drawer components, useful during assembly.*

## 5. OPERATING AND USAGE

The GURSKEN chest features three standard sliding drawers designed for storing clothing and personal items. Each drawer offers 33 cm of interior depth.

- **Opening/Closing Drawers:** Gently pull the handle to open a drawer and push it back until it closes completely. The drawers are designed for smooth operation.
- **Storage Capacity:** Utilize the generous space in each drawer for organized storage. Avoid overloading drawers, as this can affect their smooth operation and the stability of the unit.
- **Placement:** This chest is suitable for bedrooms and guest rooms. Its compact dimensions (38D x 69W x 67H Centimeters) make it versatile for various room sizes.



*Image 5.1: An open drawer showcasing storage capacity for folded garments.*



*Image 5.2: The GURSKEN chest integrated into a bedroom environment.*

## 6. MAINTENANCE

To keep your GURSKEN chest of drawers in optimal condition, follow these simple maintenance guidelines:

- **Cleaning:** Wipe clean with a cloth dampened in a mild cleaner. Immediately wipe dry with a clean, dry cloth to prevent moisture damage.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, strong solvents, or polishes that may damage the acrylic paint finish.
- **Regular Checks:** Periodically check all screws and fittings to ensure they are tight. Re-tighten if necessary.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration of the finish.

## 7. TROUBLESHOOTING

If you encounter any issues with your GURSKEN chest of drawers, refer to the following common solutions:

- **Drawers not sliding smoothly:**

- Check if the drawer slides are correctly installed and aligned.
- Ensure the drawer is not overloaded.
- Verify that all screws on the drawer slides and frame are tight.

- **Chest feels wobbly:**

- Confirm that the chest is placed on a level surface.
- Re-tighten all assembly screws.
- Ensure the wall attachment device is securely fastened to both the chest and the wall.

- **Minor scratches or marks:**

- For minor blemishes, touch-up paint matching the light beige finish may be used. Consult IKEA for recommended repair products.

## 8. SPECIFICATIONS

Feature	Detail
<b>Brand</b>	Ikea
<b>Model Number</b>	60503296
<b>Product Dimensions</b>	38D x 69W x 67H Centimeters (15"D x 27.2"W x 26.4"H)
<b>Colour</b>	Light Beige
<b>Material</b>	Acrylic Paint, Engineered Wood, Particleboard, Plastic Edging
<b>Number of Drawers</b>	3
<b>Drawer Interior Depth</b>	33 cm (13 inches)
<b>Assembly Required</b>	Yes
<b>Item Weight</b>	14 kg
<b>Room Type</b>	Bedroom, Guest Room

## 9. WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the documentation provided at the time of purchase or visit the official IKEA website. IKEA offers customer support for assembly assistance, missing parts, or product defects.

You can find more information and contact details on the official IKEA website [www.ikea.com](http://www.ikea.com)

