

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Coleman](#) /

› [Coleman Pop-Up Instant Tent \(Model 2206799\) Instruction Manual](#)

Coleman 2206799

Coleman Pop-Up Instant Tent (Model 2206799) Instruction Manual

2-Person PFAS-Free Blue Model

[Introduction](#) [Safety Information](#) [What's in the Box](#) [Setup](#) [Operating the Tent](#) [Maintenance](#)
[Troubleshooting](#) [Specifications](#) [Warranty](#) [Support](#)

INTRODUCTION

Thank you for choosing the Coleman Pop-Up Instant Tent. This tent is designed for quick and easy setup, making your camping experience more enjoyable. Its portable and lightweight design, combined with weatherproof features, ensures comfort and protection in various outdoor conditions. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your tent.

SAFETY INFORMATION

- **WARNING:** Keep all flame and heat sources away from this tent fabric.
- The tent is made of flame-resistant fabric which meets CPAI-84 specifications. It is not fireproof. The fabric will burn if left in continuous contact with any flame source.
- Do not use fuel-burning appliances inside the tent.
- Ensure proper ventilation to avoid carbon monoxide buildup.
- Always secure the tent with stakes and guylines to prevent wind damage.
- Avoid setting up the tent under trees with dead branches or in areas prone to falling debris.
- Do not store the tent wet; always dry it thoroughly before packing to prevent mildew.

WHAT'S IN THE BOX

Your Coleman Pop-Up Instant Tent package includes the following components:

- Pop-Up Tent with pre-assembled poles
- Adjustable Rainfly
- Carry Bag

- Tent Stakes (quantity: 4)

SETUP INSTRUCTIONS

The Coleman Pop-Up Instant Tent is designed for extremely fast and easy setup. Follow these steps for a hassle-free experience:

1. Unpacking and Initial Pop-Up

1. Remove the tent from its circular carry bag.
2. Unfasten the elastic band securing the folded tent.
3. Carefully release the tent. It will automatically spring into shape due to its pre-assembled poles.
4. Lay the tent flat on the ground in your desired camping spot.

**Sets Up in
10 Seconds**
with pre-assembled poles



Image: The Coleman Pop-Up Instant Tent automatically springs into shape, ready for use in approximately 10 seconds.

Your browser does not support the video tag.

Video: Official Coleman demonstration of the 2-Person Pop-Up Tent setup process, highlighting its rapid deployment.

2. Securing the Tent

1. Locate the stake loops around the base of the tent.
2. Use the provided tent stakes to firmly secure each loop to the ground. This prevents the tent from shifting or blowing away in windy conditions.

3. Attaching the Rainfly

The adjustable rainfly provides additional protection against wind and rain while allowing for ventilation.

1. Drape the rainfly over the top of the tent, aligning its corners and attachment points with those on the tent body.
2. Secure the rainfly using the clips or ties provided. Adjust as needed for optimal coverage and ventilation.



Image: A user adjusting the rainfly, which helps protect against wind and rain while providing ventilation.



TAPED FLOOR SEAMS
help keep you dry

Image: Detail of the taped floor seams, designed to keep the interior dry.

OPERATING THE TENT

Doors and Ventilation

The tent features one door and one window for entry, exit, and airflow. Both are equipped with zippers for secure closure and mesh screens for insect protection.

- To open or close, use the zippers along the door and window perimeters.
- Roll up the fabric door/window covers and secure them with the attached toggles for maximum ventilation.
- The mesh roof provides additional airflow and stargazing opportunities when the rainfly is removed.

Gear Pockets

An internal gear pocket is provided to keep small items organized and easily accessible.



Image: Interior of the tent highlighting the convenient gear pockets for storing small personal items.



Image: A person comfortably resting inside the tent, demonstrating the available interior space.

MAINTENANCE

- **Cleaning:** Hand wash the tent fabric with mild soap and water. Do not use harsh detergents or bleach.
- **Drying:** Always ensure the tent is completely dry before packing it away to prevent mildew and odors. Air dry in a shaded area.
- **Storage:** Store the tent in its original carry bag in a cool, dry place, away from direct sunlight.
- **Repairs:** For minor tears or punctures, use a tent repair kit. For significant damage, contact Coleman customer support.

TROUBLESHOOTING

Tent Not Popping Up Correctly

- Ensure the elastic strap is fully released.
- Gently shake the tent to help the poles expand.
- Check for any fabric snags or obstructions preventing full expansion.

Water Leakage

- Verify that the rainfly is correctly installed and taut, covering all mesh areas.
- Ensure all zippers are fully closed.
- Check the taped floor seams for any damage.

Difficulty Folding the Tent

Folding the tent requires a specific technique. Refer to the instructions sewn into the carry bag or the official video for guidance. Practice makes perfect!

Your browser does not support the video tag.

Video: A short preview from Coleman demonstrating how to pack up the 2-Person Pop-Up Tent. This video is useful for understanding the folding technique.

SPECIFICATIONS

Feature	Detail
Brand	Coleman
Model Number	2206799
Occupancy	2 Person
Product Dimensions (Packed)	30"L x 30"W x 1"H
Product Dimensions (Set Up)	Floor Length: 9.2 Feet, Floor Width: 6.5 Feet, Max Height: 3 Feet 4 Inches
Item Weight	5.9 Pounds
Material Type	Polyester (185T 68D Fire and water resistant polyester fly)
Pole Material Type	Fiberglass (Pre-Attached)
Water Resistance Level	Water Resistant (Taped floor seams, Adjustable Rainfly)
UV Protection	Yes
Number of Doors	1
Number of Windows	1
Number of Pockets	1
Seasons	3 Season

WARRANTY INFORMATION

The Coleman Pop-Up Instant Tent comes with a **1-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

To make a warranty claim, please retain your proof of purchase and contact Coleman customer support.

CUSTOMER SUPPORT

For further assistance, questions, or to report any issues with your Coleman Pop-Up Instant Tent, please visit the official Coleman website or contact their customer service department.

- **Official Website:** www.coleman.com
- **Customer Service:** Refer to the contact information on the official website for phone numbers or email support.