

[Manuals.plus](#) /

› [NutriBullet](#) /

› NutriBullet EveryGrain Cooker User Manual

NutriBullet NBG50100

NutriBullet EveryGrain Cooker User Manual

Model: NBG50100 | Brand: NutriBullet

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main cooker base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- This appliance is for household use only.

WHAT'S INCLUDED

Your NutriBullet EveryGrain Cooker package includes the following components:

- (1) 600W Cooker Base
- (1) 10-cup non-stick Cooking Pot

- (1) Steaming Basket
- (1) Rice Spoon
- (1) Measuring Scoop
- (1) User & Recipe Guide

What's included.



600W
Cooker Base



10cup
Non-stick Cooking



Measuring
Scoop



Steaming Basket



Rice Spoon



Recipe Guide



User Guide

Image: All components included with the NutriBullet EveryGrain Cooker.

SETUP

Before first use, ensure all packaging materials are removed and clean all removable parts as described in the "Care and Cleaning" section.

1. Place the cooker base on a stable, level, heat-resistant surface.
2. Insert the non-stick cooking pot into the cooker base.
3. Ensure the lid is properly aligned and closed before operation.



Image: The NutriBullet EveryGrain Cooker ready for use.

OPERATING INSTRUCTIONS

The NutriBullet EveryGrain Cooker features intuitive presets for various grains and a versatile steam function.

General Cooking Steps:

1. Add your desired grains and water to the non-stick cooking pot. Refer to the included User & Recipe Guide for specific grain-to-water ratios. The 10-cup cooking pot accommodates up to 5 dry scoops of rice or grains.
2. Close the lid securely.
3. Plug the cooker into a standard electrical outlet.
4. Select the appropriate cooking preset button on the control panel.
5. Press the "Start/Stop" button to begin cooking.
6. Once cooking is complete, the cooker will automatically switch to "Keep Warm" mode (if enabled).

Cooking Presets:

- **White Rice:** Optimized for cooking white rice to perfection.
- **Brown Rice:** Specifically designed for brown rice, ensuring proper texture and doneness.
- **Oats:** Ideal for preparing various types of oats.
- **Quinoa:** Ensures fluffy and well-cooked quinoa.
- **Grains:** A general setting for other grain varieties not covered by specific presets.

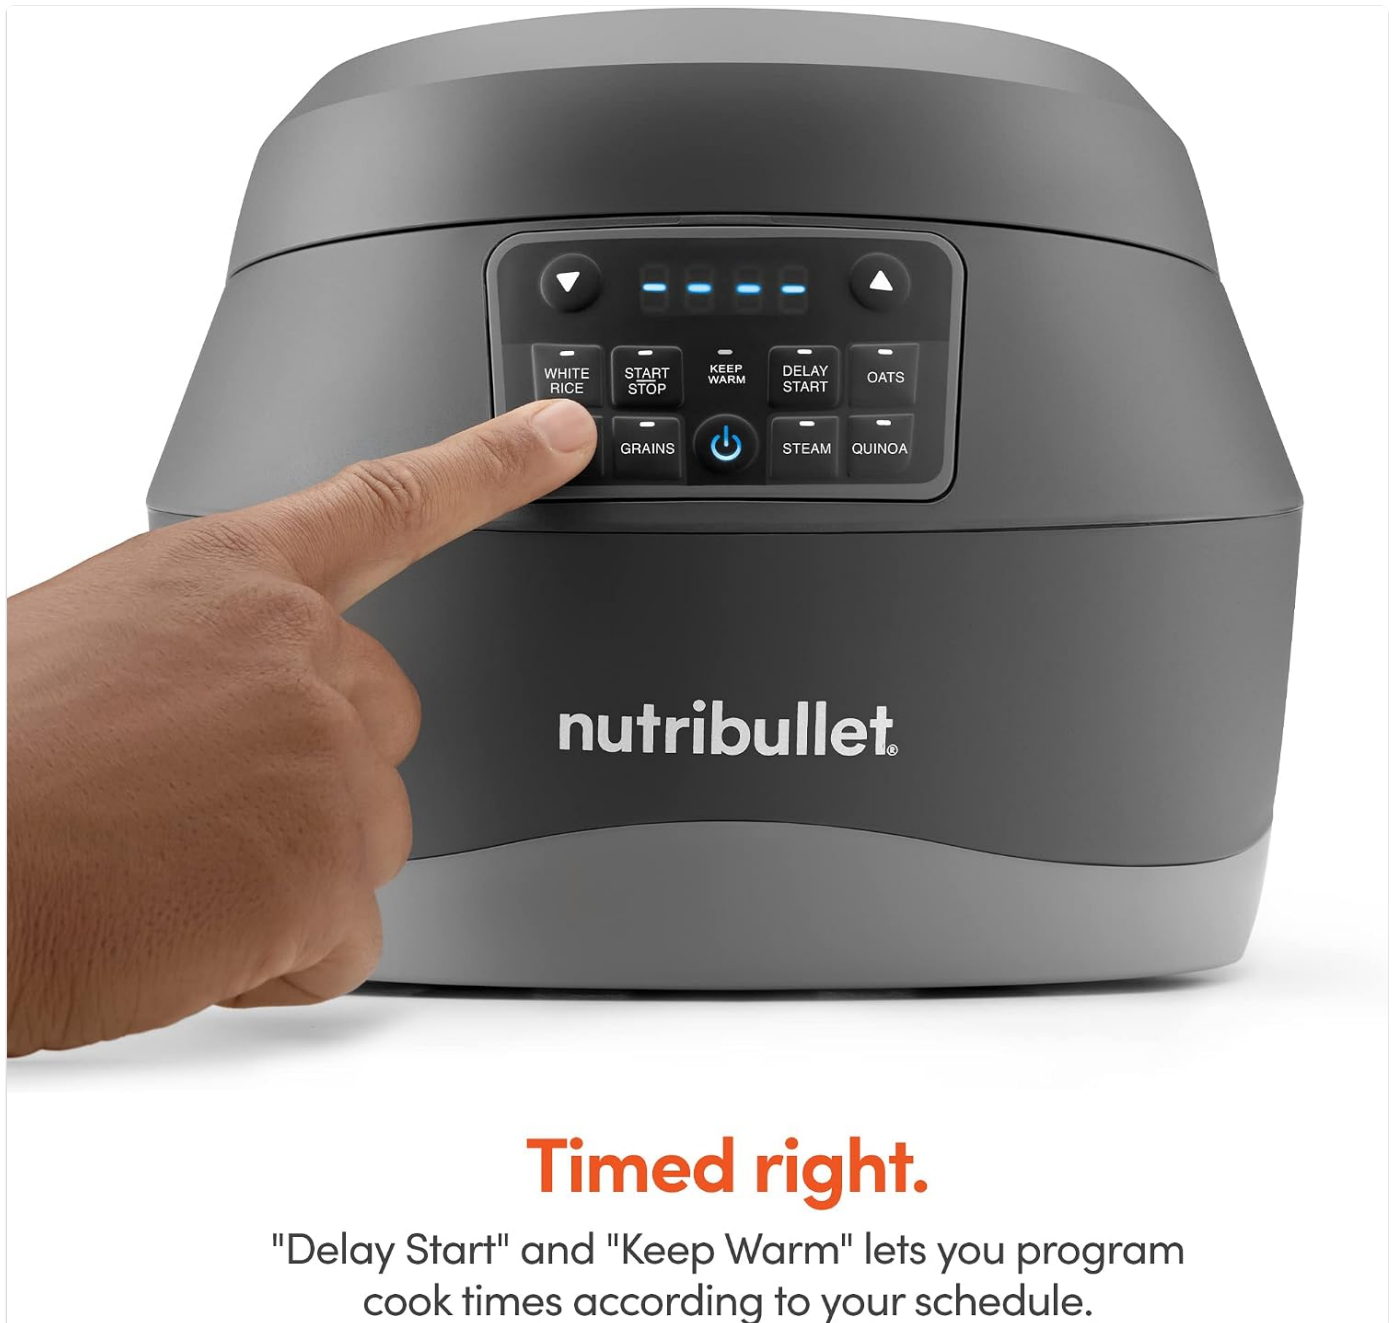


Image: Selecting a cooking preset on the control panel.

Special Functions:

- **Steam:** Use the included steaming basket to steam vegetables, fish, or other foods. This function can be used simultaneously with grain cooking or independently.
- **Delay Start:** Program the cooker to begin cooking at a later time, allowing for meal prep according to your schedule.
- **Keep Warm:** Automatically keeps cooked food warm until serving time.



Full steam.

Steaming basket and setting let you steam ingredients on top of your grains for double-duty cooking efficiency.

Image: Utilizing the steaming function with vegetables.



Golden ratios.

Measure liquid directly in the cooking pot for precise portioning.

Image: Serving perfectly cooked grains.

CARE AND CLEANING

Proper care and cleaning will extend the life of your NutriBullet EveryGrain Cooker.

- Always unplug the cooker and allow it to cool completely before cleaning.
- Clean all removable parts (non-stick cooking pot, steaming basket, rice spoon, measuring scoop) with warm, soapy water.
- All parts are dishwasher safe except the non-stick cooking pot.
- Wipe the cooker base clean with a damp cloth. Do not immerse the cooker base in water or any other liquid.
- Ensure all parts are thoroughly dry before storing or next use.



Cleans like a dream.

Clean up easily with a warm, soapy cloth.

Image: Cleaning the non-stick cooking pot.

TROUBLESHOOTING

If you encounter issues with your NutriBullet EveryGrain Cooker, please refer to the following common solutions:

- **Cooker not turning on:** Ensure the power cord is securely plugged into both the cooker and a working electrical outlet.
- **Food not cooking properly:** Verify that the correct grain-to-water ratio was used and the appropriate cooking preset was selected. Ensure the lid is properly closed.
- **Overflowing during cooking:** Check that you have not exceeded the maximum fill lines for ingredients in the cooking pot.
- For more detailed troubleshooting, consult the comprehensive User & Recipe Guide included with your product.

SPECIFICATIONS

Feature	Detail
Brand	NutriBullet

Model Name	NutriBullet EveryGrain Cooker
Model Number	NBG50100
Capacity	10-cup (dry scoops) / 2 Liters
Product Dimensions	11.4"D x 10.8"W x 8.6"H
Power Source	Corded Electric
Wattage	600 watts
Voltage	120 Volts (North American & Canadian Electrical Standards)
Material	Plastic (Durable), Non-stick coated PFOA-Free Cooking Pot
Color	Dark Gray Body / Light Gray Skirt
Special Feature	Programmable (Presets, Delay Start, Keep Warm)
Item Weight	8 Pounds
UPC	818049028295, 818049026796

WARRANTY INFORMATION

For detailed warranty information regarding your NutriBullet EveryGrain Cooker, please refer to the official Warranty document provided with your product or available for download:

[Download Warranty \(PDF\)](#)

CUSTOMER SUPPORT

Should you require further assistance or have questions not covered in this manual, please contact NutriBullet customer support or visit their official website.

- **Online Support:** Visit the official NutriBullet website for FAQs, product registration, and contact information.
- **User Manual (PDF):** A digital copy of the full user manual is available for download:[Download User Manual \(PDF\)](#)