

[manuals.plus](#) /› [Kitchen Mama](#) /› [Kitchen Mama Auto 2.0 Electric Can Opener User Manual \(Model CO1150-AG\)](#)

Kitchen Mama CO1150-AG

Kitchen Mama Auto 2.0 Electric Can Opener User Manual

Model: CO1150-AG

INTRODUCTION

Welcome to the Kitchen Mama Auto 2.0 Electric Can Opener. This innovative device is designed to simplify the process of opening cans, providing a hands-free experience with smooth, safe edges. It is suitable for a wide variety of can shapes, including curved and high-pressure cans, making your kitchen tasks easier and safer.



The Kitchen Mama Auto 2.0 Electric Can Opener, showcasing its sleek design and Alpine Green color.

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Kitchen Mama Auto 2.0 Electric Can Opener to ensure safe operation and prevent injury.

- Keep the can opener out of reach of children.
- Do not immerse the device in water or any other liquid.
- Use only 4 AA batteries. Do not mix old and new batteries, or different types of batteries.
- Avoid contact with the cutting blade during operation.
- Do not attempt to open damaged or severely dented cans.
- If the device malfunctions, do not attempt to repair it yourself. Contact customer support.
- Ensure the can opener is placed securely on the can before starting.

PACKAGE CONTENTS

- 1x Kitchen Mama Auto 2.0 Electric Can Opener
- 1x User Manual (this document)

SETUP: BATTERY INSTALLATION

The Kitchen Mama Auto 2.0 requires 4 AA batteries (not included) for operation.

1. Locate the battery compartment on the underside of the can opener.
2. Slide the battery compartment cover open.
3. Insert 4 new AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.



Insert four AA batteries into the designated compartment, observing correct polarity.

OPERATING YOUR CAN OPENER

The Kitchen Mama Auto 2.0 features a simple one-button operation for effortless can opening.

1. Place the can opener on top of the can, aligning the cutting blade with the can's rim. The internal magnet will help secure it.
2. Press the easy-touch start/stop button once. The can opener will automatically grip the can and begin cutting along the side.
3. Allow the can opener to complete a full 360-degree rotation around the can. It will stop automatically or you may press the button again to stop it.

4. Once stopped, carefully lift the can opener from the can. The lid will remain attached to the can opener via the magnet.
5. To release the lid, press the button again or use the built-in lid remover.

Easy Three Step Process

Push to start. Wait for 360° rotation around the can. Push again when it's done.



Simply place the opener on the can, press the button to start, and press again to stop when finished.

Smooth-Edge Cutting

The upgraded patented blade is designed to cut along the side of the lid, ensuring that both the can and the removed lid have smooth, safe edges. This innovative cutting method prevents sharp edges and minimizes the risk of injury, while also avoiding contact with the food inside the can.

Smooth Edge

Safely opens the cans & leaves a smooth rim.



The can opener leaves a smooth, safe edge on both the can and the lid after opening.

Built-in Lid Remover

For cans with high pressure or sticky contents, the Kitchen Mama Auto 2.0 includes an integrated lid remover. This feature allows you to safely and easily detach the lid from the can opener without direct contact, maximizing convenience and minimizing mess.

Built-in Lid Remover

Use the lid remover to open cans with relatively high pressure inside.



Utilize the built-in lid remover for easy and clean lid detachment, especially for high-pressure or sticky cans.

Tilted Blade 2.0

Engineered to Handle Soda and Cans
with Tapered Edges



The Tilted Blade 2.0 is engineered to handle diverse can shapes, including those with tapered edges like soda cans.

MAINTENANCE AND CARE

To ensure the longevity and hygienic operation of your Kitchen Mama Auto 2.0 Electric Can Opener, follow these care instructions:

- After each use, wipe the exterior of the can opener with a damp cloth.
- Do not submerge the can opener in water or place it in a dishwasher.
- Clean any food residue from the cutting mechanism using a small brush or damp cloth, taking care to avoid direct contact with the blade.
- Store the can opener in a dry place when not in use.

TROUBLESHOOTING GUIDE

If you encounter any issues with your Kitchen Mama Auto 2.0, please refer to the following table for common problems and solutions:

Issue	Possible Cause	Solution
Device does not start	Low or incorrectly installed batteries	Check battery installation, replace with fresh AA batteries.

Issue	Possible Cause	Solution
Device stops mid-operation	Batteries are low; improper can placement	Replace batteries; ensure the can opener is securely and correctly positioned on the can's rim.
Lid does not detach easily	Can contents are sticky or high-pressure	Use the built-in lid remover to safely lift the lid.
Uneven cutting or grinding noise	Can opener not properly aligned or damaged blade	Ensure the can opener is correctly aligned on the can's rim. If the issue persists, the blade may be damaged; contact customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	CO1150-AG
Brand	Kitchen Mama
Color	Alpine Green
Material	Plastic, Stainless Steel
Product Dimensions	2.76"W x 7"H
Item Weight	11.4 ounces
Operation Mode	Automatic
Power Source	4 AA Batteries (not included)

WARRANTY AND CUSTOMER SUPPORT

For warranty information, product registration, or technical assistance, please visit the official Kitchen Mama website or contact their customer support directly. Refer to your purchase documentation for specific warranty details and contact information.

Related Documents - CO1150-AG

	<u>Kitchen Mama Auto Electric Can Opener: Use and Care Manual</u> This manual provides essential information for the Kitchen Mama Auto Electric Can Opener, including safety precautions, operating instructions, maintenance guidelines, and troubleshooting tips for optimal use.
	<u>Kitchen Mama One-Touch Electric Can Opener: Use and Care Manual</u> Comprehensive use and care manual for the Kitchen Mama One-Touch Electric Can Opener. Learn how to operate, maintain, and troubleshoot your can opener for safe and efficient use.

	<p>Kitchen Mama Electric Gravity Salt & Pepper Mill User Manual</p> <p>Comprehensive user manual for the Kitchen Mama Electric Gravity Salt & Pepper Mill, detailing features, setup, operation, care, and troubleshooting. Features one-flick activation and adjustable coarseness.</p>
	<p>Kitchen Mama Auto Electric Can Opener: Use and Care Manual</p> <p>This manual provides essential information for the Kitchen Mama Auto Electric Can Opener, including safety precautions, operating instructions, maintenance guidelines, and troubleshooting tips for optimal use.</p>
	<p>KITCHENMUH Electric Jar Opener User Manual - Easy Jar Opening for Everyone</p> <p>Comprehensive user manual for the KITCHENMUH Electric Jar Opener. Learn how to install batteries, operate the device, troubleshoot common issues, and follow safety guidelines for effortless jar opening, especially for users with arthritis or weak hands.</p>
	<p>KitcheShop KC12 Electric Jar Opener User Manual and Warranty</p> <p>User manual and warranty information for the KitcheShop KC12 automatic electric jar opener, designed for ease of use in the kitchen.</p>