

XIAOMI L75M6-ESG

Xiaomi Q1 Series 4K Ultra HD Smart QLED TV (L75M6-ESG) User Manual

Model: L75M6-ESG

1. INTRODUCTION

This manual provides essential information for the setup, operation, maintenance, and troubleshooting of your Xiaomi Q1 Series 4K Ultra HD Smart QLED TV, model L75M6-ESG. Please read this manual thoroughly before using the product to ensure proper functionality and safety.

The Xiaomi Q1 Series TV features a 75-inch 4K Ultra HD QLED display with a 120Hz refresh rate, offering a wide viewing angle of 178 degrees. It includes Android TV 10 with PatchWall 4, integrated IMDb ratings, and access to numerous streaming applications. Audio is delivered through a 30 Watts, 6-speaker setup with Dolby Audio and DTS-HD support. Connectivity options include HDMI 2.1 with eARC, USB ports, Bluetooth 5.0, and built-in Wi-Fi with Chromecast.

2. WHAT'S IN THE BOX

Upon unpacking, verify that all the following components are present:

- 1 x Xiaomi Q1 Series 4K Ultra HD Smart QLED TV (L75M6-ESG)
- 2 x Table Stand Base
- 1 x Remote Control
- 4 x Screws for stand assembly
- User Manual (this document)
- Power Cable



Image: Front view of the Xiaomi Q1 Series 75-inch QLED TV with its table stand.

3. SETUP GUIDE

3.1. Installing the TV Stand

1. Carefully place the TV screen-down on a soft, flat surface to prevent damage.
2. Align the two table stand bases with the corresponding slots at the bottom of the TV.
3. Secure each stand base using the provided screws. Ensure they are tightened firmly.
4. With assistance, carefully lift the TV and place it on a stable, level surface.

25+ Content Partners

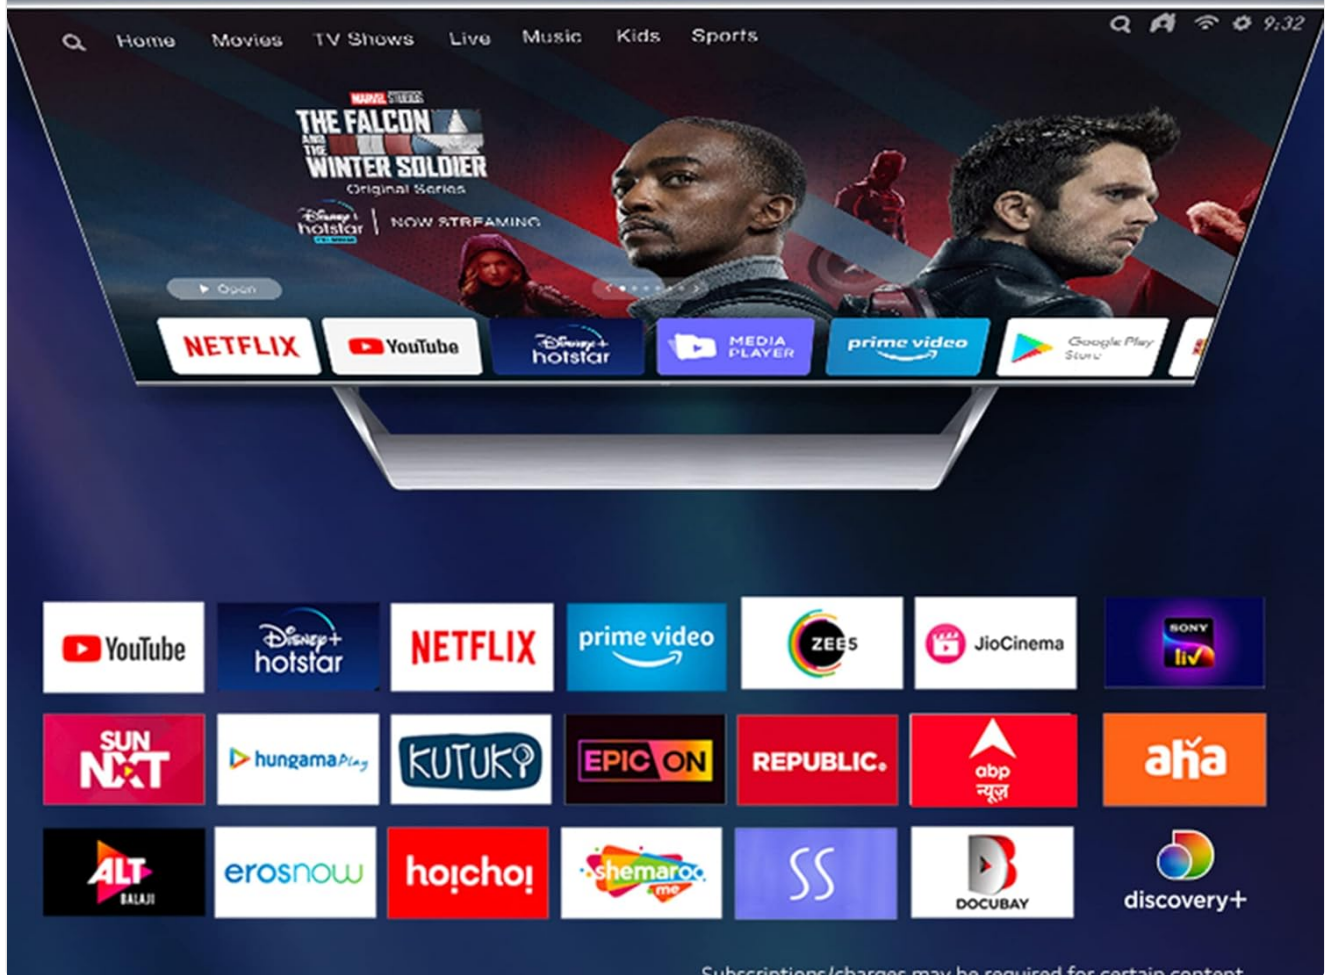 


Image: The Xiaomi Q1 Series TV securely mounted on its table stand.

3.2. Connecting External Devices

The TV features multiple ports for connecting various devices. Refer to the image below for port locations.



Mi Remote Features



Mi Quick Wake

Turn on the TV in less than 5 sec



Mi Quick Settings

Long press the Mi Button to enter quick settings menu



Mi Quick Mute

Double tap volume down button to Mute

Image: Rear view of the TV displaying HDMI, USB, Ethernet, and other connectivity ports.

- **HDMI Devices:** Connect gaming consoles, Blu-ray players, or set-top boxes to the HDMI ports. The TV has 3 HDMI ports, one of which supports eARC for enhanced audio return.
- **USB Devices:** Connect USB drives for media playback or other USB accessories to the 2 USB ports.
- **Network Connection:** For wired internet, connect an Ethernet cable to the LAN port. For wireless internet, connect via Wi-Fi during initial setup.
- **Audio Output:** Use the Optical port for digital audio output to sound systems or the eARC HDMI port for Dolby Atmos passthrough.

3.3. Initial Power-On and Basic Settings

1. Connect the power cable to the TV and then to a power outlet.
2. Press the power button on the remote control or on the TV itself to turn it on.
3. Follow the on-screen instructions to complete the initial setup, including language selection, network connection (Wi-Fi), Google account login, and channel scanning.

4. OPERATING INSTRUCTIONS

4.1. Remote Control Functions

The included remote control provides convenient access to all TV functions. Ensure 2 AAA batteries are inserted correctly.



Image: A detailed diagram of the Mi TV remote control, highlighting features like Quick Wake, Quick Settings, and Quick Mute.

- **Power Button:** Turns the TV on or off.
- **Google Assistant Button:** Activates voice commands.
- **Mi Quick Wake:** Powers on the TV in less than 5 seconds.
- **Mi Quick Settings:** Long press the Mi button to access quick settings.
- **Mi Quick Mute:** Double tap the volume down button to mute audio.
- **Navigation Pad:** Use for menu navigation.
- **Netflix & Prime Video Buttons:** Dedicated buttons for direct access to these streaming services.

4.2. Smart TV Features (Android TV & PatchWall)

Your Xiaomi Q1 Series TV runs on Android TV 10 and features PatchWall 4, providing a rich smart TV experience.

25+ Content Partners

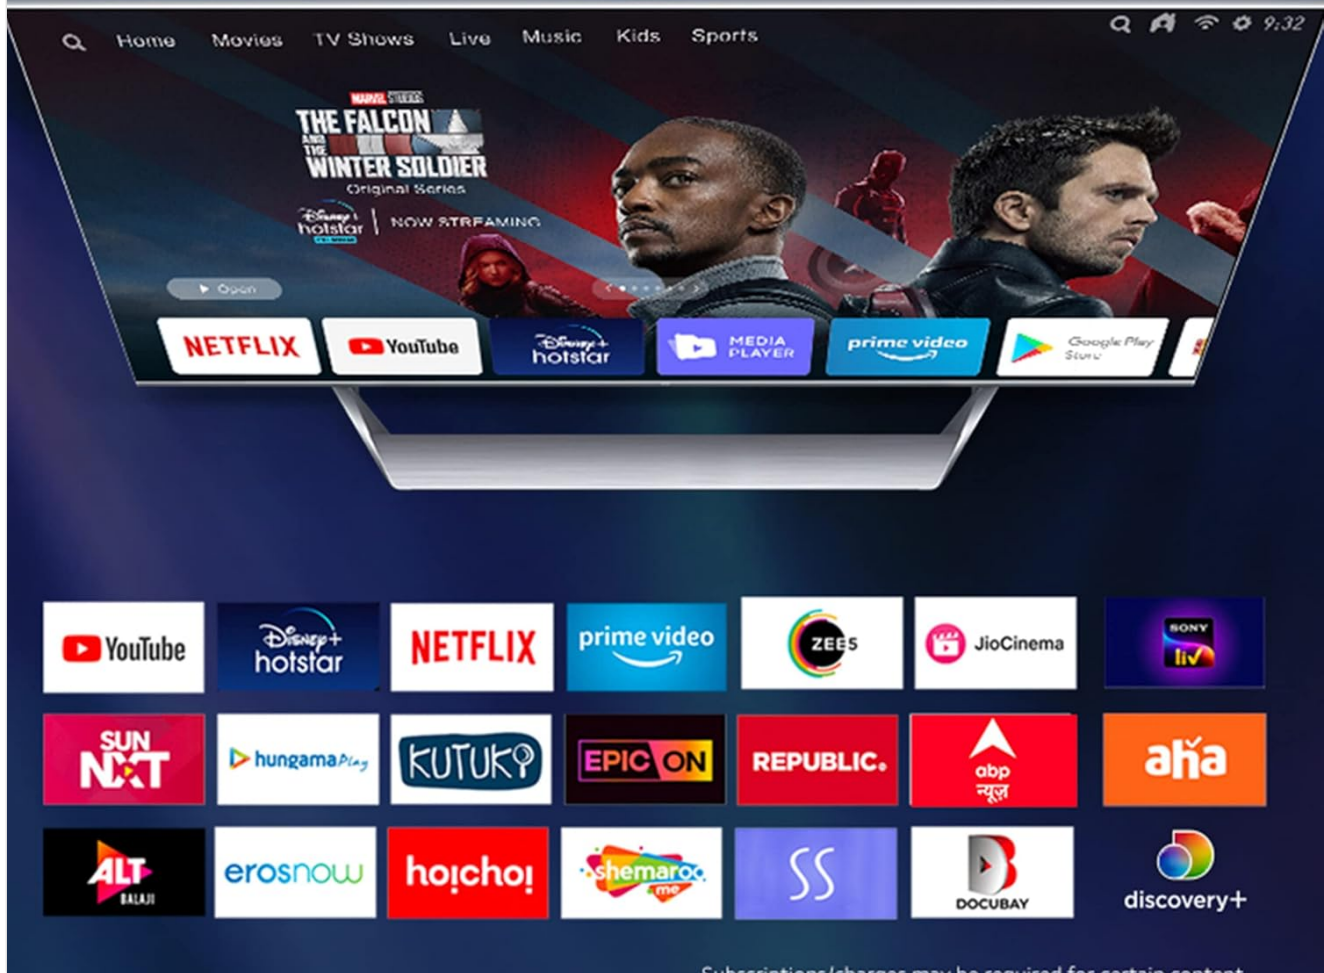 


Image: The TV screen showing the PatchWall interface with icons for popular streaming services and content categories.

- **PatchWall 4:** Offers a curated content experience with IMDb integration, universal search, and access to over 75 free live channels.
- **Android TV 10:** Access the Google Play Store for over 5000 apps, including popular streaming services like Prime Video, Netflix, Disney+ Hotstar, and YouTube.
- **Chromecast Built-in:** Cast content directly from your smartphone or tablet to the TV.
- **Google Assistant:** Use voice commands via the remote control for searching content, controlling smart home devices, and more.
- **Kids Mode:** Features parental lock options for child-friendly content.

4.3. Connectivity Features

- **Wi-Fi:** Supports built-in dual-band Wi-Fi for stable wireless internet connection.
- **Bluetooth 5.0:** Connect wireless headphones, soundbars, or other Bluetooth-enabled accessories.
- **ALLM (Auto Low Latency Mode):** Automatically switches to a low-latency mode when a gaming console is detected, reducing input lag.

5. MAINTENANCE

5.1. Cleaning the TV

- Always unplug the TV from the power outlet before cleaning.
- Use a soft, lint-free cloth to gently wipe the screen. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner (avoid harsh chemicals).
- Wipe the TV frame and stand with a dry, soft cloth.
- Do not spray cleaning liquids directly onto the screen or TV body.

5.2. Software Updates

Ensure your TV's software is up to date to benefit from the latest features and performance improvements. The TV will typically notify you of available updates. You can also manually check for updates in the TV's settings menu under "About" or "System Updates."

6. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No Power	Ensure the power cable is securely connected to both the TV and a working power outlet. Check if the power outlet is functioning by plugging in another device.
No Picture / Black Screen	Verify that the correct input source (HDMI 1, HDMI 2, etc.) is selected. Check all cable connections to external devices. Try restarting the TV and any connected devices.
No Sound	Check the TV's volume level and ensure it is not muted. Verify external audio system connections if applicable. Check audio settings in the TV menu.
Remote Control Not Responding	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV's IR receiver. Re-pair the Bluetooth remote if necessary (refer to TV settings).
Network Connection Issues	For Wi-Fi, ensure your router is on and within range. Re-enter the Wi-Fi password in the TV settings. For wired connection, check the Ethernet cable. Restart your router and the TV.
HDMI Port Malfunction	If an HDMI port stops working, try connecting the device to a different HDMI port. Ensure the HDMI cable is not damaged. If the issue persists across multiple devices and cables, contact customer support.
Laggy Performance / App Crashes	Ensure the TV has completed its startup processes (allow a few minutes after turning on). Close unused applications. Clear cache for problematic apps in settings. If issues persist, consider a factory reset (note: this will erase all personal data and settings).

7. SPECIFICATIONS

Key technical specifications for the Xiaomi Q1 Series 4K Ultra HD Smart QLED TV (L75M6-ESG):

Feature	Detail
Brand	XIAOMI
Model	L75M6-ESG
Model Name	Mi QLED TV 75
Screen Size	75 inches (189.34 cm)
Display Technology	QLED, Quantum Dot Display, Full Array Local Dimming
Resolution	4K Ultra HD (3840 x 2160 pixels)
Refresh Rate	120 Hz
Viewing Angle	178 Degrees
HDR Support	Dolby Vision, HDR10+, HLG
Operating System	Android TV 10
RAM Memory	2 GB
Storage	32 GB
Graphics Coprocessor	Mali G52 MP2
Audio Output	30 Watts (6 Speakers), Dolby Audio, DTS-HD, Dolby Atmos Passthrough eARC
HDMI Ports	3 (including 1 eARC)
USB Ports	2
Connectivity	Wi-Fi (Dual-Band), Bluetooth 5.0, Ethernet
Special Features	Chromecast built-in, Google Assistant, ALLM, PatchWall 4
Power Consumption (On-mode)	360 Watts
Product Dimensions (with stand)	167.4 x 7.9 x 97 cm (approx.)
Item Weight (with stand)	33.3 kg



Base width : 368.9mm

Image: Side view of the TV, illustrating its slim profile and the base width.



Image: Technical drawing showing the dimensions (length, height, and weight with/without stand) of the 75-inch TV.

8. WARRANTY AND SUPPORT

Your Xiaomi Q1 Series TV is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Xiaomi support website for your region.

For technical assistance, service requests, or further inquiries, please contact Xiaomi customer support. Contact details can typically be found on the official Xiaomi website or in the product documentation.

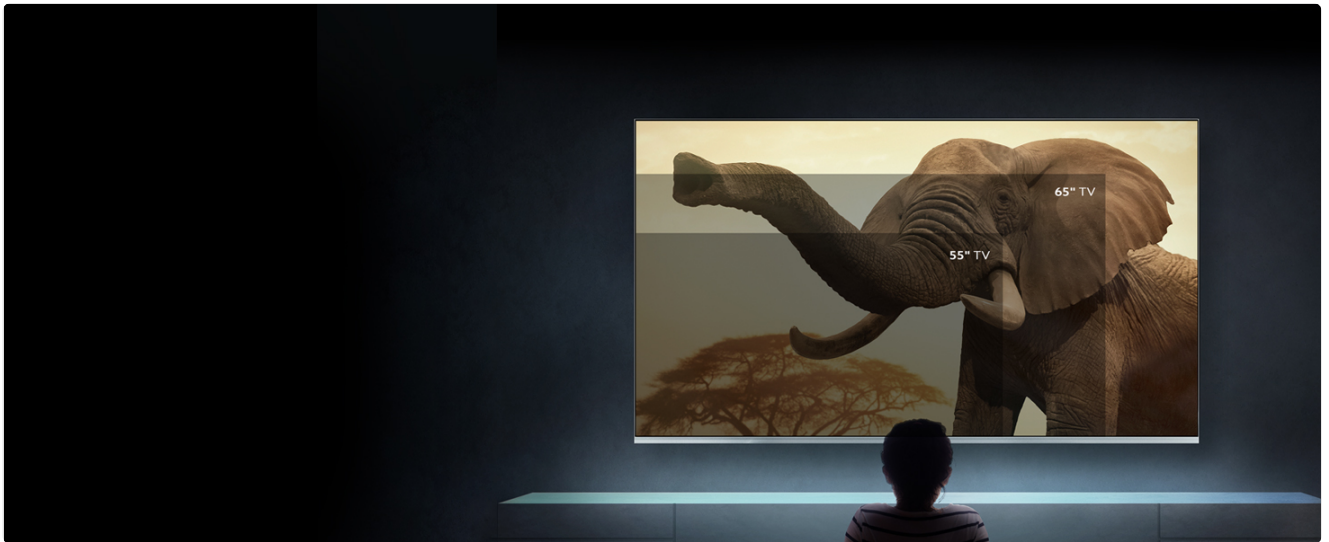 


Image: Illustration depicting Xiaomi service personnel adhering to hygiene and safety protocols during service calls.