

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Polaroid](#) /

› [Polaroid Hi-Print Gen1 Bluetooth Pocket Photo Printer User Manual](#)

Polaroid 6152

Polaroid Hi-Print Gen1 Bluetooth Pocket Photo Printer User Manual

Model: 6152

1. INTRODUCTION

Welcome to the Polaroid Hi-Print Gen1 Bluetooth Pocket Photo Printer. This compact, dye-sublimation printer allows you to transform digital photos from your mobile device into high-quality, 2x3 inch self-adhesive prints. This manual provides essential information for setup, operation, and maintenance to ensure optimal performance of your device.

2. PACKAGE CONTENTS

The Polaroid Hi-Print Everything Box includes:

- Polaroid Hi-Print Wireless Pocket Photo Printer
- Two packs of Polaroid Hi-Print Paper (40 sheets total)
- USB Charging Cable

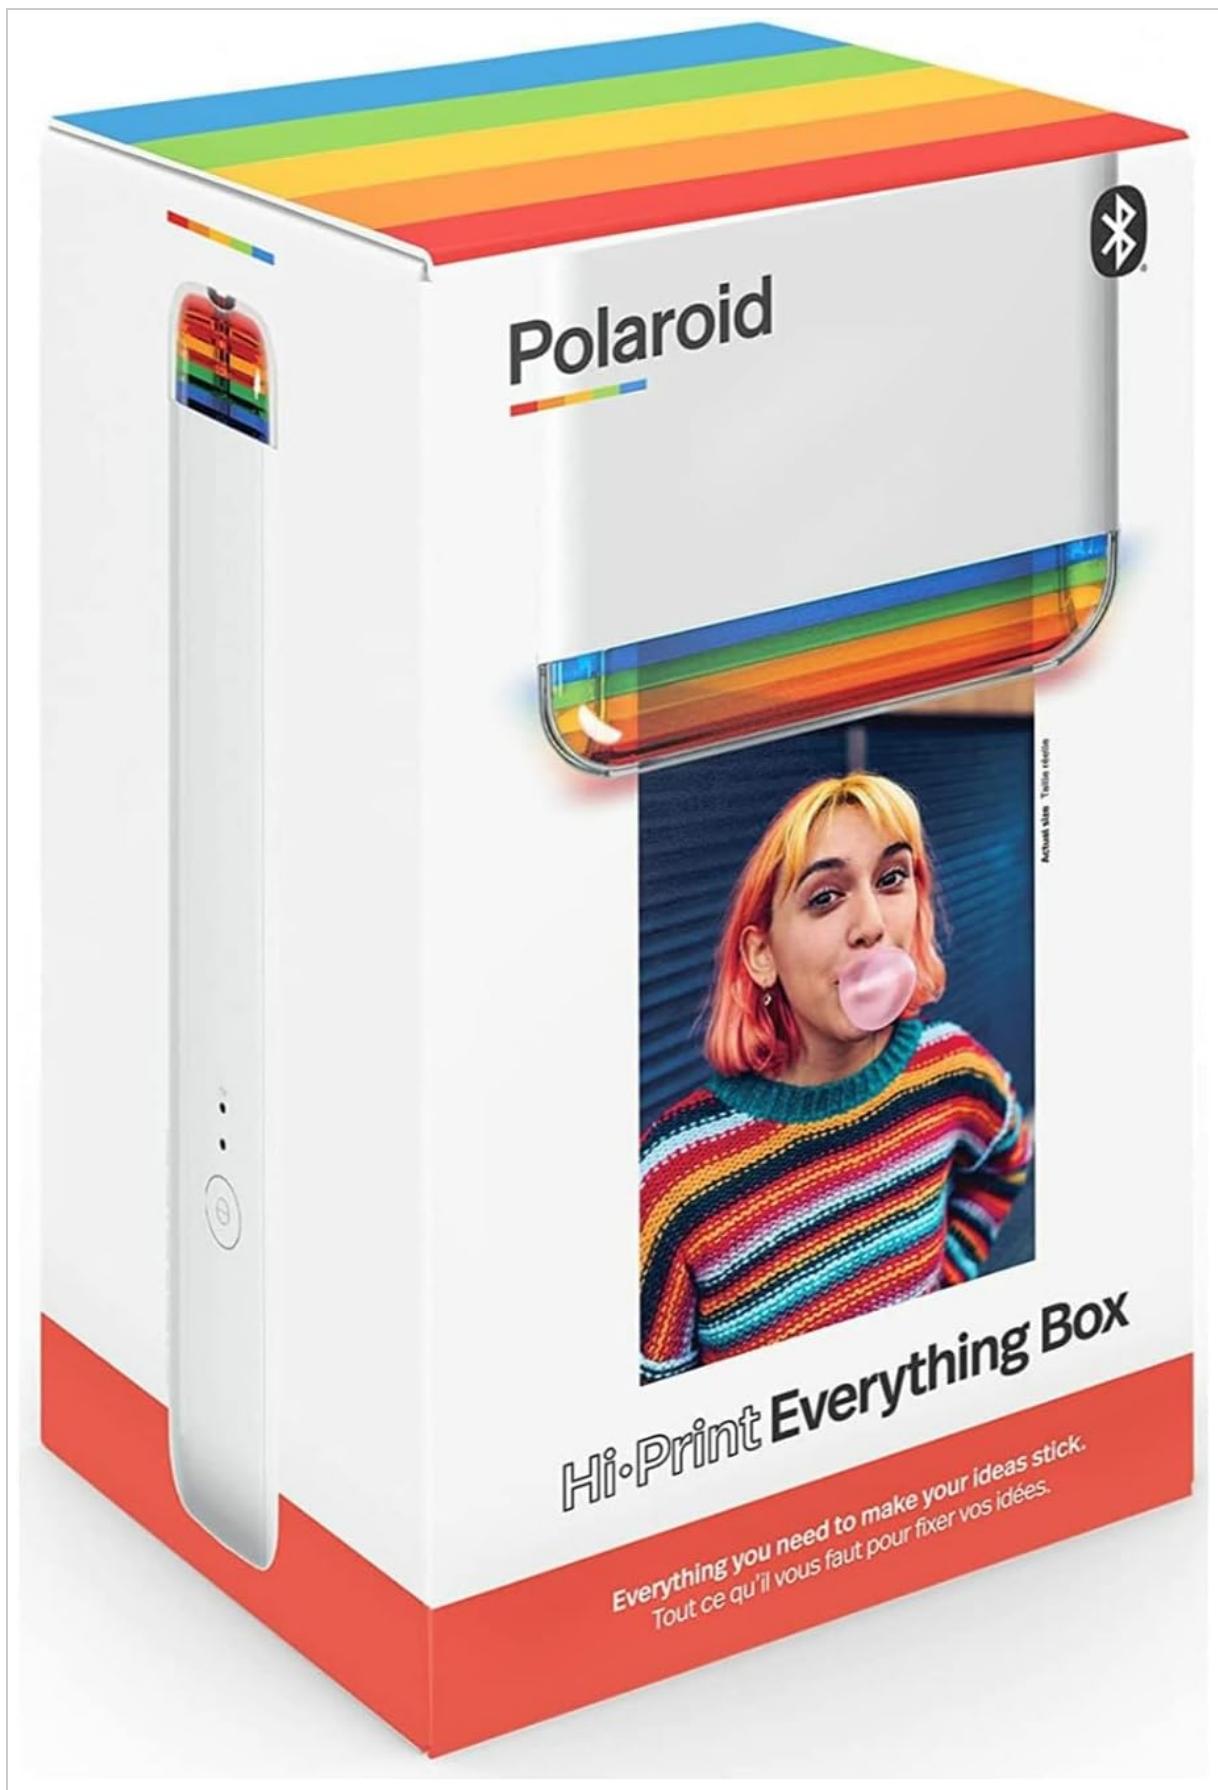


Image 1: The Polaroid Hi-Print Everything Box, showing the printer and paper cartridges.

3. SETUP

3.1 Charging the Printer

Before first use, fully charge your Polaroid Hi-Print printer. Connect the provided USB charging cable to the printer's charging port and a compatible USB power source. The LED indicators will show charging status.

3.2 Installing the Paper Cartridge

1. Open the paper compartment door on the side of the printer.
2. Remove a new 2x3 Paper Cartridge from its packaging.
3. Insert the cartridge into the compartment, ensuring it clicks securely into place. The paper should be facing upwards.
4. Close the compartment door.

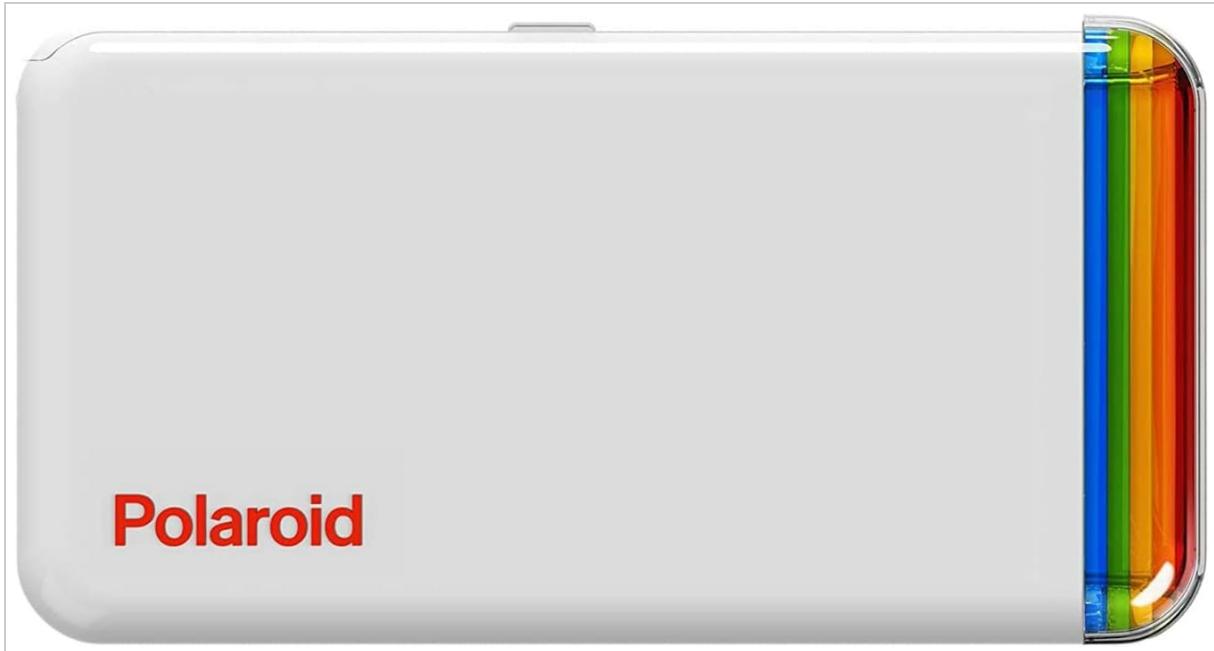


Image 2: Top view of the Polaroid Hi-Print printer, showing the paper cartridge slot.

3.3 Connecting to the Mobile App

The Polaroid Hi-Print operates via a dedicated mobile application. Download the Polaroid Hi-Print app from your device's app store (available for iOS and Android).

1. Turn on your Polaroid Hi-Print printer by pressing the power button.
2. Enable Bluetooth on your mobile device.
3. Open the Polaroid Hi-Print app and follow the on-screen instructions to pair your device.

Your browser does not support the video tag.

Video 1: Official Polaroid demonstration of the Hi-Print printer, showcasing its ease of use and quick printing capabilities.

4. OPERATING THE PRINTER

4.1 Printing Photos

Once your printer is paired with the app and a paper cartridge is loaded, you can begin printing:

1. Select a photo from your mobile device's gallery within the Polaroid Hi-Print app.
2. Use the app's editing tools to customize your photo with frames, filters, text, and emoticons.
3. Tap the print button in the app. The printer will process the image using dye-sublimation technology, layering colors (yellow, magenta, cyan) and a protective coating in under 50 seconds.

4. The finished 2x3 inch self-adhesive print will emerge from the printer.





Image 3: The Polaroid Hi-Print printer in action, with a photo emerging from the print slot.

Your browser does not support the video tag.

Video 2: A detailed product demonstration video showing the unboxing, paper loading, and printing process of the Polaroid Hi-Print.

4.2 Using Self-Adhesive Prints

Each 2x3 inch print features a self-adhesive backing. Simply peel off the backing to stick your photos onto journals, scrapbooks, laptops, or any other surface.



Image 4: A hand holding the Polaroid Hi-Print printer, with a freshly printed photo being held next to it, demonstrating its portability and the size of the prints.

5. MAINTENANCE

5.1 Cleaning the Printer

To maintain optimal print quality, keep the printer clean. Gently wipe the exterior with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials. Ensure no dust or debris enters the paper compartment.

5.2 Storing Paper Cartridges

Store unused paper cartridges in their original sealed packaging in a cool, dry place away from direct sunlight to prevent damage and maintain print quality.

6. TROUBLESHOOTING

6.1 Printer Not Connecting via Bluetooth

- Ensure the printer is powered on and fully charged.
- Verify Bluetooth is enabled on your mobile device.
- Restart both the printer and your mobile device.
- If issues persist, try unpairing and re-pairing the printer through your device's Bluetooth settings and the Polaroid Hi-Print app.

6.2 Poor Print Quality

- Ensure the paper cartridge is correctly inserted and not expired.
- Check the original image quality on your mobile device. Higher resolution images yield better prints.
- Clean the printer as described in the Maintenance section.

6.3 Firmware Update Issues

If you encounter problems during a firmware update, ensure your printer is fully charged and has a stable Bluetooth connection. Try restarting the update process. If the issue persists, contact Polaroid customer support.

7. SPECIFICATIONS

Model Name	6152
Product Dimensions	4"D x 7"W x 4"H
Item Weight	1 pound (454 grams)
Connectivity Technology	Bluetooth
Printing Technology	Dye Sublimation
Maximum Media Size	2x3 inch (self-adhesive photo paper)
Maximum Color Print Resolution	300 dpi
Ink Color	Cyan, Magenta, Yellow, Black
Control Method	App (iOS and Android compatible)
Batteries	1 Lithium Ion battery (included)

8. WARRANTY AND SUPPORT

8.1 Limited Warranty

Your Polaroid Hi-Print Gen1 Bluetooth Pocket Photo Printer comes with a limited warranty. Please refer to the warranty information included in your product packaging or visit the official Polaroid website for details regarding coverage and terms.

8.2 Customer Support

For further assistance, technical support, or to purchase additional paper cartridges, please visit the official Polaroid website or contact their customer service department.

Official Product Page: polaroid.com/hiprint2x3

Visit the Polaroid Store: [Polaroid Store on Amazon](#)

© 2026 Polaroid. All rights reserved.