

**Hot Octopuss 54001120000**

# Hot Octopuss PLEX with Flex Prostate Massager User Manual

Model: 54001120000

## INTRODUCTION

Thank you for choosing the Hot Octopuss PLEX with Flex. This premium vibrating prostate massager is designed for enhanced comfort and targeted stimulation. It features dual motors, a flexible base, and remote control for a customizable experience. This manual provides essential information for safe and effective use, including setup, operation, maintenance, and troubleshooting.



Image: The Hot Octopuss PLEX with Flex device, its remote control, and product packaging.

## WHAT'S IN THE BOX

- Hot Octopuss PLEX with Flex Prostate Massager
- Wireless Remote Control
- USB Charging Cable
- Storage Pouch
- User Guide (this manual)

## PRODUCT FEATURES

- **Dual Motors (Treble + Bass):** Two independent motors provide distinct high-frequency and deep rumble vibrations for varied stimulation.
- **Flexible 90° Base:** The unique base is designed to bend up to 90 degrees, conforming to the body for hands-free comfort and improved fit.
- **Wireless Remote Control:** Allows for easy adjustment of vibration patterns and intensity.
- **Multiple Vibration Modes:** Features 5 distinct vibration patterns and multi-speed intensity levels.
- **Ergonomic Design:** Shaped for comfortable use and effective prostate targeting.

- **Quiet Operation:** Designed to operate at approximately 55 dB or less.
- **USB Rechargeable:** Convenient and eco-friendly charging.
- **Waterproof:** Fully waterproof for easy cleaning and use in various environments.

## KEY FEATURES









-  Waterproof
-  Dual motors
-  USB charging
-  Flexible design
-  Remote control
-  Includes travel pouch
-  Designed for every body
-  5 vibration and 5 pattern settings



Image: Graphic illustrating key features including waterproof design, dual motors, USB charging, flexible design, remote control, travel pouch, and multiple vibration settings.



Image: Diagram showing the PLeX with Flex's base bending up to 90 degrees for flexibility.



Image: Diagram illustrating the placement of the independent Treble and Bass motors within the device.

## SETUP

### 1. Initial Charging

1. Before first use, fully charge the PLEX with Flex device.
2. Connect the provided USB charging cable to the charging port on the device.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, USB wall adapter).
4. The indicator light on the device will show charging status (refer to device for specific light behavior).
5. Allow approximately 2-3 hours for a full charge.

## 2. Remote Control Battery

The remote control typically comes with a CR2032 battery installed, often with a protective tab. Remove any protective tab before first use. If the remote does not function, replace the battery with a new CR2032 type.



Image: The PLEX with Flex device shown alongside its wireless remote control.

## OPERATING INSTRUCTIONS

### 1. Power On/Off

- To power on the device, press and hold the power button on the device or the remote control for 2 seconds.

- To power off, press and hold the power button again for 2 seconds.

## 2. Adjusting Vibration Modes and Intensity

- The PLEX with Flex offers 5 distinct vibration patterns. Use the mode button on the device or remote to cycle through these patterns.
- Adjust the intensity of the vibrations using the '+' and '-' buttons on the remote control.
- The dual motors (Treble and Bass) can be controlled independently or in combination, depending on the selected mode.

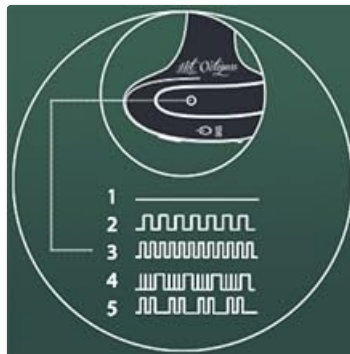 


Image: Diagram illustrating the 5 distinct vibration patterns available with the device.

## MAINTENANCE

### 1. Cleaning

- Clean the device thoroughly before and after each use.
- Wash with warm water and a mild, toy-safe soap.
- Rinse thoroughly to remove all soap residue.
- Pat dry with a lint-free cloth or allow to air dry completely.
- Do not use harsh chemicals, alcohol-based cleaners, or petroleum-based lubricants, as these can damage the silicone material.

### 2. Storage

- Store the device in the provided storage pouch in a cool, dry place, away from direct sunlight and extreme temperatures.
- Keep away from other silicone products to prevent material degradation.

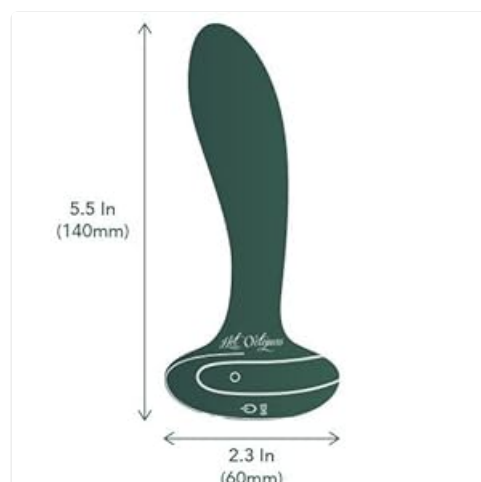 


Image: Close-up of water droplets on a dark surface, representing the waterproof nature of the product.



## TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery.	Charge the device fully using the provided USB cable.
Remote control not working.	Dead or improperly installed battery (CR2032).	Ensure the protective tab is removed. Replace the CR2032 battery in the remote control.
Vibrations are weak.	Low battery.	Recharge the device.
Device not responding to remote.	Remote battery low or out of range.	Replace remote battery. Ensure remote is within operating range of the device.

## SPECIFICATIONS

Model Number	54001120000
Material	Silicone
Dimensions (L x W x H)	2.36 x 1.77 x 5.51 inches (60 x 45 x 140 mm)
Weight	7.55 ounces (214 grams)
Battery Type	1 Lithium Ion battery (device), CR2032 (remote)
Water Resistance	Waterproof
Manufacturer	Hot Octopuss



Image: Diagram illustrating the length and width dimensions of the PLEX with Flex device.

## SAFETY INFORMATION

- This product is intended for adult use only.
- Consult a healthcare professional before use if you have any medical conditions or concerns.

- Discontinue use immediately if you experience any discomfort or pain.
- Keep out of reach of children.
- Do not use if the product appears damaged or defective.
- Use only water-based lubricants with this product. Oil-based or silicone-based lubricants may damage the silicone material.

Legal Disclaimer

 

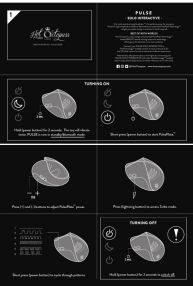 
Statements regarding this product have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

WARRANTY AND SUPPORT

Hot Octopuss offers a satisfaction guarantee and responsive customer support. If you encounter any issues or are not completely satisfied with your product, please contact the dedicated 24/7 support team for assistance. Contact information can typically be found on the product packaging or the official Hot Octopuss website.

For further assistance, visit the [Hot Octopuss Store on Amazon](#).

Related Documents - 54001120000

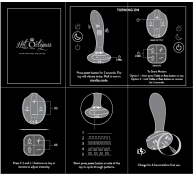	<p><a href="#">Hot Octopuss PleX User Manual and Instructions</a></p> <p>Comprehensive guide to operating the Hot Octopuss PleX, including turning on/off, adjusting intensity, cycling through patterns, charging, and important safety information. Learn how to use both the toy and its remote.</p>
	<p><a href="#">Hot Octopuss ATOM/PLUS: Next-Generation Cock Ring</a></p> <p>Discover the Hot Octopuss ATOM/PLUS, the world's first cock ring with dual integrated motors for intense perineum stimulation. Learn about its features, operation, and warranty.</p>
	<p><a href="#">Hot Octopuss Pulse Solo Interactive User Manual &amp; Features</a></p> <p>Comprehensive guide to the Hot Octopuss Pulse Solo Interactive, detailing setup, features, Bluetooth connectivity, and charging. Learn how to use PulsePlate Technology™ and connect with Kiiroo's interactive platform.</p>