

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Xiaomi](#) /
- › [Xiaomi Mi LED TV P1E 55" 4K Smart TV User Manual](#)

Xiaomi L55M7-7AEU

Xiaomi Mi LED TV P1E 55" 4K Smart TV User Manual

Model: L55M7-7AEU

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Xiaomi Mi LED TV P1E 55" 4K Smart TV. Please read this manual thoroughly before using the product and retain it for future reference. The Xiaomi Mi LED TV P1E 55" features a 4K UHD resolution, an ultra-thin frame, and Android TV for a streamlined entertainment experience. It includes a built-in Google Assistant for voice control and supports Dolby Audio and DTS-HD for cinematic sound.

PRODUCT OVERVIEW



Figure 1: Front view of the Xiaomi Mi LED TV P1E 55 inch. This image shows the television screen displaying a vibrant landscape with mountains and a lake, highlighting the thin bezels and the stand.



Figure 2: The Xiaomi Mi LED TV P1E 55 inch integrated into a modern living room environment, demonstrating its sleek design and how it fits into a home setup. The TV is placed on a white marble-like stand, flanked by an air purifier and a fan.

The TV features an ultra-thin frame design, enhancing the immersive viewing experience. It comes with a remote control and a stand for tabletop mounting.

SETUP

Unpacking and Inspection

- Carefully remove the TV and all accessories from the packaging.
- Inspect the TV for any signs of damage. If damaged, do not proceed with setup and contact customer support.
- Ensure all components listed in the "Meegeleverde onderdelen" (Included components) section of the specifications are present: stand, remote control.

Attaching the Stand

The TV is designed for tabletop mounting. Follow the instructions provided in the separate quick start guide for attaching the included stand securely to the television unit.

Connecting Power

- Ensure the TV is placed on a stable, level surface.
- Connect the power cord to the TV's power input and then to a suitable 220 Volt AC power outlet.

Initial Setup and Network Connection

Upon first power-on, the TV will guide you through the initial setup process. This includes language selection, network connection (Wi-Fi or Ethernet), and Google account sign-in for Android TV features.

- **Wi-Fi:** The TV supports 802.11 ac/b/g/n. Select your network and enter the password.
- **Ethernet:** Connect an Ethernet cable to the TV's LAN port for a wired internet connection.

OPERATING

Remote Control

The TV comes with a 360° remote control. It is designed for ease of use, allowing control from various angles. It requires 2 AAA batteries (included).

- **Power Button:** Turns the TV on or off.
- **Navigation Buttons:** For menu navigation.
- **OK Button:** Confirms selections.
- **Back Button:** Returns to the previous screen.
- **Home Button:** Accesses the Android TV home screen.
- **Dedicated Buttons:** Quick access to services like Netflix and Prime Video.
- **Microphone Button:** Activates Google Assistant for voice commands.

Android TV Features

Android TV provides access to a vast library of content and applications. You can stream movies and series, install apps, and manage tasks directly from your TV.

- **Voice Control:** Use the built-in Google Assistant to control the TV, search for content, manage tasks, and even control other smart home devices.
- **Streaming Services:** Supported internet services include Netflix and YouTube.
- **MEMC Technology:** For smoother visual experience, MEMC automatically adds artificial frames to low frame rate content, reducing tearing and stuttering.

Connecting External Devices

The TV features multiple connectivity options:

- **USB Ports:** 3 USB 2.0 ports for connecting external storage devices.
- **Bluetooth:** Bluetooth 5 for connecting audio devices or other peripherals.
- **Ethernet:** For wired network connection.
- **HDMI:** (Implicit, as it's a TV, though not explicitly listed in hardware interface, it's standard).

Audio Experience

The TV is equipped with two 8W stereo speakers and supports Dolby Audio and DTS-HD for an immersive cinematic audio experience. The total output wattage is 20 Watts.

MAINTENANCE

Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry, lint-free cloth to wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive screen cleaner. Do not spray cleaner directly onto the screen.
- Avoid using abrasive cleaners, waxes, or solvents.

Remote Control Battery Replacement

When the remote control's performance degrades, replace the 2 AAA batteries. Ensure correct polarity when inserting new batteries.

TROUBLESHOOTING

This section addresses common issues you might encounter. For more complex problems, contact customer support.

No Power

- Ensure the power cord is securely plugged into both the TV and the wall outlet.
- Check if the wall outlet is functioning by plugging in another device.
- Press the power button on the TV itself, not just the remote.

No Picture / Poor Picture Quality

- Check the input source. Ensure it matches the device connected (e.g., HDMI 1, TV).
- Verify all cables are securely connected.
- Adjust picture settings (brightness, contrast, color) in the TV menu.
- If using an antenna, check antenna connection and signal strength.

No Sound / Poor Sound Quality

- Increase the volume on both the TV and any connected external audio devices.
- Check audio settings in the TV menu.
- Ensure external speakers are properly connected if in use.
- If using an external sound system, ensure the TV's internal speakers are not muted or disabled.

Remote Control Not Working

- Replace the batteries (2 AAA).
- Ensure there are no obstructions between the remote and the TV.
- Point the remote directly at the TV's IR sensor.

Smart TV Apps Not Responding / Slow

- Check your internet connection.
- Restart the TV by unplugging it from the power outlet for a few minutes, then plugging it back in.
- Clear the cache of the problematic app through the TV's settings.
- Ensure the TV's software is up to date.

SPECIFICATIONS

Feature	Detail
Brand	Xiaomi
Model	L55M7-7AEU
Display Technology	OLED
Screen Size	55 Inch (140 cm)
Resolution	4K UHD
Refresh Rate	60 Hz
Viewing Angle	178 Degrees
Response Time	6.5 Milliseconds
Processor Count	4

Feature	Detail
Memory Storage Capacity	8 GB
Hardware Interface	Ethernet, Bluetooth 5, 802.11 ac/b/g/n, USB 2.0 (x3), Internal flash memory
Tuner Technology	DVB-T2
Audio Output Power	20 Watts (2 x 8W speakers)
Audio Encoding	DTS, Dolby Audio
Voltage	220 Volt
Wattage	150 Watt
Product Dimensions	10 x 48 x 50 cm; 11.8 kg
Included Components	Stand, Remote Control (with 2 AAA batteries)
Special Features	Parental control, MEMC, Google Assistant built-in
Supported Internet Services	Netflix, YouTube

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product or visit the official Xiaomi website. For technical support or service inquiries, please contact Xiaomi customer service.

Software updates are guaranteed until an unknown date. It is recommended to keep your TV's software updated for optimal performance and security.