

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Chefman](#) /

› [Chefman Electric Tea Kettle Instruction Manual](#)

## Chefman RJ11-17-SS-TC

# Chefman Electric Tea Kettle Instruction Manual

Brand: Chefman | Model: RJ11-17-SS-TC

## INTRODUCTION

Thank you for purchasing the Chefman Electric Tea Kettle. This 1.8-liter kettle is designed for efficient and precise water heating, offering multiple temperature presets and convenient features for various hot beverages. Please read this manual thoroughly before use to ensure safe and optimal operation.

## IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances. This kettle is equipped with advanced safety technology, including automatic shutoff. For detailed safety guidelines, please refer to the official Safety Information PDF document.

[Download Safety Information \(PDF\)](#)

- Do not immerse the kettle or base in water or other liquids.
- Ensure the kettle is placed on a stable, flat, heat-resistant surface.
- Do not overfill the kettle beyond the MAX fill line to prevent boiling water from overflowing.
- Always unplug the kettle from the outlet when not in use and before cleaning.
- Keep out of reach of children.

## PRODUCT FEATURES

### Key Features Overview

# CHEFMAN Custom-Temp

## 1.8L Digital Kettle



The Chefman Electric Tea Kettle boasts a 1.8-liter capacity, precise temperature control with 5 presets, a convenient keep warm function, and tri-colored LED indicator lights. It also includes automatic shutoff, boil-dry protection, a clear water view window, a 360-degree swivel base, a drip-free spout, and durable stainless steel construction.

### Fast Boiling Technology

## Faster Boiling

Boil water faster than on the stove or in the microwave  
and enjoy a hot cup in as little as 3 minutes



Experience rapid boiling with the Chefman kettle, heating water in as little as 3 minutes for your favorite hot beverages like tea, hot chocolate, or pour-over coffee.

### Digital Temperature Control

# Digital Temp Control

Choose from 5 presets for the perfect temp from 160° F-212°F



Customize your water temperature with 5 preset options: Delicate (160°F), Green (175°F), White (185°F), Oolong (195°F), or Herbal/Black/Boil (212°F). The intuitive digital control on the handle allows for precise temperature selection.

## Tri-Color LED Indicator Lights



## Color-Coded

Tri-colored LED lights indicate when the kettle is in power up, heating, or keep warm mode



**Power up**



**Heating**



**Keep warm**

The illuminating LED lights provide clear visual cues: white for standby, red when heating water to temperature, and green when the water is ready or in keep warm mode.

### Cordless Convenience

## Cord-Free Kettle

No need to unplug—simply lift off the  
360-degree swivel base and pour



The cordless design allows you to easily lift the kettle from its 360-degree swivel base for convenient pouring and serving anywhere.

### Quick View Window

## Space-Saving Design

Compact design saves countertop real estate and allows for quick brewing in small spaces



A convenient water level window allows you to see exactly how much water is in the kettle without opening the lid.

### SETUP

1. **Unpack:** Carefully remove the kettle and its base from the packaging. Remove any protective materials or stickers.
2. **Initial Cleaning:** Before first use, fill the kettle with water to the MAX line. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, stable, and heat-resistant surface, away from the edge of the countertop.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

### OPERATING INSTRUCTIONS

1. **Fill the Kettle:** Remove the lid and fill the kettle with the desired amount of fresh, cold water. Do not fill below the MIN line or above the MAX line (1.8 Liters).
2. **Place on Base:** Securely place the kettle back onto its power base.

### 3. Select Temperature:

- Press the **Start/Stop** button to activate the kettle. The LED light will turn white.
- Use the **Up** and **Down** arrow buttons on the handle to cycle through the 5 preset temperatures:
  - Delicate (160°F)
  - Green (175°F)
  - White (185°F)
  - Oolong (195°F)
  - Herbal/Black/Boil (212°F)
- Alternatively, you can set a custom temperature in 5-degree Fahrenheit increments using the arrow buttons.

4. **Start Boiling:** Once your desired temperature is selected, press the **Start/Stop** button again. The LED light will turn red, indicating heating is in progress.
5. **Automatic Shutoff & Keep Warm:** The kettle will automatically shut off once the selected temperature is reached. The LED light will turn green, indicating the water is ready and the "Keep Warm" function is active, maintaining the temperature for a period.
6. **Pouring:** Carefully lift the kettle from the base and pour. The specially designed spout ensures a mess-free pour.

## MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your Chefman Electric Tea Kettle.

- **Daily Cleaning:** After each use, unplug the kettle and allow it to cool completely. Hand wash the interior with warm, soapy water and a soft sponge. Rinse thoroughly.
- **Exterior Cleaning:** Wipe the exterior of the kettle and the power base with a damp cloth. Do not use abrasive cleaners or scouring pads.
- **Descaling:** Mineral deposits (limescale) can build up over time, especially in hard water areas. To descale, fill the kettle with a mixture of equal parts water and white vinegar (or a commercial descaling solution). Let it soak for at least 30 minutes, or boil the mixture and let it sit for 15-20 minutes. Discard the mixture and rinse the kettle thoroughly several times.
- **Storage:** Ensure the kettle is completely dry before storing. Wrap the cord around the base for neat storage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not turn on.	Not properly plugged in; no power to outlet; kettle not correctly seated on base.	Check power connection; try a different outlet; ensure kettle is firmly on the base.
Water not heating or boiling.	Insufficient water (below MIN line); kettle needs descaling.	Add more water; perform descaling procedure.
Digital display not working or flickering.	Electrical issue; temporary glitch.	Unplug the kettle for a few minutes, then plug it back in. If the issue persists, contact customer support.



Problem	Possible Cause	Solution
"Keep Warm" function not maintaining temperature.	This function is designed to keep water warm, not necessarily at the exact boiling point.	The "Keep Warm" function will maintain a warm temperature, typically around 150°F, not the initial setpoint. This is normal operation.
Loud noise during heating.	Mineral buildup (limescale).	Perform descaling procedure.

## SPECIFICATIONS

**Brand:** Chefman

**Model Name:** Temperature Control Electric Kettle

**Model Number:** RJ11-17-SS-TC

**Color:** Stainless

**Capacity:** 1.8 Liters

**Special Features:** Digital Temperature Control, Removable Lid, Automatic Shut-Off

**Product Dimensions:** 8.25"L x 6"W x 9.75"H

**Item Weight:** 2 Pounds

**Power:** 1500W/120V

**UPC:** 816458025782

**Manufacturer:** Chefman

**First Available:** October 5, 2021

## WARRANTY AND SUPPORT

The Chefman Electric Tea Kettle comes with a 1-year assurance provided by Chefman, ensuring long-lasting durability and peace of mind.



For further assistance, please refer to the official User Guide or contact Chefman customer support.


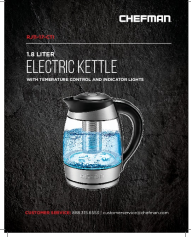


[Download User Guide \(PDF\)](#)

[Download Certificate of Compliance \(PDF\)](#)

For customer support, visit the [Chefman Store on Amazon](#).

### Related Documents - RJ11-17-SS-TC

	<p><a href="#">Chefman 1.8-Liter Rapid-Boil Kettle Quick Start Guide</a></p> <p>Get started quickly with your Chefman 1.8-Liter Rapid-Boil Kettle. This guide covers features, first use, cleaning, operation, and tea brewing tips for model RJ11-17-SS.</p>
	<p><a href="#">Chefman 1.8L Custom-Temp Kettle: Quick Start Guide &amp; Features</a></p> <p>User guide for the Chefman 1.8L Custom-Temp Kettle (RJ11-17-SS-TC-RL-SERIES). Details features, operation, cleaning, and tea brewing presets for optimal beverage preparation.</p>

	<p><a href="#">Chefman 1.8L Custom-Temp Kettle User Guide</a></p> <p>Comprehensive user guide for the Chefman 1.8L Custom-Temp Kettle, model RJ11-17-SS-TC-RL-SERIES. Learn about safety instructions, features, operating procedures, cleaning, and warranty information.</p>
	<p><a href="#">Chefman 1.8 Liter Electric Kettle RJ11-17-CTI User Manual</a></p> <p>Comprehensive user manual for the Chefman 1.8 Liter Electric Kettle (Model RJ11-17-CTI) featuring temperature control and indicator lights. Includes safety instructions, operating procedures, cleaning and maintenance guidelines, and warranty information.</p>
	<p><a href="#">Chefman Electric Kettle+ User Guide and Operating Instructions</a></p> <p>Comprehensive guide for the Chefman Electric Kettle+ (RJ11-17-TCTI), covering features, operation, safety, cleaning, and warranty information.</p>
	<p><a href="#">Chefman RJ11-GN-P-BLACK Gooseneck Kettle User Guide</a></p> <p>Comprehensive user guide for the Chefman RJ11-GN-P-BLACK Gooseneck Kettle, covering safety instructions, features, operating procedures, cleaning, maintenance, and warranty information for optimal brewing of tea and coffee.</p>