

[manuals.plus](#) /› [EZICLEAN](#) /› [EZICLEAN CYCLOSTEAM P320 Steam Vacuum Cleaner User Manual](#)

EZICLEAN P320

EZICLEAN CYCLOSTEAM P320 Steam Vacuum Cleaner User Manual

1. INTRODUCTION

Thank you for choosing the EZICLEAN CYCLOSTEAM P320 Steam Vacuum Cleaner. This 3-in-1 device is designed to vacuum, steam clean, and disinfect your home surfaces efficiently. Please read this manual carefully before operating the appliance to ensure safe and optimal performance. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the voltage matches your power supply before plugging in.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep children and pets away from the appliance during operation.
- Do not use the appliance if the cord or plug is damaged.
- Always unplug the appliance before cleaning or maintenance.
- Use only distilled or demineralized water in the water tank to prevent mineral buildup.
- Do not direct steam at people, animals, or electrical components.
- Allow the appliance to cool down completely before storing.

3. PRODUCT OVERVIEW

The EZICLEAN CYCLOSTEAM P320 is a versatile cleaning tool. Familiarize yourself with its main components:

- Main Unit (Motor, Dustbin, Water Tank)
- Handle Assembly
- Floor Nozzle with Brushes
- Detachable Handheld Steam Cleaner

- Various Accessories (brushes, cloths, nozzles)



Figure 1: The EZICLEAN CYCLOSTEAM P320 Steam Vacuum Cleaner in its upright position, showcasing its sleek design and integrated components.



Figure 2: A user demonstrating the ease of use of the EZICLEAN CYCLOSTEAM P320 for floor cleaning.

4. SETUP

4.1 Assembly

1. Insert the handle assembly into the main unit until it clicks securely into place.
2. Attach the floor nozzle to the bottom of the main unit.

4.2 Filling the Water Tank

1. Locate the water tank cap on the main unit.
2. Open the cap and fill the tank with up to 1 liter of distilled or demineralized water. Do not overfill.
3. Securely close the water tank cap.

4.3 Attaching Accessories

For steam cleaning, attach the desired accessory (e.g., brush, cloth, nozzle) to the handheld steam cleaner or the main unit's steam outlet as needed.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

1. Plug the power cord into a suitable electrical outlet.
2. Press the power button to turn on the appliance.
3. To turn off, press the power button again and unplug the appliance.

5.2 Vacuuming Function

The vacuum function can be used independently or in conjunction with the steam function.

- Ensure the dustbin is properly installed.
- Activate the vacuum mode using the control panel.
- Move the floor nozzle over the surface to be cleaned.



Figure 3: The EZICLEAN CYCLOSTEAM P320 effectively vacuuming debris from a hard floor surface.

5.3 Steam Function

The steam function is ideal for deep cleaning and disinfecting hard surfaces.

1. Ensure the water tank is filled.
2. Activate the steam mode using the control panel. Allow a few moments for the water to heat up and steam to generate.
3. Move the floor nozzle or handheld cleaner slowly over the surface.



Figure 4: The detachable handheld steam cleaner being used to refresh and sanitize curtains.

5.4 Using the Detachable Handheld Cleaner

To use the handheld cleaner:

1. Detach the handheld unit from the main body.
2. Attach the appropriate accessory for the task (e.g., small brush for grout, nozzle for tight spaces).
3. Activate the steam function and direct the steam as needed for targeted cleaning.



Figure 5: The handheld steam cleaner effectively cleaning the interior of an oven, demonstrating its versatility.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your EZICLEAN CYCLOSTEAM P320.

6.1 Emptying the Dustbin

1. Ensure the appliance is unplugged.
2. Locate the dustbin release button and remove the dustbin.
3. Empty the contents into a waste bin.
4. Rinse the dustbin with water if necessary and allow it to dry completely before reattaching.

6.2 Cleaning Filters

Check and clean the filters regularly, typically after every 3-5 uses, or more frequently if suction power decreases.

- Remove the filters from the dustbin assembly.
- Tap them gently to remove loose dirt.

- Rinse under cold water until the water runs clear.
- Allow filters to air dry completely for at least 24 hours before reinserting. Do not use a dryer.

6.3 Descaling the Steam System

To prevent mineral buildup, descale the steam system periodically, especially in areas with hard water.

- Mix a solution of equal parts white vinegar and water.
- Pour the solution into the water tank.
- Run the steam function until the tank is empty.
- Repeat with clean water to rinse the system.

6.4 Cleaning Accessories

Wash all removable accessories (brushes, cloths, nozzles) with warm soapy water and allow them to air dry.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
No power	Appliance not plugged in; Power outlet faulty	Check power cord connection; Try a different outlet
No steam	Water tank empty; Appliance not heated up; Mineral buildup	Fill water tank; Wait for heating; Descale the system
Low suction	Dustbin full; Filters clogged; Obstruction in nozzle/hose	Empty dustbin; Clean/replace filters; Remove obstruction
Water leaking	Water tank cap not secured; Overfilled water tank	Ensure cap is tight; Do not overfill

8. SPECIFICATIONS

- **Model:** CYCLOSTEAM P320
- **Brand:** EZICLEAN
- **Power:** 1200 Watts
- **Water Tank Capacity:** 1 Litre
- **Product Dimensions (L x W x H):** 26 x 118 x 24 cm
- **Item Weight:** 8.29 Kilograms
- **Features:** 3-in-1 (Vacuum, Steam, Disinfect), Detachable Handheld Cleaner, Multiple Accessories
- **Color:** Red

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact EZICLEAN customer service. Keep your proof of purchase for any warranty claims. Information regarding spare parts availability is not provided at this time.

