

[Manuals.plus](#) /

› [Casio](#) /

› Casio EFV620D-1A2V Quartz Sport Watch User Manual

Casio EFV620D-1A2V

Casio EFV620D-1A2V Quartz Sport Watch User Manual

Model: EFV620D-1A2V

INTRODUCTION

This manual provides comprehensive instructions for the proper use, setup, and maintenance of your Casio EFV620D-1A2V Quartz Sport Watch. Please read this manual carefully to ensure optimal performance and longevity of your timepiece.



Image: Front view of the Casio EFV620D-1A2V watch, showcasing its blue bezel, black dial, and stainless steel bracelet.

FEATURES

- **Chronograph Functionality:** Equipped with a 1/10-second stopwatch, including dedicated dials for stopwatch seconds, minutes, and 1/10 seconds for precise time measurement.
- **Date Display:** A convenient built-in date display for everyday practicality.
- **100-Meter Water Resistance:** Suitable for daily wear, showering, swimming, and snorkeling.
- **Durable Construction:** Features a robust stainless steel case and band, a screw-lock back, and mineral glass for enhanced durability.

- **Long-Lasting Battery:** Powered by an SR920SW battery with an approximate lifespan of 3 years.

SETUP

Setting the Time and Date

Follow these steps to set the current time and date on your watch:

1. Pull the crown out to the second click position. The second hand will move to 12 o'clock.
2. Rotate the crown to set the hour and minute hands. Ensure the AM/PM is correctly set if your watch has this indicator (often by observing the date change).
3. Push the crown back in to the first click position.
4. Rotate the crown to set the date.
5. Push the crown back in to the normal position. The second hand will resume movement.

Adjusting the Bracelet

The stainless steel bracelet can be adjusted to fit your wrist. This typically involves removing or adding links. For precise adjustment, it is recommended to visit a professional jeweler or watch repair service.

OPERATING THE WATCH

Using the Chronograph

Your watch features a chronograph for measuring elapsed time. The chronograph subdials typically indicate 1/10 seconds, seconds, and minutes.

1. Press button **A** (top right) to start the stopwatch. The chronograph second hand and 1/10 second hand will begin moving.
2. Press button **A** again to stop the stopwatch. The elapsed time will be displayed.
3. Press button **B** (bottom right) to reset the stopwatch. All chronograph hands will return to their 0 positions.
4. For split time measurement, press button **B** while the stopwatch is running. The display will show the split time. Press **B** again to return to normal time measurement.

Water Resistance

This watch is rated for 100-meter (330 feet) water resistance. This means it is suitable for daily use, showering, swimming, and snorkeling. It is *not* suitable for scuba diving or high-impact water sports.

- Do not operate the crown or buttons while the watch is wet or submerged.
- After exposure to saltwater, rinse the watch with fresh water and wipe it dry.



Image: Icon representing 100-meter water resistance, indicating suitability for swimming and snorkeling.

MAINTENANCE

Battery Replacement

The watch is powered by an SR920SW battery with an approximate lifespan of 3 years. When the battery runs low, the second hand may start moving at two-second intervals. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

Cleaning

To maintain the appearance of your watch:

- Wipe the case and band with a soft, dry cloth.
- For stainless steel bands, a soft brush with mild soapy water can be used, followed by thorough rinsing and drying.
- Avoid using chemical cleaners or abrasive materials.

Water Resistance Precautions

To preserve the water resistance of your watch:

- Have the gaskets checked and replaced periodically, especially during battery changes.
- Avoid exposing the watch to extreme temperature changes.
- Do not open the watch case yourself.

TROUBLESHOOTING

Problem	Solution
Watch is not running.	The battery may be depleted. Replace the battery with an SR920SW.
Time is incorrect.	Refer to the "Setting the Time and Date" section to reset the time.
Date is incorrect.	Refer to the "Setting the Time and Date" section to adjust the date.
Chronograph hands do not reset to zero.	This may require a chronograph hand position adjustment. Consult a service center.
Moisture inside the watch.	Immediately take the watch to a qualified service center. Do not attempt to dry it yourself.

SPECIFICATIONS

Feature	Detail
Model Number	EFV620D-1A2V
Movement	Quartz

Feature	Detail
Display Type	Analog
Case Material	Stainless Steel
Band Material	Stainless Steel Bracelet
Crystal Type	Mineral Glass
Water Resistance	100 Meters (330 Feet)
Case Diameter	50.5 mm
Case Thickness	11.4 mm
Band Width	22 mm
Battery Type	SR920SW
Approx. Battery Life	3 years
Weight	0.25 Kilograms



Image: Close-up of a watch crystal, highlighting the durable Mineral Glass material.



Image: Detail of a watch case, emphasizing its robust Stainless Steel construction.

WARRANTY AND SUPPORT

Limited Warranty

Your Casio EFV620D-1A2V watch comes with a limited warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. The warranty typically covers manufacturing defects under normal use.

Customer Support

For further assistance, technical support, or service inquiries, please visit the official Casio website or contact your local authorized Casio service center. Keep your proof of purchase for warranty claims.

