

## Manuals+


[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [eKids](#) /

› [eKids Disney Encanto Karaoke Machine User Manual](#)

## eKids 554

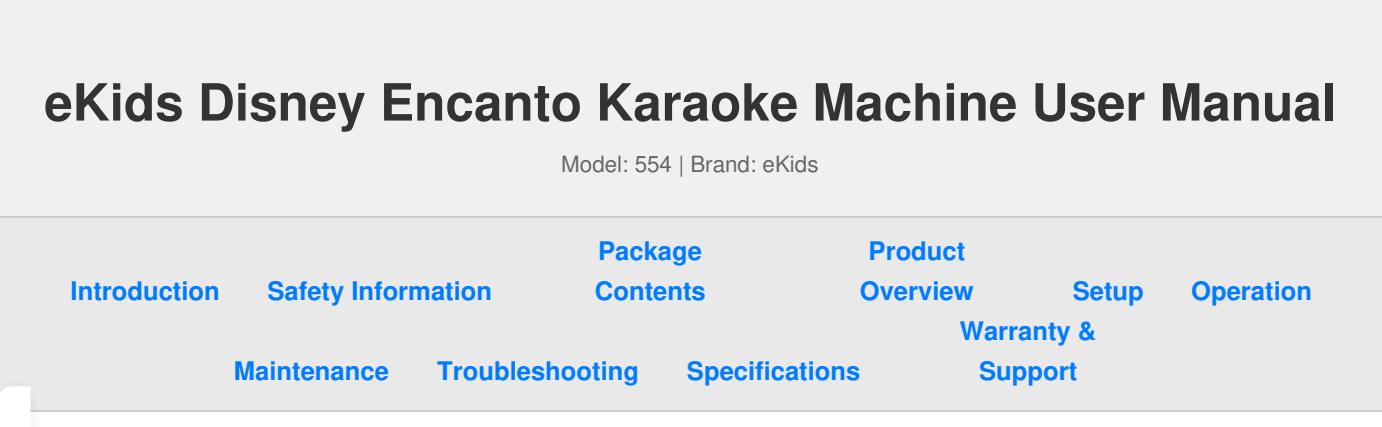

The image shows the title page of the eKids Disney Encanto Karaoke Machine User Manual. The title 'eKids Disney Encanto Karaoke Machine User Manual' is at the top in a large, bold, dark font. Below it, 'Model: 554 | Brand: eKids' is in a smaller font. A navigation menu is at the bottom, with 'Introduction' and 'Safety Information' on the left, 'Package Contents' and 'Product Overview' in the center, and 'Setup' and 'Operation' on the right. Below these are 'Maintenance', 'Troubleshooting', 'Specifications', 'Warranty & Support', and 'Specifications' again.

## 1. INTRODUCTION

Welcome to the eKids Disney Encanto Karaoke Machine user manual. This guide provides comprehensive instructions for setting up, operating, and maintaining your new karaoke machine. Designed for young performers, this device features Bluetooth connectivity, EZ Link technology for instant access to Disney playlists, a wired microphone, USB audio playback, and a vibrant LED light show. Please read this manual thoroughly to ensure proper use and enjoyment of your product.

## 2. SAFETY INFORMATION

For detailed safety guidelines and compliance information, please refer to the official Safety Information PDF document provided by the manufacturer. This document contains important warnings and precautions to ensure safe operation of the device.

[Download Safety Information \(PDF\)](#)

Always supervise children during use. Keep the device away from water and extreme temperatures. Do not attempt to disassemble or repair the unit yourself.

## 3. PACKAGE CONTENTS

Please check the box for the following items:

- eKids Disney Encanto Karaoke Machine
- Wired Microphone
- USB Charging Cable
- User Manual (this document)

## 4. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your karaoke machine.

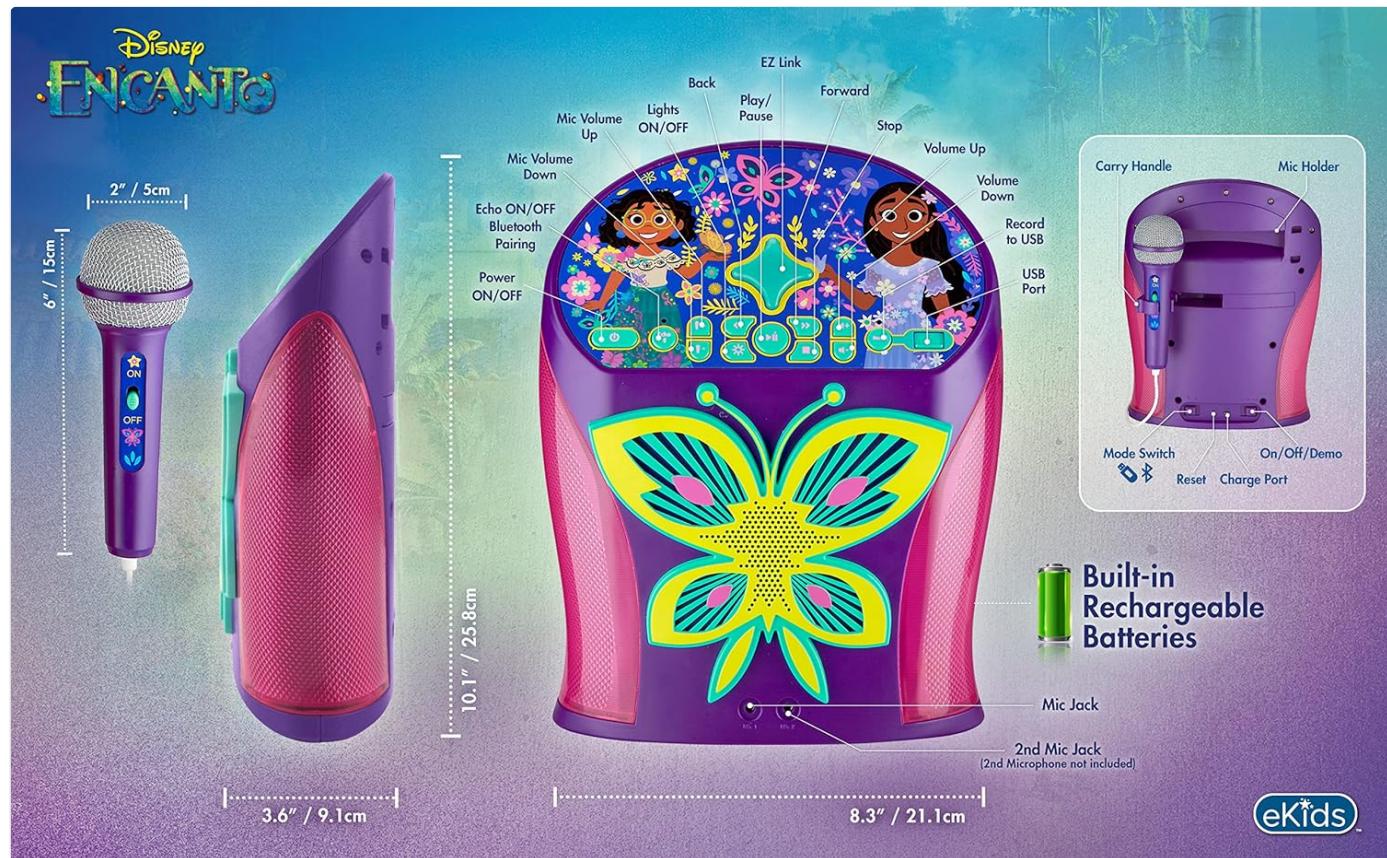


Figure 4.1: Front, Side, and Rear View with Controls and Dimensions

This image displays the karaoke machine from multiple angles, highlighting key features such as the control panel, microphone jack, USB port, and power switch. Dimensions are also provided for reference.

### Control Panel Features:

- **Power ON/OFF Button:** Turns the unit on or off.
- **EZ Link Button:** Single press to open Disney Encanto playlist, long press for Disney Hits playlist.
- **Bluetooth Pairing Button:** Initiates Bluetooth pairing mode.
- **Echo ON/OFF Button:** Activates or deactivates the echo effect for the microphone.
- **Mic Volume Up/Down:** Adjusts the microphone volume.
- **Play/Pause Button:** Controls audio playback.
- **Back/Forward Buttons:** Navigates through tracks.
- **Volume Up/Down:** Adjusts the main speaker volume.
- **Record to USB Button:** Initiates recording to a connected USB flash drive.
- **Lights ON/OFF Button:** Toggles the multi-colored LED light show.

### Ports and Inputs:

- **Mic Jack 1:** Primary microphone input.
- **Mic Jack 2:** Secondary microphone input for duets (second microphone not included).
- **USB Port:** For playing audio from a USB drive and recording performances.
- **Charge Port:** For connecting the USB charging cable.

## 5. SETUP

### 5.1 Charging the Battery

Your karaoke machine comes with a built-in rechargeable battery. Before first use, fully charge the unit for optimal performance.

1. Connect the included USB charging cable to the Charge Port on the back of the unit.
2. Connect the other end of the USB cable to a standard USB power adapter (not included) or a computer USB port.
3. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off (refer to specific product indicator behavior).

### 5.2 Connecting the Microphone

Plug the wired microphone into the "Mic 1" jack on the front of the karaoke machine. If using a second microphone (sold separately), plug it into the "Mic 2" jack.

## 6. OPERATION

### 6.1 Powering On/Off

Press and hold the Power ON/OFF button located on the control panel to turn the unit on or off.

### 6.2 Bluetooth Pairing

Stream audio wirelessly from any compatible Bluetooth device.



Figure 6.1: Bluetooth Connectivity

The karaoke machine can wirelessly stream audio from a variety of Bluetooth-enabled devices, including PCs, smartwatches, game devices, mobile phones, tablets, and notebooks.

1. Turn on the karaoke machine.

2. Press the Bluetooth Pairing button on the control panel. The Bluetooth indicator light will flash, indicating it's in pairing mode.
3. On your Bluetooth device (e.g., smartphone, tablet), enable Bluetooth and search for "eKids Encanto Karaoke".
4. Select the device name to pair. Once paired, the indicator light will become solid, and you can start streaming music.

### 6.3 EZ Link Feature

The EZ Link feature allows instant access to Disney playlists via a dedicated app.



Figure 6.2: EZ Link Feature in Action

This image illustrates how pressing the EZ Link button on the karaoke machine can launch the Disney Hits playlist on a connected smart device, facilitating quick access to music for singing.

1. Download the free EZ Link Setup app (requires Apple iOS 12+ or Android 4.4 and up). More info at [ekids.com/ezlink-en-554](http://ekids.com/ezlink-en-554).
2. Use the app to connect your karaoke machine to popular streaming services.
3. A single press of the EZ Link button will open the Disney Encanto Playlist.
4. A long press of the EZ Link button will open a Disney Hits Playlist.

### 6.4 USB Audio Player & Recording

Play your favorite songs from a USB drive or record your performances.



Figure 6.3: Key Features Overview

This image provides a visual summary of the karaoke machine's main functionalities, including its ability to record performances via USB, its built-in rechargeable battery, and the multi-colored LED light show.

### Playing from USB:

1. Insert a USB flash drive containing MP3 audio files into the USB Port.
2. The unit will automatically detect and begin playing the audio files.
3. Use the Play/Pause, Back, and Forward buttons to control playback.

### Recording Performance:

(USB flash drive required, not included)

1. Ensure a USB flash drive is inserted into the USB Port.
2. Press the "Record to USB" button to start recording your singing along with the music.
3. Press the button again to stop recording. Your performance will be saved to the USB drive.

### 6.5 Echo Effect

Press the Echo ON/OFF button to add a fun echo effect to your microphone vocals. Press again to turn it off.

### 6.6 LED Light Show

Activate the multi-colored LED light show by pressing the Lights ON/OFF button. The lights will sync with the music, enhancing the karaoke experience.

### 6.7 Volume Control

Use the dedicated Volume Up/Down buttons to adjust the overall music playback volume. Use the Mic Volume Up/Down buttons to adjust the microphone volume independently.

## 7. MAINTENANCE

## 7.1 Cleaning

Wipe the unit with a soft, dry cloth. Do not use liquid cleaners or abrasive materials. Ensure all ports are free of dust and debris.

## 7.2 Storage

When not in use, store the karaoke machine in a cool, dry place away from direct sunlight and extreme temperatures. Disconnect all cables and store the microphone securely.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	Battery is depleted.	Charge the unit using the provided USB cable.
No sound from speaker.	Volume is too low or muted. Bluetooth not connected.	Increase main volume. Ensure Bluetooth is properly paired.
Microphone not working.	Microphone not plugged in correctly. Mic volume too low.	Ensure microphone is fully inserted into the jack. Increase microphone volume.
Bluetooth pairing failed.	Device too far. Bluetooth not enabled on source.	Move devices closer. Ensure Bluetooth is enabled and in pairing mode on both devices.
Cannot access Disney playlists via EZ Link.	EZ Link app not installed or configured. Internet connection issues.	Ensure EZ Link app is installed and set up correctly. Check your device's internet connection.

## 9. SPECIFICATIONS

- Product Dimensions:** 8.24 x 3.61 x 10.39 inches
- Item Weight:** 2.64 pounds
- Model Number:** 554
- Power Source:** 1 Lithium Ion battery (included)
- Connectivity:** Bluetooth, USB
- Special Features:** Portable, Rechargeable, Built-In Microphone, Multi-colored LED Light Show, Echo Effect, EZ Link Technology
- Manufacturer:** KIDdesigns
- Recommended Age:** 0 - 15 years

## 10. WARRANTY & SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official eKids website. You may also find additional support resources and FAQs on their website.

### [Visit the eKids Store on Amazon](#)

A Certificate of Compliance is available for this product:

[Download Certificate of Compliance \(PDF\)](#)

## 11. PRODUCT DEMONSTRATION VIDEO


Your browser does not support the video tag.

Video 11.1: eKids Disney Encanto Karaoke Machine with EZ Link

This official product video demonstrates the key features of the eKids Disney Encanto Karaoke Machine, including its Bluetooth connectivity, EZ Link technology for accessing Disney playlists, and the overall user experience. It provides a visual guide to the product's functionalities.

© 2024 eKids. All rights reserved. Disney Encanto is a trademark of Disney.

## Related Documents - 554

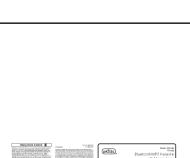	<p><a href="#"><b>eKids 554 Series Bluetooth Karaoke with EZ Link User Manual</b></a></p> <p>This manual provides instructions for the eKids 554 Series Bluetooth Karaoke with EZ Link, covering setup, operation, maintenance, and troubleshooting. Learn how to connect via Bluetooth, use USB mode, record audio, and utilize the EZ Link app for music playlists.</p>
	<p><a href="#"><b>eKids Bluetooth Karaoke with EZ Link Model 554 Series User Manual</b></a></p> <p>Comprehensive user manual for the eKids Bluetooth Karaoke with EZ Link (Model 554 Series). Learn how to set up, use USB and Bluetooth modes, record audio, install the EZ Link app, and troubleshoot common issues. Includes warranty information and FCC compliance details.</p>
	<p><a href="#"><b>eKids Bluetooth Karaoke Microphone with EZ Link Technology (Model: Di-B24EN.EXv1M) - User Guide</b></a></p> <p>User guide for the eKids Bluetooth Karaoke Microphone with EZ Link Technology (Model: Di-B24EN.EXv1M). Learn about setup, charging, Bluetooth connection, EZ Link app usage, controls, warranty, and troubleshooting.</p>
	<p><a href="#"><b>Fon Kepala Wayarles Siri B64 Disney - Manual Pengguna</b></a></p> <p>Manual pengguna untuk fon kepala wayarles eKids Siri B64, menampilkan sambungan Bluetooth, ciri EZ Link, dan reka bentuk bertema Disney. Termasuk maklumat FCC dan ISED.</p>
	<p><a href="#"><b>eKids B64 Series Wireless Headphones with EZ Link User Manual</b></a></p> <p>Comprehensive user manual for the eKids B64 Series Wireless Headphones with EZ Link. Learn about setup, Bluetooth pairing, EZ Link app features, controls, charging, battery information, warranty, and safety guidelines. Supports Disney Princess, Frozen, and Encanto themes.</p>
	<p><a href="#"><b>eKids DG-556 TR-556 Bluetooth MP3 Karaoke with Microphone User Manual</b></a></p> <p>Comprehensive user manual for the eKids DG-556 TR-556 Bluetooth MP3 Karaoke machine. Includes setup, operation for USB, MP3, and Bluetooth modes, voice control, troubleshooting, FCC/IC compliance, and warranty information.</p>

