



[Manuals.plus](#) /

› [Kassioneel](#) /

› Kassioneel Replacement Remote Control User Manual

Kassioneel DX-32L100A11, DX-32L221A12, DX-32L152A11, DX-32L200A12, DX-32L220A12

Kassioneel Replacement Remote Control User Manual

For Dynex DX-32L100A11, DX-32L221A12, DX-32L152A11, DX-32L200A12, DX-32L220A12 LCD LED HDTV TVs

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Kassioneel Replacement Remote Control. This remote is designed as a direct replacement for various Dynex LCD LED HDTV TV models, requiring no programming for immediate use.



Image: The Kassinel Replacement Remote Control, shown held in a hand, highlighting its ergonomic design and button layout.

SETUP

The Kassinel Replacement Remote Control is designed for immediate use without any complex programming. Simply

install the batteries, and it will be ready to operate your compatible Dynex TV.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) AAA alkaline batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: The rear view of the remote control with the battery cover removed, illustrating the two AAA battery slots and polarity indicators. Text overlay indicates "Need 2x AAA batteries (not included)".

Note: This remote control does not require any programming or pairing. It is pre-configured to work with the specified Dynex TV models directly after battery installation.

OPERATING INSTRUCTIONS

Point the remote control directly at the infrared sensor on your Dynex TV. Ensure there are no obstructions between the remote and the TV.

Key Functions





Image: A clear front view of the Kassionel Replacement Remote Control, displaying all its buttons and their labels.

- **Power ():** Turns the TV on or off.
- **INPUT:** Selects the input source (e.g., HDMI, AV).
- **Number Buttons (0-9):** Directly selects channels.
- **MENU:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menu options.
- **ENTER:** Confirms selections in menus.
- **EXIT:** Exits the current menu or screen.
- **INFO*:** Displays program information.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the channel.

- **MUTE:** Mutes or unmutes the TV audio.
- **ASPECT:** Changes the screen aspect ratio.
- **CCD:** Activates Closed Captioning.
- **SLEEP:** Sets the sleep timer.
- **FAVORITE:** Accesses favorite channels.
- **MTS/SAP:** Selects Multi-channel Television Sound/Secondary Audio Program.
- **PICTURE:** Adjusts picture settings.
- **AUDIO:** Adjusts audio settings.
- **Media Control Buttons (Play, Pause, Fast Forward, Rewind, Stop, Next, Previous):** Controls media playback if supported by the TV.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, alcohol, or benzene, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote is not working.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity.
Remote has limited range or intermittent response.	Weak batteries; Obstruction between remote and TV; Remote not pointed directly at TV sensor.	Replace batteries. Remove any objects blocking the line of sight. Point the remote directly at the TV's infrared sensor.
Certain buttons do not function.	Button malfunction; TV model incompatibility for specific advanced functions.	Ensure the remote is compatible with your specific Dynex TV model. If basic functions like power/volume also fail, consider replacing the remote.

SPECIFICATIONS

Feature	Detail
Brand	Kassionel
Compatible TV Models	Dynex DX-32L100A11, DX-32L221A12, DX-32L152A11, DX-32L200A12, DX-32L220A12 LCD LED HDTV TVs

Feature	Detail
Power Supply	2 x AAA Alkaline Batteries (not included)
Dimensions (L x W x H)	6.65 x 1.93 x 0.79 inches (16.9 x 4.9 x 2.0 cm)
Item Weight	2.22 ounces (63 grams)
Color	Black
Special Feature	No programming needed, works right out of the package

SUPPORT

For any questions, problems, or further assistance regarding your Kassionel Replacement Remote Control, please contact the manufacturer or seller directly. Refer to your purchase documentation for specific contact information.