

## MASINGO Burletta C10

# MASINGO Burletta C10 Portable Karaoke Machine User Manual

This manual provides essential information for the setup, operation, and maintenance of your MASINGO Burletta C10 portable karaoke machine.

## WHAT'S IN THE BOX

---

Your MASINGO Burletta C10 package includes the following items:

- Burletta C10 Karaoke Machine
- 1 Wireless Microphone
- 1 Wired Microphone
- USB Charging Cable
- Shoulder Strap
- User Manual

# EVERYONE LOVES BEING A SINGING STAR



Image: The complete contents of the MASINGO Burletta C10 package, laid out neatly.

## SETUP

### Charging the Karaoke Machine

The Burletta C10 is equipped with a Lithium Ion battery. To charge the unit, connect the provided USB Charging Cable to the DC 5V port on the control panel and plug the other end into a compatible USB power adapter (not included). The charging indicator light will illuminate. A full charge typically takes approximately 4 hours and provides up to 2.5 hours of playtime with the LED lights active.

# CONTROL THE FLOW AND CONNECT ON THE GO

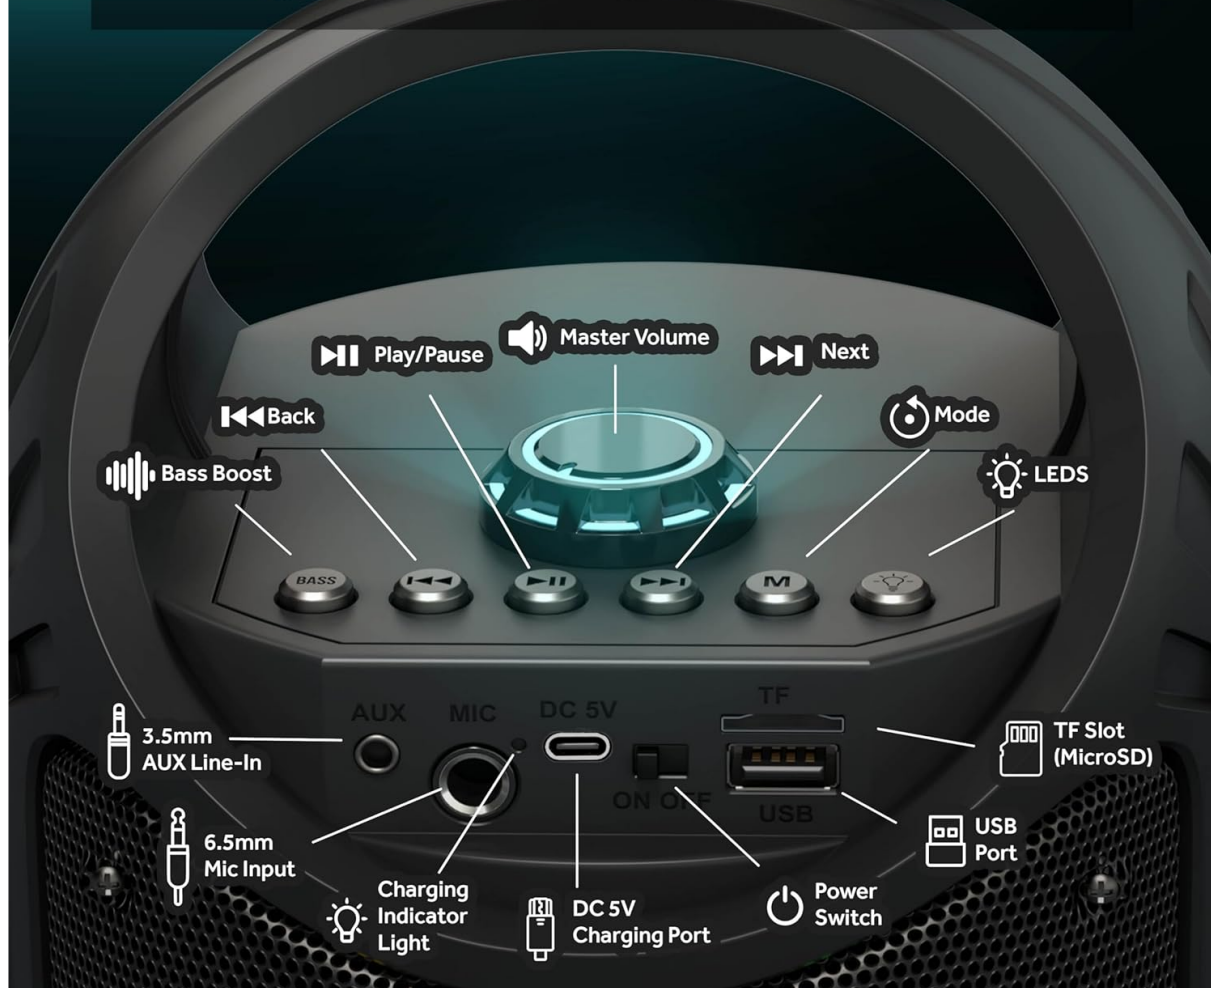 


Image: The top control panel of the karaoke machine, showing various ports and knobs, including the DC 5V charging port.

## Microphone Setup

Both the wireless and wired microphones require batteries to operate. The wireless microphone requires 2 AA batteries (included). To install:

1. Unscrew the base of the wireless microphone.
2. Insert 2 AA batteries, ensuring correct polarity.
3. Screw the base back on securely.
4. Press and hold the power button on the microphone to turn it on.

The wired microphone connects directly to the MIC IN port on the control panel.





Image: The MASINGO Burletta C10 karaoke machine shown with both its wireless and wired microphones.

Video: A detailed guide on setting up the karaoke machine, including Bluetooth connection, mode switching, and microphone usage.

## OPERATING INSTRUCTIONS

---

### Power On/Off

To power on the karaoke machine, rotate the ON/OFF knob located on the control panel. The unit will automatically enter Bluetooth pairing mode.

### Bluetooth Connection

1. Ensure the karaoke machine is powered on and in Bluetooth mode (indicated by a voice prompt).
2. On your smartphone, tablet, or other compatible device, enable Bluetooth.
3. Search for available devices and select "Burletta C10" (or similar device name) to pair.
4. A voice prompt "Connected" will confirm successful pairing.

# BRING KARAOKE FUN ANYWHERE



Shoulder  
Strap for Extra  
Comfort



Lightweight but  
Sturdy



1 Charge -  
Up to 3 Hours of  
Play



Image: A family singing karaoke, with the Burletta C10 speaker and microphones in use, connected to a smartphone.

## Playback Modes

The Burletta C10 supports 6 playback modes. Press the 'Mode' button on the control panel to cycle through them:

- **Bluetooth:** Connect wirelessly to your smart devices.
- **USB:** Play audio files directly from a USB drive.
- **AUX:** Connect external devices via a 3.5mm auxiliary cable.
- **FM Radio:** Tune into your favorite radio stations.
- **Micro-SD:** Play audio files from a Micro-SD card.
- **PA Portable:** Use as a public address system.



Image: The Buletta C10 showcasing its diverse connectivity options for music playback.

### Light Effects

The speaker features a color-shifting LED ring light. Press the 'LED' button on the control panel to cycle through different light modes and patterns.

### Microphone Usage

Adjust the microphone volume using the 'MIC VOL' knob and add an echo effect with the 'MIC ECHO' knob. The system supports two microphones simultaneously for duets (one wireless, one wired).

Video: An introductory video for the Buletta C10, highlighting its dual microphone feature and portability.

## MAINTENANCE

To ensure the longevity and optimal performance of your karaoke machine:

- Clean the unit with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Keep the machine away from water and excessive moisture.
- Store in a cool, dry place when not in use.
- For extended storage, remove batteries from the microphones to prevent leakage.



## TROUBLESHOOTING

- **No Sound/Low Volume:** Check the master volume knob on the unit, the microphone volume knob, and the volume on your connected device.
- **Microphone Not Working:** Ensure batteries are correctly inserted and charged in the wireless mic. Verify the microphone is powered on. For the wired mic, ensure it is securely plugged into the MIC IN port.
- **Echo Effect Cannot Be Turned Off:** While the MIC ECHO knob allows adjustment, some inherent echo may be present due to the karaoke machine's design.
- **Charging Issues:** Confirm the USB charging cable is securely connected to both the unit's DC 5V port and the power source.


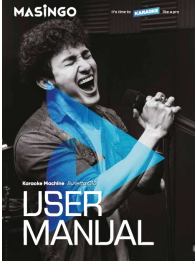 

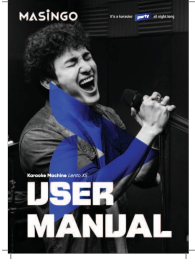 
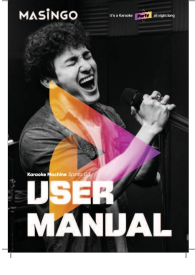 
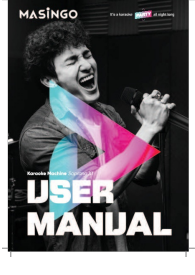 
## SPECIFICATIONS

Feature	Detail
Brand	MASINGO
Model Number	C10
Product Dimensions	12.52 x 7.76 x 8.11 inches
Item Weight	2.7 Pounds
Power Source	Battery Powered (Lithium Ion)
Output Wattage	10 Watts
Speaker Count	1
Connectivity Technology	Bluetooth
Connector Types	Aux, TF, USB
Microphone Batteries	1 AA batteries required (included)
Material	Plastic

## WARRANTY & SUPPORT

Your MASINGO Burletta C10 Karaoke Machine comes with a 60-day warranty. For any questions, troubleshooting assistance, or warranty claims, please refer to the contact information provided in your user manual or visit the official MASINGO website.

### Related Documents - Burletta C10

	<p><a href="#">Masingo Ostinato M7 Karaoke Machine User Manual</a></p> <p>Comprehensive user manual for the Masingo Ostinato M7 Karaoke Machine, covering setup, features, operation, maintenance, and troubleshooting for a superior karaoke experience.</p>
	<p><a href="#">Masingo Burletta C10 Karaoke Machine User Manual</a></p> <p>Comprehensive user manual for the Masingo Burletta C10 Karaoke Machine, covering setup, features, playback modes, maintenance, troubleshooting, and FCC compliance.</p>
	<p><a href="#">Masingo Allegro X8 Karaoke Machine User Manual</a></p> <p>Comprehensive user manual for the Masingo Allegro X8 Karaoke Machine, covering setup, features, operation, maintenance, and troubleshooting. Learn how to connect devices, use playback modes, and optimize your karaoke experience.</p>
	<p><a href="#">Masingo Lento X5 Karaoke Machine User Manual</a></p> <p>Comprehensive user manual for the Masingo Lento X5 Karaoke Machine. Learn about setup, operation, features like Bluetooth connectivity, wireless microphones, PA system functionality, LED lights, and troubleshooting for an optimal party experience.</p>
	<p><a href="#">MASINGO Spinto G3 Karaoke Machine User Manual - Features, Setup, and Troubleshooting</a></p> <p>Comprehensive user manual for the MASINGO Spinto G3 Karaoke Machine. Learn about its features, how to set it up, connect devices via Bluetooth, AUX, USB, SD, use the microphones, maintenance, and troubleshooting tips.</p>
	<p><a href="#">Masingo Soprano X1 Karaoke Machine User Manual</a></p> <p>User manual for the Masingo Soprano X1 Karaoke Machine, covering setup, features, operation, maintenance, and troubleshooting for this portable PA system with wireless microphones.</p>