

AIDITIYMI AXD7739

AIDITIYMI AXD7739 Replacement Remote Control User Manual

For Pioneer AV Receivers

INTRODUCTION

This manual provides comprehensive instructions for the AIDITIYMI AXD7739 replacement remote control. Designed to function seamlessly with various Pioneer AV Receiver models, this remote requires no complex programming or pairing. Simply install the batteries, and it is ready for immediate use.

SETUP: BATTERY INSTALLATION

The AIDITIYMI AXD7739 remote control operates on two AAA alkaline batteries. No programming or pairing is required for this replacement remote. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off to open the compartment.
3. Insert two new 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, ready for battery insertion.



Image: Back of the remote control with the battery compartment securely closed after battery installation.

Once batteries are installed, the remote control is ready for immediate use with your compatible Pioneer AV Receiver.

OPERATING INSTRUCTIONS

The AIDITIYMI AXD7739 remote control is designed to replicate the functionality of your original Pioneer AV Receiver remote. Point the remote directly at your AV receiver and press the desired button to control its functions.



Image: Front view of the remote control, displaying all functional buttons.

Key Functions Overview:

- **STANDBY/ON:** Powers the AV receiver on or off.
- **SLEEP:** Activates the sleep timer function.
- **SOURCE / INPUT:** Selects the input source (e.g., BD, HDMI, CBL, SAT, ROKU, MHL, USB, iPod, CD, BT, TUNER, TV, NET).
- **VOLUME +/-:** Adjusts the master volume level.
- **MUTE:** Toggles sound muting on and off.
- **CH +/-:** Navigates through channels or tracks.
- **Navigation Pad (ENTER, Arrow Keys):** Used for menu navigation and selection.
- **HOME MENU:** Accesses the main menu of the AV receiver.
- **RETURN:** Goes back to the previous screen or menu.
- **STATUS / AUDIO P / VIDEO P:** Accesses various status, audio parameter, or video parameter menus.
- **Playback Controls (PLAY, PAUSE, STOP, SKIP, REWIND, FAST FORWARD):** Controls media playback.
- **LISTENING MODE (AUTO, SURR, ADV):** Selects different audio listening modes.
- **POP UP / SUBTITLE / DISP / AUDIO / CLR / SHIFT:** Provides access to additional specific functions depending on the receiver's capabilities.

For detailed information on specific functions, refer to your Pioneer AV Receiver's original user manual.

COMPATIBILITY

This AIDITIYMI AXD7739 replacement remote control is compatible with the following Pioneer AV Receiver models:

- VSX-830-K
- VSX-45
- VSX-830
- VSX-90
- VSX-95
- VSX-1130-K

Ensure your AV receiver model is listed above for proper functionality.

TROUBLESHOOTING

If your remote control is not functioning as expected, please refer to the following troubleshooting steps:

- **Remote Not Responding:**
 - Check the batteries. Ensure they are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with new 1.5V AAA alkaline batteries. Weak or dead batteries are a common cause of remote control issues.
 - Ensure there is a clear line of sight between the remote control and the infrared (IR) sensor on your Pioneer AV Receiver. Obstructions can block the signal.
 - Verify that your AV receiver is powered on.
- **Specific Functions Not Working:**
 - Confirm that your Pioneer AV Receiver model is listed in the compatibility section of this manual. This remote

is a replacement for specific models.

- Some advanced functions may require specific settings on your AV receiver. Consult your receiver's original user manual for detailed operation.

If issues persist after following these steps, contact customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	AIDITIYMI
Model Name	AXD7739
Connectivity Technology	Infrared (IR)
Number of Batteries Required	2 AAA batteries
Battery Type	Alkaline
Maximum Range	32 Feet (approximately 10 meters)
Button Quantity	55
Compatible Devices	Pioneer Audio Video Receivers

WARRANTY AND SUPPORT

This AIDITIYMI AXD7739 replacement remote control comes with a**1-Year Warranty** from the manufacturer.

For warranty claims, technical assistance, or any questions regarding the operation of your remote control, please refer to the contact information provided by your retailer or the AIDITIYMI official support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question