

[Manuals.plus](#) /

› [Galanz](#) /

› Galanz Oil Free Electric Digital Air Fryer User Manual

Galanz GLAFX606S215

Galanz Oil Free Electric Digital Air Fryer User Manual

Model: GLAFX606S215

INTRODUCTION

Thank you for purchasing the Galanz Oil Free Electric Digital Air Fryer. This appliance is designed to provide a healthier alternative to traditional deep frying, allowing you to enjoy crispy, delicious food with significantly less oil. With its intuitive touch control panel and 8 pre-programmed settings, cooking your favorite meals has never been easier or more convenient. Please read this manual thoroughly before first use to ensure safe and optimal operation.

IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the air fryer.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

PARTS AND FEATURES

Familiarize yourself with the components of your Galanz Air Fryer:

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Digital touch screen with preset options, temperature, and time controls.
- **Fry Basket:** Removable, non-stick basket for holding food during cooking.
- **Basket Handle:** For safely inserting and removing the fry basket.
- **Air Outlet Vent:** Located at the back of the unit for air circulation.



Figure 1: Galanz Air Fryer with its non-stick fry basket containing chicken wings.



Figure 2: Front view of the Galanz Air Fryer, showcasing its sleek design.

SETUP

1. **Unpacking:** Remove all packaging materials, stickers, and labels from the appliance.
2. **Cleaning:** Wash the fry basket and any removable parts in hot, soapy water. Wipe the inside and outside of the main unit with a damp cloth. Ensure all parts are completely dry before use.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation. Ensure there is at least 6 inches of space around the unit.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.



Figure 3: The compact dimensions of the air fryer (12" W x 12.5" H x 15.75" D) make it suitable for various kitchen countertops.

OPERATING INSTRUCTIONS

General Operation

1. Place food into the fry basket. Do not overfill the basket to ensure even cooking.
2. Slide the fry basket back into the main unit until it clicks into place.
3. Press the Power button to turn on the unit.
4. Select a preset cooking function or manually set the temperature and time using the touch control panel.
5. Press the Start button to begin cooking.
6. The air fryer features a "Shake Alert" function that will remind you to shake or flip food for optimal crispiness.
7. Once cooking is complete, the unit will automatically shut off. Carefully remove the basket and transfer food.



360° Heat Circulation

Easy and fast cooking for delicious meals in minutes



Touch Control

Digital display & touch control



Intelligent Shake Reminder

SHAKE TIMER reminds you when it is time to shake or flip the food



Figure 4: The air fryer utilizes 360° heat circulation for efficient cooking, features a digital touch control panel, and includes an intelligent shake reminder.

One Touch Operation With 8 Presets

Multiple Cooking Settings Plus Reheat and Keep Warm



Figure 5: The touch control panel offers 8 pre-programmed settings for common foods like fries, steak, vegetables, chicken, bake, fish, frozen food, and pizza, along with reheat and keep warm functions.

Preset Cooking Functions

The Galanz Air Fryer comes with 8 convenient auto-preset settings:

Preset	Recommended Temperature	Recommended Time
French Fries	360°F	25 minutes
Steak	400°F	10 minutes
Vegetables	360°F	8 minutes
Chicken	375°F	30 minutes
Bake	350°F	8 minutes

Preset	Recommended Temperature	Recommended Time
Fish	375°F	10 minutes
Frozen Food	400°F	8 minutes
Pizza	400°F	8 minutes

Note: These are recommended settings. Adjust time and temperature as needed based on food quantity and desired crispiness.



Figure 6: The Galanz Digital Air Fryer significantly reduces fat compared to traditional deep-frying, offering a healthier cooking method.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your air fryer.

- **Before Cleaning:** Always unplug the air fryer and allow it to cool completely before cleaning.
- **Fry Basket:** The removable 5.8QT air fry basket is non-stick and dishwasher safe. For manual cleaning, wash with hot water, dish soap, and a non-abrasive sponge.
- **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
- **Interior:** Clean the interior of the appliance with a non-abrasive sponge or cloth.
- **Storage:** Store the air fryer in a dry place when not in use.

Easy To Clean

The non-stick basket makes clean-up fast and easy



Figure 7: The non-stick basket is designed for easy cleaning, either by hand or in a dishwasher.

TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; Basket not properly inserted.	Ensure the power cord is securely plugged into a grounded outlet. Push the basket firmly until it clicks into place.
Food is not cooked evenly.	Basket is overcrowded; Food not shaken/flipped.	Cook food in smaller batches. Utilize the "Shake Alert" and shake/flip food halfway through cooking.

Problem	Possible Cause	Solution
White smoke coming from the appliance.	Grease residue from previous use; Fatty ingredients.	Clean the basket and interior thoroughly after each use. For fatty foods, consider draining excess fat during cooking.
Food is not crispy.	Too much moisture; Not enough oil (if desired); Incorrect temperature/time.	Pat food dry before air frying. Lightly toss with oil for extra crispiness. Adjust temperature and time as needed.

If the problem persists after trying these solutions, please contact Galanz customer support.

SPECIFICATIONS

Model Name: Oil Free Electric Digital Air Fryer with Touch Control Panel
Model Number: GLAFX606S215
Brand: Galanz
Capacity: 5.8 Quarts
Product Dimensions: 15.75"D x 12.5"W x 12"H
Item Weight: 13 Pounds
Color: Stainless Steel
Material: Stainless Steel (Inner & Outer)
Wattage: 1450 Watts
Voltage: 120 Volts
Control Method: Touch Control Panel
Special Features: Manual, Programmable, Non-stick Coating, Dishwasher Safe Basket
UPC: 190873008187

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official Galanz website or contact their customer service department. Keep your purchase receipt for warranty claims.
Galanz Customer Service: Refer to your product packaging or the official Galanz website for the most current contact information.
You can also visit the [Galanz Store on Amazon](#) for more product details and support resources.