

[Manuals.plus](#) /

› [Magic Bullet](#) /

› Magic Bullet Kitchen Express Food Processor Bowl Instruction Manual

Magic Bullet AMBKBC28

Magic Bullet Kitchen Express Food Processor Bowl Instruction Manual

Model: AMBKBC28

INTRODUCTION

This manual provides essential information for the proper use, care, and maintenance of your Magic Bullet Kitchen Express Food Processor Bowl. This 3.5 cup work bowl is designed to chop, mix, slice, and shred ingredients, enhancing the versatility of your Magic Bullet Kitchen Express system. It comes complete with a lid featuring a feed chute and a food pusher to guide ingredients.

PRODUCT COMPONENTS

The Magic Bullet Kitchen Express Food Processor Bowl package includes the following components:

- One (1) 3.5 cup work bowl
- One (1) lid with a feed chute
- One (1) food pusher

Note: The stacked chopping blade is not included with this product and must be purchased separately or used from your existing Magic Bullet Kitchen Express unit.



Image: The 3.5 cup work bowl, showing clear measurement markings for ounces and cups, and the central shaft for blade attachment. The lid and food pusher are not shown in this view.



magic bullet Kitchen Express®

Image: The 3.5 cup work bowl positioned next to the Magic Bullet Kitchen Express motor base, illustrating its compatibility with the main appliance. A graphic indicates "100% compatible."

SETUP

Before first use, wash all components of the food processor bowl with warm, soapy water. Rinse thoroughly and dry.

1. Ensure your Magic Bullet Kitchen Express motor base is unplugged from the power outlet.
2. Place the desired blade (not included) onto the central shaft inside the work bowl.
3. Carefully place the work bowl onto the motor base, aligning the tabs on the bowl with the slots on the base. Twist clockwise until it locks securely into place.
4. Place the lid onto the work bowl, ensuring it is properly aligned and locked.
5. Insert the food pusher into the feed chute if you plan to add ingredients during operation.

Your Magic Bullet Kitchen Express Food Processor Bowl is now ready for use.

OPERATING INSTRUCTIONS

The 3.5 cup work bowl is designed for various food preparation tasks. Always ensure the unit is properly

assembled before operation.

General Operation:

1. Prepare ingredients by cutting them into appropriate sizes to fit through the feed chute or into the bowl.
2. Place the ingredients into the work bowl. For chopping or mixing, ensure the blade is attached. For slicing or shredding, ensure the appropriate disc (not included) is in place.
3. Securely attach the lid to the work bowl.
4. Plug the Magic Bullet Kitchen Express motor base into a power outlet.
5. Turn on the unit or press the pulse button as per your Magic Bullet Kitchen Express motor base instructions.
6. For continuous processing, use the 'ON' setting. For controlled chopping or pulsing, use the 'PULSE' setting.
7. If adding ingredients during operation, use the food pusher to guide them through the feed chute. Never use your fingers or other utensils.
8. Once processing is complete, turn off and unplug the unit before disassembling.

Tips for Best Results:

- Do not overfill the bowl. Adhere to the 3.5 cup capacity.
- For even chopping, process similar-sized pieces together.
- Use the pulse function for coarse chopping or to avoid over-processing.

MAINTENANCE AND CARE

Proper cleaning and maintenance will extend the life of your food processor bowl.

- **Cleaning:** All components of the food processor bowl (work bowl, lid, food pusher) should be hand washed with warm, soapy water immediately after each use. Rinse thoroughly to remove all food residue.
- **Drying:** Dry all parts completely before storing.
- **Storage:** Store the bowl and its components in a clean, dry place.
- **Important:** This food processor bowl is **NOT** dishwasher safe. Placing it in a dishwasher may cause cracking or damage to the material.

TROUBLESHOOTING

This section addresses common inquiries and issues related to the Magic Bullet Kitchen Express Food Processor Bowl.

- **Issue:** The bowl appears cracked or damaged.
Solution: Ensure that the bowl is only hand washed. Exposure to high temperatures in a dishwasher can cause material degradation and cracking. If the bowl is cracked, it should be replaced to ensure safe operation.
- **Issue:** The unit does not process ingredients effectively.
Solution: Verify that the correct blade (not included with this bowl) is properly installed and secured on the central shaft. Also, ensure the bowl and lid are correctly locked onto the motor base. Check that the motor base is plugged in and functioning correctly.

- **Issue:** Missing chopping blade.

Solution: This product is a replacement bowl and does not include the stacked chopping blade. The blade is part of the original Magic Bullet Kitchen Express unit. Please use the blade from your existing unit or purchase a replacement blade separately if needed.

SPECIFICATIONS

Brand	Magic Bullet
Model Name	Magic Bullet Kitchen Express Food Processor Bowl
Model Number	AMBKBC28
ASIN	B09HY6PFLM
UPC	818049024709
Color	Black
Bowl Capacity	3.5 Cups
Product Dimensions	6.01"D x 6.01"W x 9.01"H
Item Weight	1.17 pounds
Material	Plastic
Care Instructions	Hand Wash

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your original Magic Bullet Kitchen Express unit or visit the official Magic Bullet website. You may also contact Magic Bullet customer service directly for assistance with this replacement part.
Official Magic Bullet Store: [Visit Store](#)