

[manuals.plus](#) /

› [Donner](#) /

› [Donner DEK-510 54-Key Electronic Keyboard User Manual](#)

**Donner DEK-510**

# Donner DEK-510 54-Key Electronic Keyboard User Manual

Model: DEK-510

## 1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Donner DEK-510 54-Key Electronic Keyboard. Please read this manual thoroughly before using the instrument to ensure proper function and to maximize your musical experience.

## 2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Donner DEK-510 Electronic Keyboard
- Music Stand
- Power Adapter
- Microphone
- User Manual (this document)

# DEK-510

## 54-KEY ELECTRONIC KEYBOARD

Let music decorate your life.



Figure 2.1: Included package contents.

### 3. SETUP

Follow these steps to set up your Donner DEK-510 keyboard:

- 1. Power Connection:** Connect the included power adapter to the DC 9V input jack on the rear panel of the keyboard and plug it into a standard wall outlet. Alternatively, for portable use, insert six (6) D-type 1.5V batteries into the battery compartment on the underside of the keyboard.
- 2. Music Stand Installation:** Insert the music stand into the designated slot at the top rear of the keyboard.
- 3. Microphone Connection:** Plug the microphone into the 'MIC' input jack on the rear panel.
- 4. Headphones/Sustain Pedal (Optional):** If desired, connect headphones to the 'PHONES' jack or a sustain pedal to the 'PEDAL' jack on the rear panel.
- 5. Power On:** Press the power button located on the left side of the control panel to turn on the keyboard.



Figure 3.1: The Donner DEK-510 keyboard with accessories.

## 4. OPERATING CONTROLS

---

The control panel of the DEK-510 keyboard features various buttons and a large LED screen for easy navigation and function selection.

- **Power Button:** Turns the keyboard on or off.
- **Main Volume Control:** Adjusts the overall output volume of the keyboard.
- **ACMP Volume Control:** Adjusts the volume of the accompaniment.
- **Voice Buttons:** Selects from 500 different instrument tones.
- **Style Buttons:** Selects from 300 different rhythm styles.
- **Numeric Keypad:** Used to input specific voice or style numbers.
- **LED Screen:** Displays current settings, selected voice/style, and teaching mode information.
- **Record/Playback Buttons:** Initiates recording and plays back recorded performances.
- **MP3 Control:** Manages MP3 playback from a USB drive.

# 3 SMART TEACHING MODES

A professional piano teacher for beginners.



Figure 4.1: Overview of the keyboard's control panel.

## 5. KEY FUNCTIONS

### 5.1 Voice and Style Selection

The DEK-510 offers 500 tones (voices) and 300 rhythms (styles) to enhance your playing. Refer to the labels on the keyboard's panel for corresponding numeric codes.

- Press the 'VOICE' button, then use the numeric keypad to enter the desired voice code.
- Press the 'STYLE' button, then use the numeric keypad to enter the desired rhythm style code.

### 5.2 Recording and Playback

The keyboard allows you to record your performances and play them back.

1. To start recording, press the 'RECORD' button. The LED screen will indicate that recording is active.
2. Play your desired piece.
3. To stop recording, press the 'RECORD' button again or the 'PLAYBACK' button.

4. To play back your recorded performance, press the 'PLAYBACK' button.

### 5.3 MP3 Playback

You can play MP3 files directly from a USB flash drive.

1. Connect a USB flash drive containing MP3 files to the USB port on the back of the keyboard.
2. Use the 'MP3 CONTROL' buttons (Play/Pause, Previous, Next) to navigate and play your music.
3. Adjust the volume of MP3 playback using the dedicated volume controls.

### 5.4 Teaching Modes

The DEK-510 features three teaching modes designed for beginners, along with access to online courses via the Donner Music App.

- Utilize the 'TEACHING' buttons on the control panel to select between the available modes.
- Download the Donner Music App from your device's app store for exclusive online piano teaching courses.

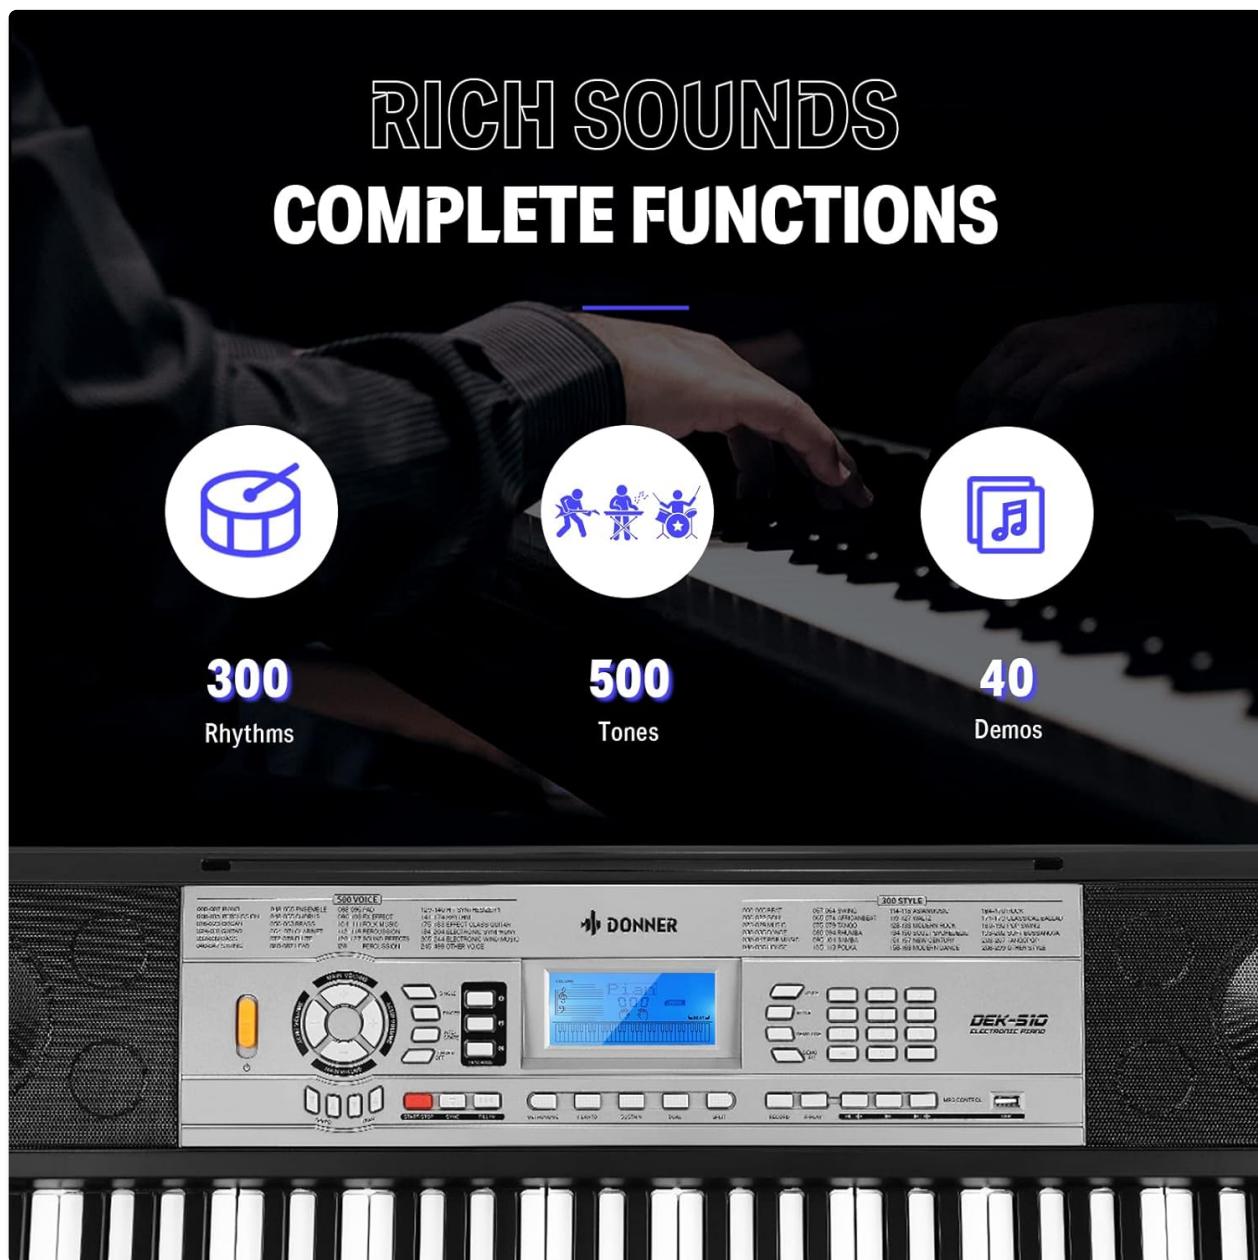


Figure 5.1: The keyboard's smart teaching modes.

## 5.5 Other Features

The keyboard includes additional functions for creative expression:

- **Vibrato:** Adds a pulsating effect to the sound.
- **Sustain:** Prolongs the sound of notes.
- **Transpose:** Shifts the pitch of the keyboard up or down.
- **Auto Chord:** Generates chords automatically based on single-finger input.
- **Dual Voice:** Layers two different instrument voices simultaneously.
- **Split Keyboard:** Divides the keyboard into two sections, each with a different voice.

## 6. CONNECTIVITY

---

The rear panel of the DEK-510 provides various ports for external connections:

- **USB MIDI:** Connects to a computer or tablet for MIDI data transfer, allowing use with teaching apps or music editing software.
- **PEDAL:** Input for an external sustain pedal (3.5mm jack).
- **AUX OUT:** Audio output for connecting to external speakers or amplifiers.
- **AUX IN:** Audio input for connecting external audio devices (e.g., MP3 player, smartphone).
- **MIC:** Input for the included microphone.
- **PHONES:** Output for headphones, allowing for private practice.
- **DC 9V:** Power adapter input.
- **USB Port:** For connecting a USB flash drive for MP3 playback.

# SUPPORT MULTIPLE DEVICES

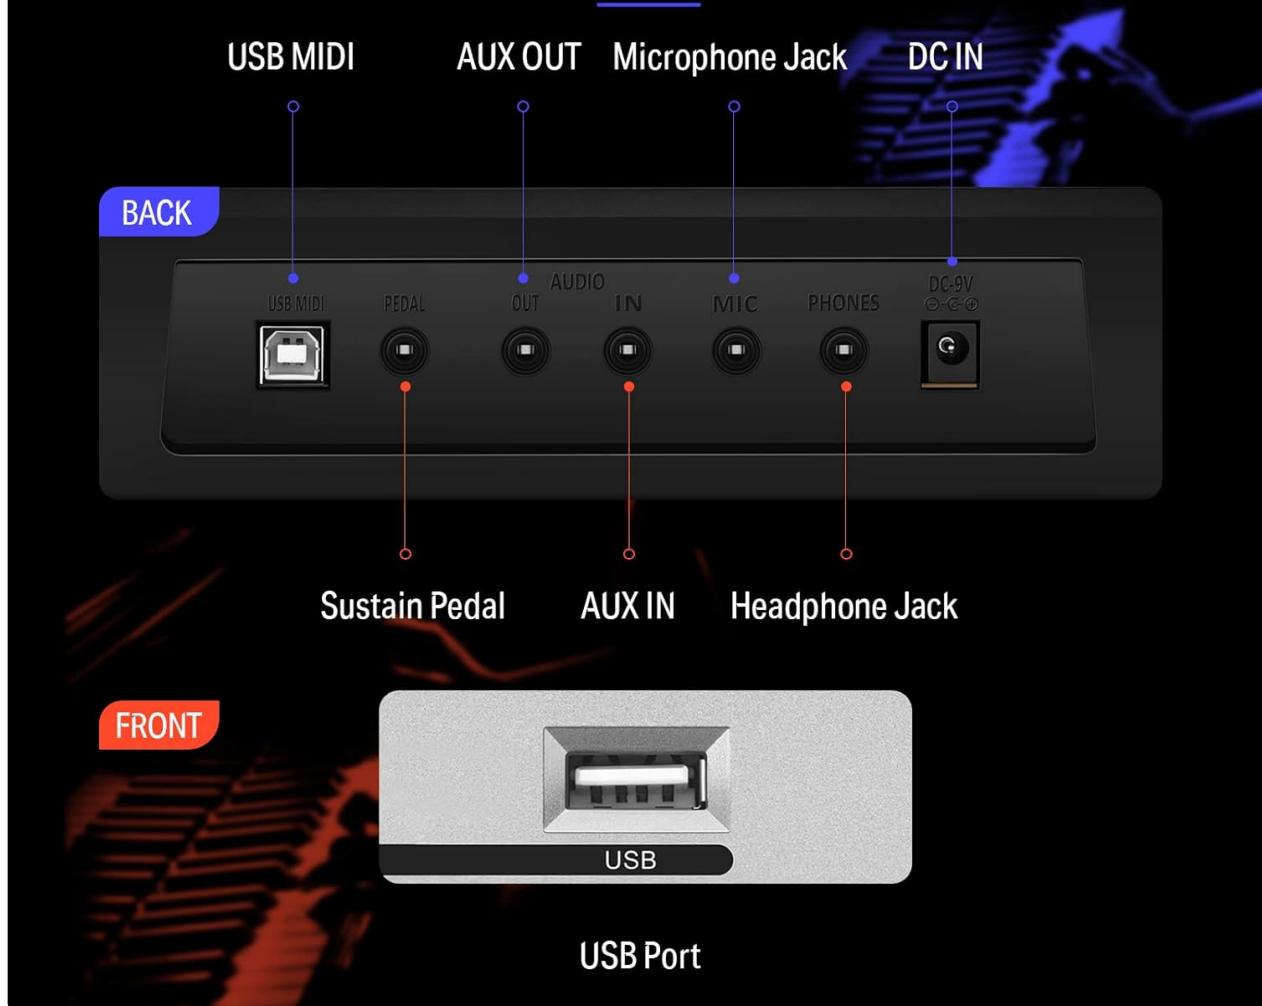


Figure 6.1: Rear panel connectivity options.

# CONNECT WITH MICROPHONE

Enjoy your music



Figure 6.2: Using the microphone with the keyboard.

## 7. POWER SUPPLY

The Donner DEK-510 keyboard offers flexible power options:

- **AC Power:** Use the provided AC power adapter for continuous operation.
- **Battery Power:** For portability, the keyboard can be powered by six (6) D-type 1.5V batteries (not included). This allows for playing in locations without access to a power outlet.

## 8. MAINTENANCE

To ensure the longevity and optimal performance of your keyboard, follow these maintenance guidelines:

- **Cleaning:** Wipe the keyboard surface with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Avoid dropping the instrument or subjecting it to strong impacts.

- **Power Off:** Always turn off the keyboard when not in use to conserve power and prevent accidental operation.

## 9. TROUBLESHOOTING

If you encounter any issues with your DEK-510 keyboard, refer to the following common solutions:

- **No Power:** Ensure the power adapter is securely connected to both the keyboard and a working power outlet. If using batteries, check if they are correctly inserted and have sufficient charge.
- **No Sound:** Check the main volume level. Ensure headphones are not plugged in if you intend to use the built-in speakers. Verify that the correct instrument voice is selected.
- **Distorted Sound:** Lower the volume. Check for loose connections if external speakers are used.
- **Keys Not Responding:** Ensure the keyboard is powered on. If specific keys are unresponsive, contact customer support.

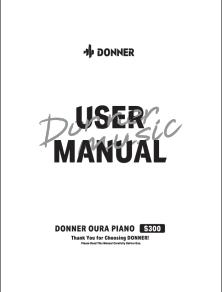
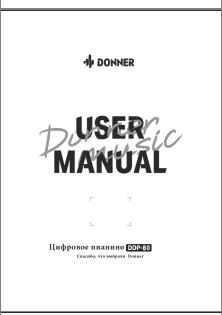
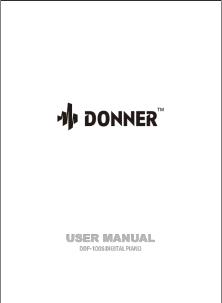
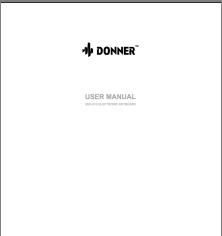
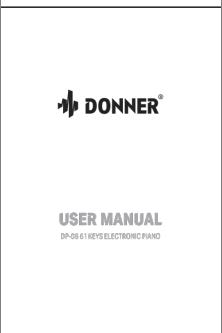
For more complex issues, please consult the official Donner support resources.

## 10. SPECIFICATIONS

Feature	Specification
Brand	Donner
Model Number	DEK-510
Number of Keys	54
Dimensions (L x W x H)	33.19 x 13.39 x 4.09 inches
Item Weight	7.7 pounds (3.5 Kilograms)
Connectivity Technology	USB
Power Source	Electric (AC Adapter) / Battery (6 x D-type 1.5V)
Hardware Interface	3.5mm Audio, Headphone, USB
Special Feature	Portable

## 11. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the official Donner website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

	<p><a href="#"><u>Donner OURA Piano S300 User Manual: Setup, Operation, and Maintenance</u></a></p> <p>Explore the Donner OURA Piano S300 digital piano with this comprehensive user manual. Learn about its 88-key graded hammer keyboard, Bluetooth/MIDI features, setup, safe operation, and maintenance. Ideal for musicians seeking detailed guidance on their Donner digital piano.</p>
	<p><a href="#"><u>Donner DDP-80 Digital Piano User Manual</u></a></p> <p>Comprehensive user manual for the Donner DDP-80 digital piano, covering installation, features, operation, maintenance, and safety precautions. Includes product contents and technical specifications.</p>
	<p><a href="#"><u>Donner STARRYKEY25 MIDI Keyboard User Manual</u></a></p> <p>Comprehensive user manual for the Donner STARRYKEY25 MIDI Keyboard, detailing its features, operation, specifications, and troubleshooting. Learn how to connect and use this 25-key velocity-sensitive MIDI controller with your computer or tablet for music creation.</p>
	<p><a href="#"><u>Donner DDP-100S Digital Piano User Manual</u></a></p> <p>Comprehensive user manual for the Donner DDP-100S Digital Piano, detailing setup, product parameters, features, assembly, voice and rhythm lists, demo songs, and important safety information.</p>
	<p><a href="#"><u>Donner DEK-510 Electronic Keyboard User Manual</u></a></p> <p>User manual for the Donner DEK-510 Electronic Keyboard, providing detailed instructions on setup, operation, features, specifications, maintenance, and a comprehensive list of tones and rhythms.</p>
	<p><a href="#"><u>Donner DP-06 61 Keys Electronic Piano User Manual   Features &amp; Operation</u></a></p> <p>Comprehensive user manual for the Donner DP-06 61 Keys Electronic Piano. Learn about its functions, connectivity, demo songs, tones, rhythms, and safety information. Get the most out of your digital piano.</p>