

HOMCOM 800-085V900531

HOMCOM 21L Mini Oven 1400W - Model 800-085V900531 Instruction Manual

1. INTRODUCTION

Thank you for purchasing the HOMCOM 21L Mini Oven. This compact and elegant appliance is designed for versatile cooking in your kitchen or studio. With a powerful 1400W heating element, a thermostat up to 230°C, and a 60-minute timer, it is ideal for preparing various dishes including appetizers, meats, fish, pizzas, gratins, and desserts. Please read this manual carefully before use to ensure safe and efficient operation.



Image 1.1: The HOMCOM 21L Mini Oven, a compact appliance suitable for various cooking tasks.

2. SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and other flammable materials.
- Do not store any materials other than manufacturer's recommended accessories in this oven when not in use.
- Do not place sealed containers in the oven.

3. PRODUCT OVERVIEW AND COMPONENTS

The HOMCOM 21L Mini Oven (Model 800-085V900531) is a versatile kitchen appliance with a 1400W power rating. It features a compact design and comes with essential accessories for various cooking needs.

Key Features:

- **Compact 21L Capacity:** Ideal for small kitchens, apartments, or studios.
- **1400W Power:** Ensures efficient and quick cooking.
- **Adjustable Thermostat:** Temperature range from 100°C to 230°C.
- **60-Minute Timer:** With an automatic shut-off function for precise cooking.
- **3 Cooking Modes:** Upper grill, traditional heat, and lower grill.
- **Durable Construction:** Made with stainless steel handle, tempered glass, and metal.
- **Certified Safety:** Meets CE-EMC, LVD, RoHS, Erp, LFGB standards.

Included Accessories:

- **Reversible Grill Rack:** Positionable at 3 different heights.
- **Baking Tray:** For various cooking tasks.
- **Sliding Crumb Tray:** For easy cleaning.
- **Handle/Tongs:** For safely removing hot accessories.

4 ACCESSOIRES



Image 3.1: The mini oven comes with a grill rack, baking tray, crumb tray, and a handle for safe use.

21L GRAND CAPACITÉ

🍞 4 tranches de pain grillé | 🍕 Pizza 10"



Image 3.2: The 21L capacity of the oven is suitable for items like 4 slices of toast or a 10-inch pizza.

GRILLE REGLABLE SUR 3 POSITIONS



Image 3.3: The grill rack can be adjusted to three different heights within the oven cavity.

4. SETUP

Unpacking and Placement:

1. Carefully remove the oven and all accessories from the packaging.
2. Place the oven on a stable, heat-resistant, and level surface. Ensure there is adequate ventilation around the appliance (at least 10-15 cm clearance on all sides).
3. Do not place the oven near flammable materials such as curtains or walls.

Initial Cleaning:

1. Before first use, wipe the interior and exterior of the oven with a damp cloth.
2. Wash all removable accessories (grill rack, baking tray, crumb tray) in warm, soapy water. Rinse thoroughly and dry.
3. Insert the crumb tray at the bottom of the oven. Position the grill rack or baking tray as needed for your cooking.

First Use (Burn-in):

It is recommended to run the oven empty for about 15 minutes on the highest temperature setting (230°C)

with the 'Traditional Heat' mode selected. This will burn off any manufacturing residues and odors. A slight smoke or odor is normal during this process. Ensure the area is well-ventilated.



Image 4.1: The physical dimensions of the oven are 46 cm (length) x 38.5 cm (depth) x 29 cm (height).

5. OPERATION

The HOMCOM Mini Oven features three control knobs for temperature, cooking mode, and timer settings.

Control Panel:

FACILE D'UTILISATION

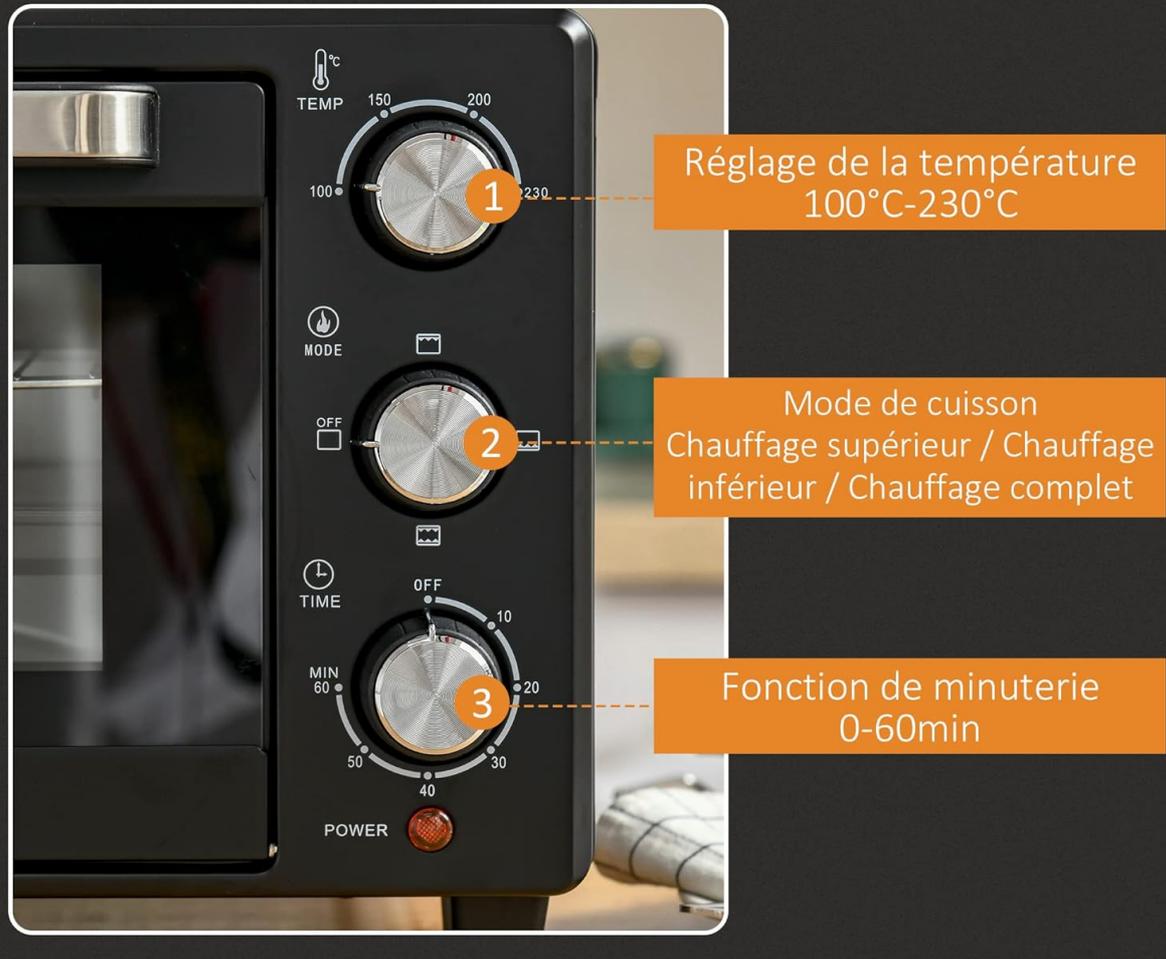


Image 5.1: The control panel features three rotary knobs for setting temperature, cooking mode, and timer.

Setting the Oven:

- 1. Temperature Control (Top Knob):** Rotate the top knob to select the desired temperature from 100°C to 230°C.
- 2. Cooking Mode Selector (Middle Knob):** Rotate the middle knob to choose one of the three cooking modes:
 - **Upper Grill:** Activates the top heating elements, ideal for grilling, browning, or gratins.
 - **Traditional Heat:** Activates both upper and lower heating elements for conventional baking and roasting.
 - **Lower Grill:** Activates the bottom heating elements, suitable for delicate baking or warming.
- 3. Timer Control (Bottom Knob):** Rotate the bottom knob to set the cooking time, up to 60 minutes. The oven will automatically turn off when the timer reaches zero, indicated by an audible bell. To turn off the oven manually before the timer finishes, turn the timer knob to the "OFF" position.

Cooking Process:

1. Place your food on the appropriate accessory (grill rack or baking tray) and insert it into the oven. Adjust the rack height as needed.
2. Close the oven door securely.

3. Set the desired temperature, cooking mode, and timer. The power indicator light will illuminate.
4. When cooking is complete, the timer will ring, and the oven will turn off. Carefully remove the food using oven mitts and the provided handle/tongs.

Your browser does not support the video tag.

Video 5.1: This video demonstrates the basic operation of the HOMCOM Mini Oven, including setting temperature, mode, and timer, and shows the oven in use for baking.

6. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your HOMCOM Mini Oven.

Before Cleaning:

- Always unplug the oven from the power outlet and allow it to cool completely before cleaning.

Cleaning the Interior:

- Wipe the interior walls with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating.
- For stubborn stains, a paste of baking soda and water can be applied, left for a few minutes, then wiped clean.
- The removable crumb tray should be emptied and cleaned regularly.



Image 6.1: The removable crumb tray slides out for easy cleaning, preventing buildup of food particles.

Cleaning the Exterior:

- Wipe the exterior surfaces with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Clean the glass door with a glass cleaner or a damp cloth.

Cleaning Accessories:

- The grill rack, baking tray, and crumb tray are dishwasher-safe for convenient cleaning.

7. TROUBLESHOOTING

If you encounter any issues with your HOMCOM Mini Oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure the oven is properly plugged into a working outlet. Set the timer knob to the desired cooking time.

Problem	Possible Cause	Solution
Oven not heating properly.	Incorrect temperature or mode setting; heating elements faulty.	Verify temperature and cooking mode settings. If the issue persists, contact customer support.
Food is not cooking evenly.	Improper rack position; overcrowding the oven.	Adjust the grill rack to a suitable height. Avoid placing too much food in the oven at once. Rotate food halfway through cooking if necessary.
Timer does not work.	Timer knob not rotated past the 10-minute mark initially.	When setting the timer, always turn the knob past the 10-minute mark and then back to the desired time.
Smoke or odor during first use.	Manufacturing residues burning off.	This is normal during the initial burn-in. Ensure good ventilation. If smoke persists after initial use, discontinue use and contact support.

8. SPECIFICATIONS

Specification	Value
Brand	HOMCOM
Model Number	800-085V900531
Color	Black
Dimensions (L x W x H)	46 cm x 38.5 cm x 29 cm
Capacity	21 Liters
Power	1400 Watts
Material	Tempered Glass, Metal
Automatic Shut-off Function	Yes (via timer)
Weight	6 Kilograms

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. If you require technical assistance or have questions regarding your HOMCOM Mini Oven, please contact HOMCOM customer support through their official website or the contact details provided with your product.